


Setting up your LoRa Device

Installation Guide

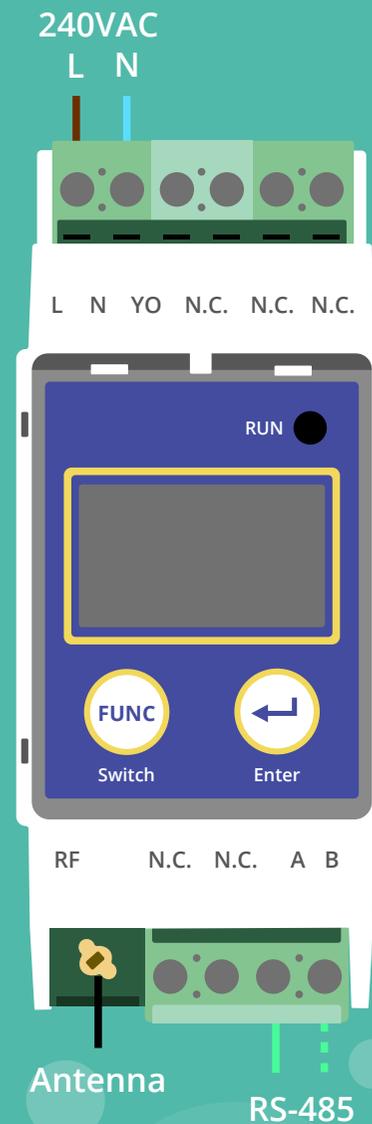

Set to LoRa Radio Mode

All LoRa's must be set to Radio Mode to work with GivEnergy inverters. Using the buttons on the front of **both** LoRa's, one at a time.

1. Hold **FUNC**



2. Tap **FUNC** to highlight **System**



3. Tap **ENTER**



4. Tap **ENTER** until display reads LoRa Mode



5. Tap **FUNC**



6. Tap **FUNC** to highlight **Reboot**



7. Tap **ENTER**



Change Radio Frequency

It is possible that the LoRa's could get interference from other wireless devices. If this is the case, it is possible to change the frequency that the LoRa operates on using the buttons on the front of **both** LoRa's, one at a time.

1. Hold **FUNC**



2. Tap **FUNC** to highlight *Frequency*



3. Tap **ENTER**



4. Tap **FUNC** to select character to change



5. Tap **ENTER** to increase digit



6. Tap **FUNC**



7. Tap **FUNC** to highlight



8. Tap **ENTER**



Change Port Settings

In some cases the port that the LoRa communicates with the Inverter and Battery on may need configuration. Using the buttons on the front of **both** LoRa's one at a time.

1. Hold **FUNC**



2. Tap **FUNC** to highlight **UART**



3. Tap **ENTER**



4. Tap **ENTER** to select baud rate (**9600 bps**)



5. Tap **FUNC**



6. Tap **FUNC** to highlight **reboot**



7. Tap **ENTER**

