

# Single Phase Electric Vehicle Charger Protection Units

SP-EVCP-T(C) SP-EVCP-R(C) SP-EVCP-M(C) SP-EVCP-B(C) SP-EVCP-RB(C)  
IP-EVCP-T(C) IP-EVCP-R(C) IP-EVCP-M(C) IP-EVCP-RB(C)

## Installation Manual

V1.6 Feb 2021



**Contents**

Product Description	3
Warning Notice	3
Safety Advice	3
Introduction	4
Dimensions & Mounting the unit	5
Electrical Connections	8
Operating Instructions	14
Status Indicator	15
Specifications	16
Warranty	16
Declaration of Conformity	17

**PRODUCT ADVISORY NOTICE**

**This product must be installed by a competent person in accordance with the IET Wiring Regulations, BS7671 (18<sup>th</sup> Edition or later) and current Building Regulations.**

**Ensure the electrical supply is disconnected before installation or removing the cover of the unit.**

## Environment

**matt:e** no longer use plastic bags as part of product packaging. Wherever possible we utilise reusable biodegradable packaging for transportation. We ask that you support our efforts to reduce un-necessary waste and recycle all packaging appropriately. Thank you.

## Product Description

The **matt:e** Single Phase Electric Vehicle Charger Protection units are designed for use in domestic dwelling applications where single phase PME supplies are feeding Electric Vehicle Chargers. They should NOT be used on premises with 3 phase supplies

This manual covers the SP-EVCP-T(C), SP-EVCP-R(C), SP-EVCP-M(C), SP-EVCP-B(C), IP-EVCP-T(C), IP-EVCP-R(C), & IP-EVCP-M(C) models manufactured after April 2020

The units are not intended for any purpose other than that defined within this document.

## **WARNINGS**

Please read and observe the following notices carefully. These warnings must be observed when installing and operating the Electric Vehicle Charger Protection units.

**All relevant supplies must be isolated or disconnected before commencing any work. This product must be installed by a competent person in accordance with the IET Wiring Regulations, BS7671 (18<sup>th</sup> Edition or later) and any relevant Building Regulations and/or Installation Regulations.**



**Once installed, the unit has a Live Mains Supply (230v or higher) within the enclosure. The cover must not be removed until the supply to the unit has been isolated or disconnected.**

## Safety Advice

**The unit must be installed in a dry ventilated location; it must never be covered or have restricted ventilation.**

**The SP-EVCP units are rated for a maximum 32A.**

**The SP-EVCP-R & IP-EVCP-R models are rated to be connected directly to the supply meter tails via suitable connectors. All other models must be connected via the Consumer Distribution Board or 'Garage Board' and suitable protective device**

For any information not contained within this document, please contact our technical support team on 01543 227290 or [info@matt-e.co.uk](mailto:info@matt-e.co.uk).

## Introduction

The **matt:e** range of Single Phase Electric Vehicle Charger Protection units are designed to protect Electric Vehicle Charging equipment when installed onto single-phase PME infrastructures .

All units incorporate an electronic detection circuit and 3 pole contactor. The T version has three terminals on the incoming side of the unit. The M version has a 2 pole MCB and a single terminal on the incoming side of the unit. The R version has a 2 pole Type A RCBO and a single terminal on the incoming side of the unit. The B version has a 2 pole Type B RCCB, single pole MCB and a single terminal on the incoming side of the unit.

**The SP-EVCP-R(C), SP-EVCP-RB(C), IP-EVCP-R(C) and IP-EVCP-RB(C) versions are rated to be connected directly to the supply meter tails via suitable connectors. All other versions must be connected via the Consumer Distribution Board or 'Garage Board' and suitable protective device**

The Current Curtailment versions are supplied with a split core CT for installing on the main incoming supply cable to the property. See page 9 for connection details

On detection of fault conditions the electronic circuit disconnects the EV charger from the incoming supply including CPC by de-energising the contactor. The isolation contactor is certified to BS EN 60947-4-1 and complies with the requirements of BS: 7671 18th Edition.

The **matt:e** SP-EVCP technology does not require earth rods or measuring electrodes to function correctly.

The units are designed to be installed indoors between the service providers meter / distribution board and the Electric Vehicle Charger. The unit must be mounted securely to a solid surface with the lid hinges at the top.





**The installation location should be clean, dry and well ventilated.**

**SP-EVCP enclosures have gland hole knockouts ready to accept a range of cable glands. Drilling or cutting of the enclosure to make additional cable entry points may damage the internal components and compromise their function. Such action will invalidate the warranty.**





Please refer to the diagrams on the following pages for the dimensions and mounting arrangements of the units.

SP-EVCP-R (Cxx)  
SP-EVCP-M (Cxx)




SP-EVCP-T (Cxx)  
(without MCB flap)

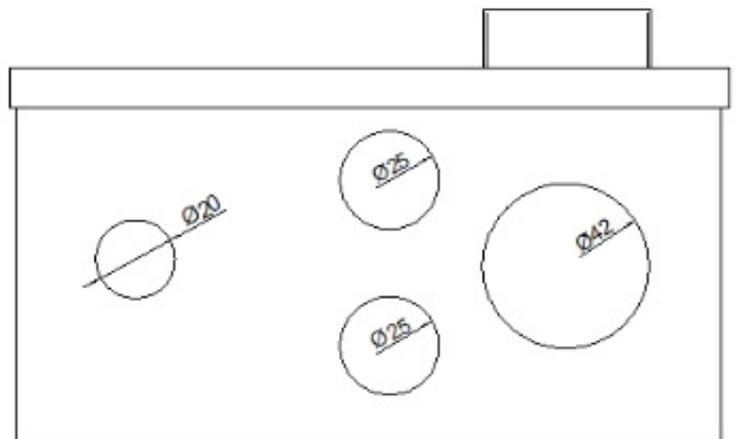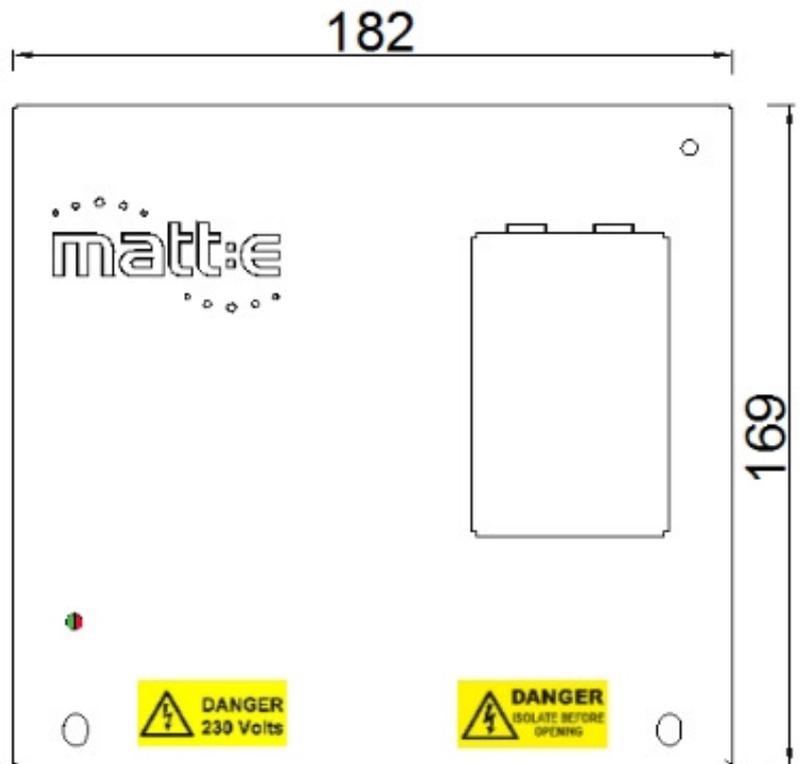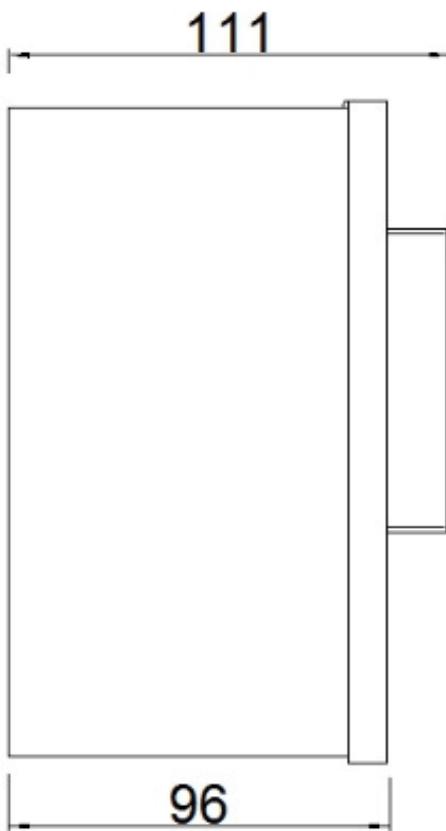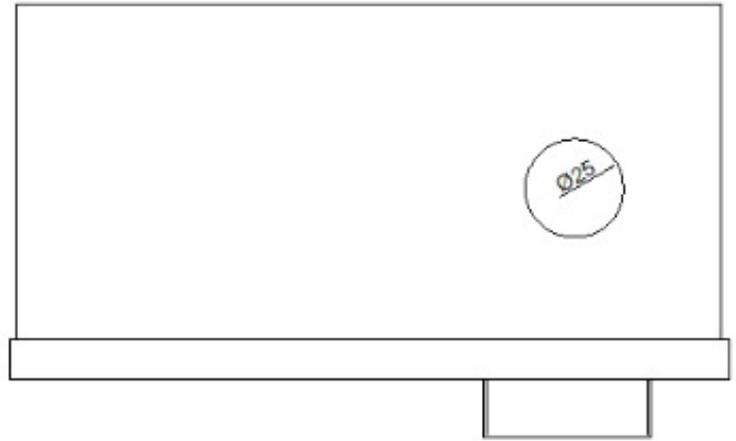



# SP-EVCP-B (Cxx)

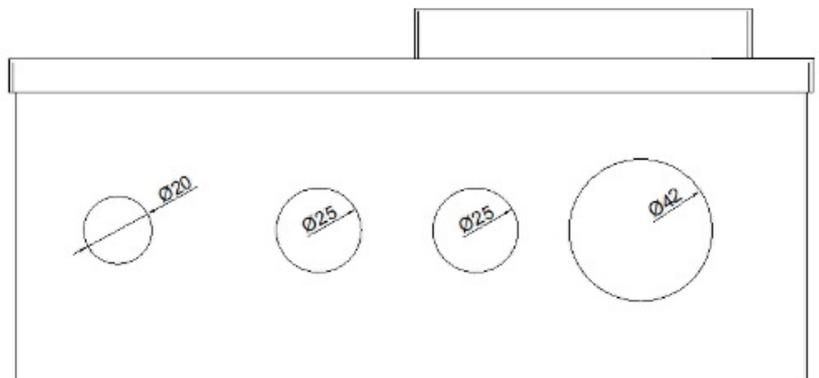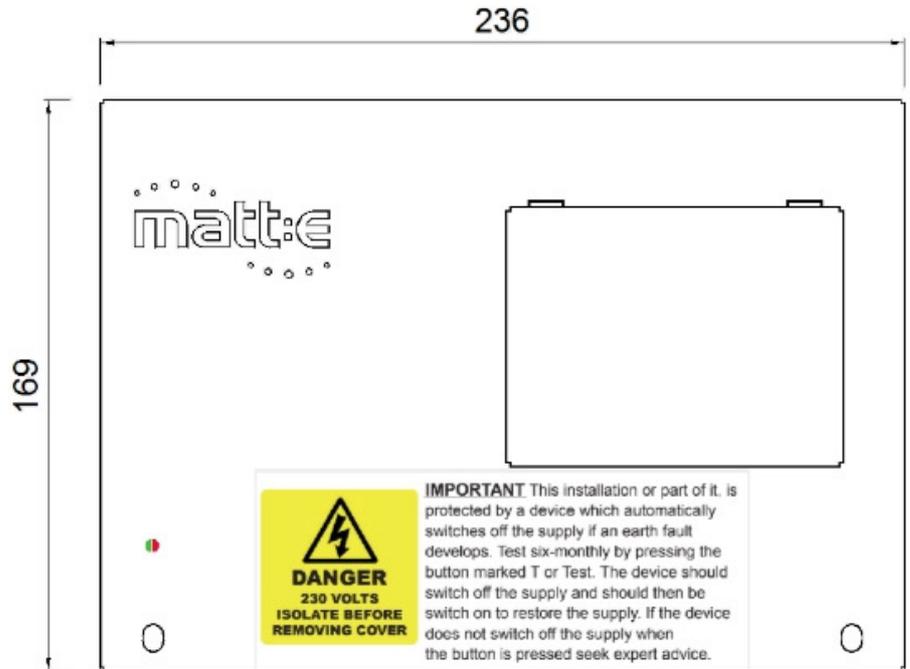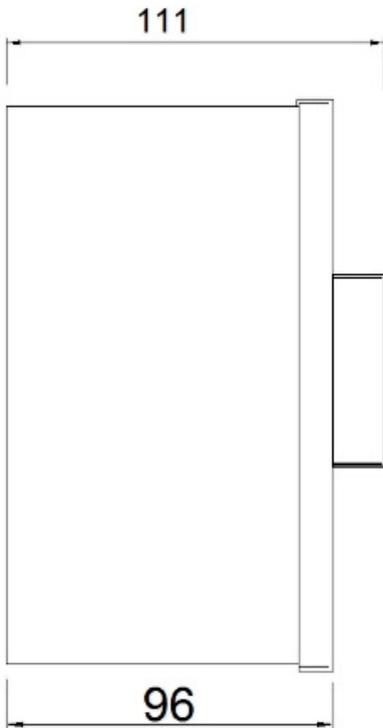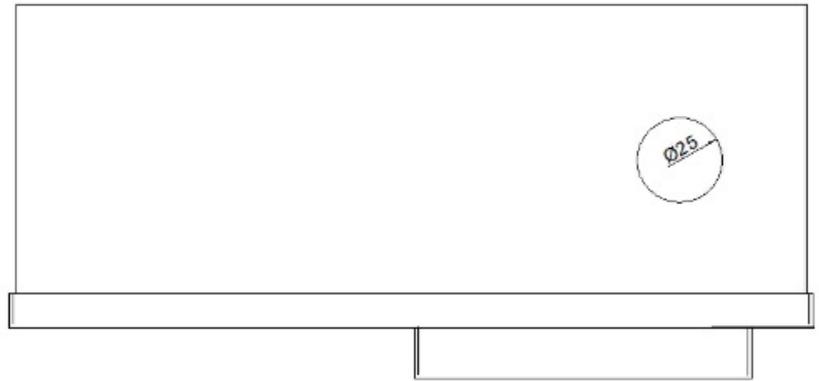


# SP-EVCP-RB (Cxx)

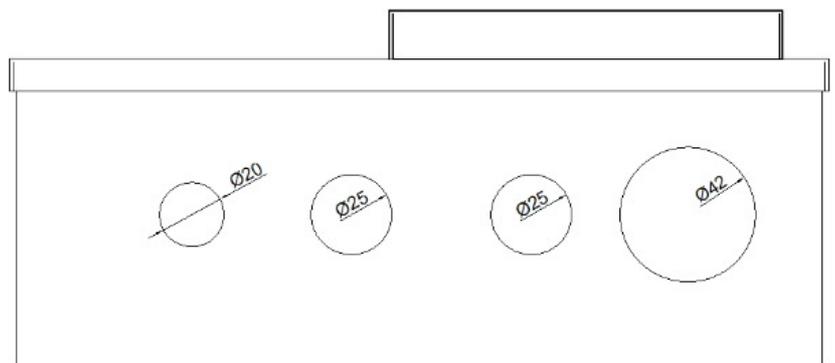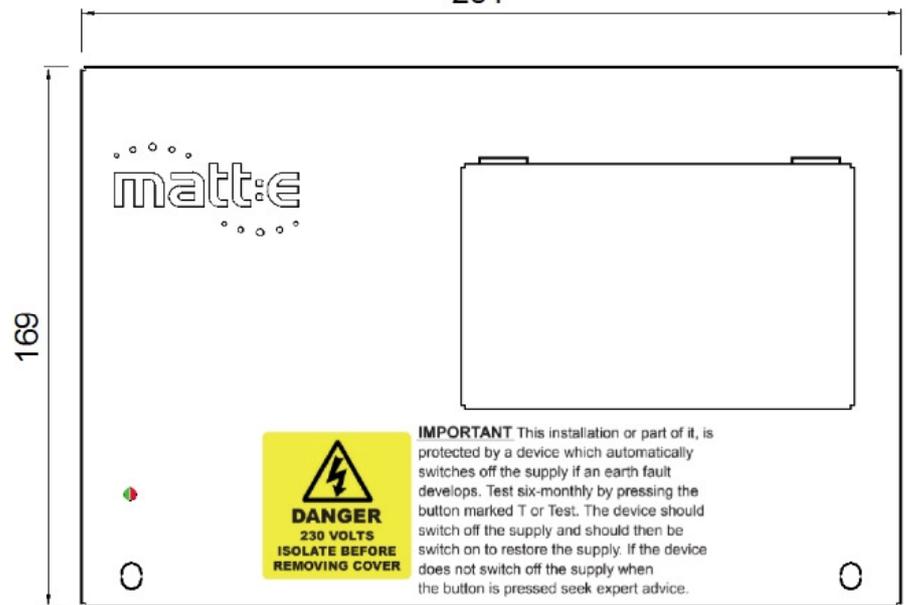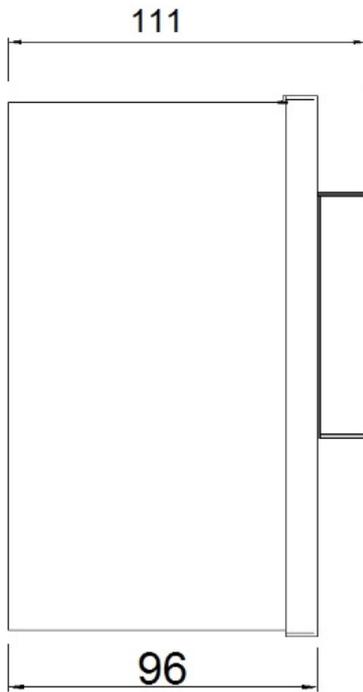

## Mounting details

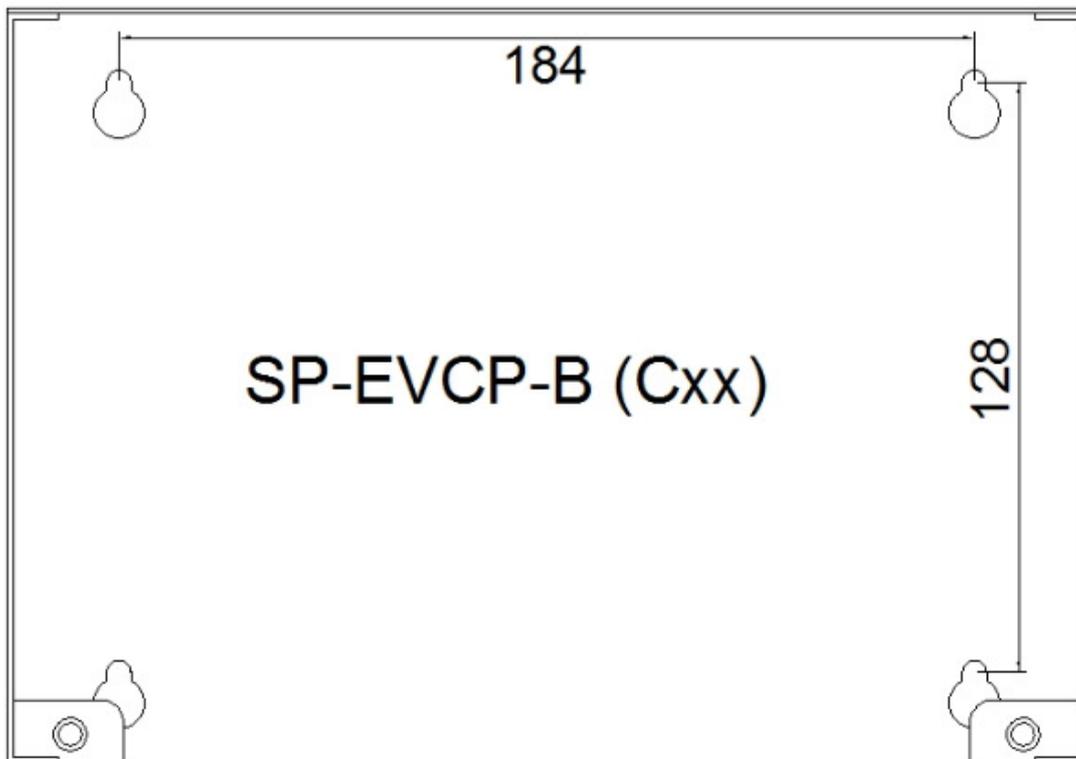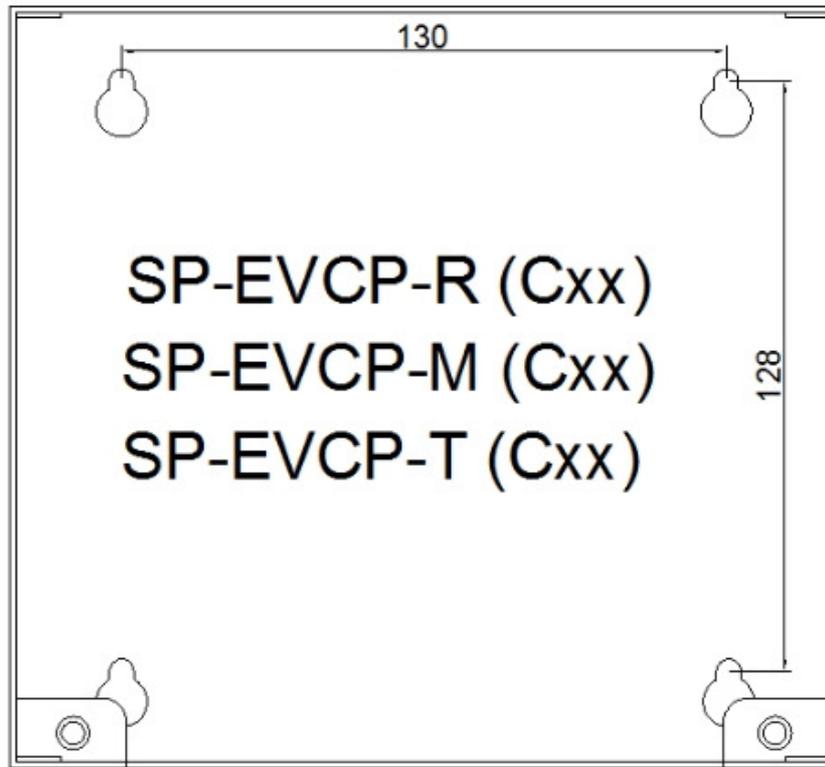


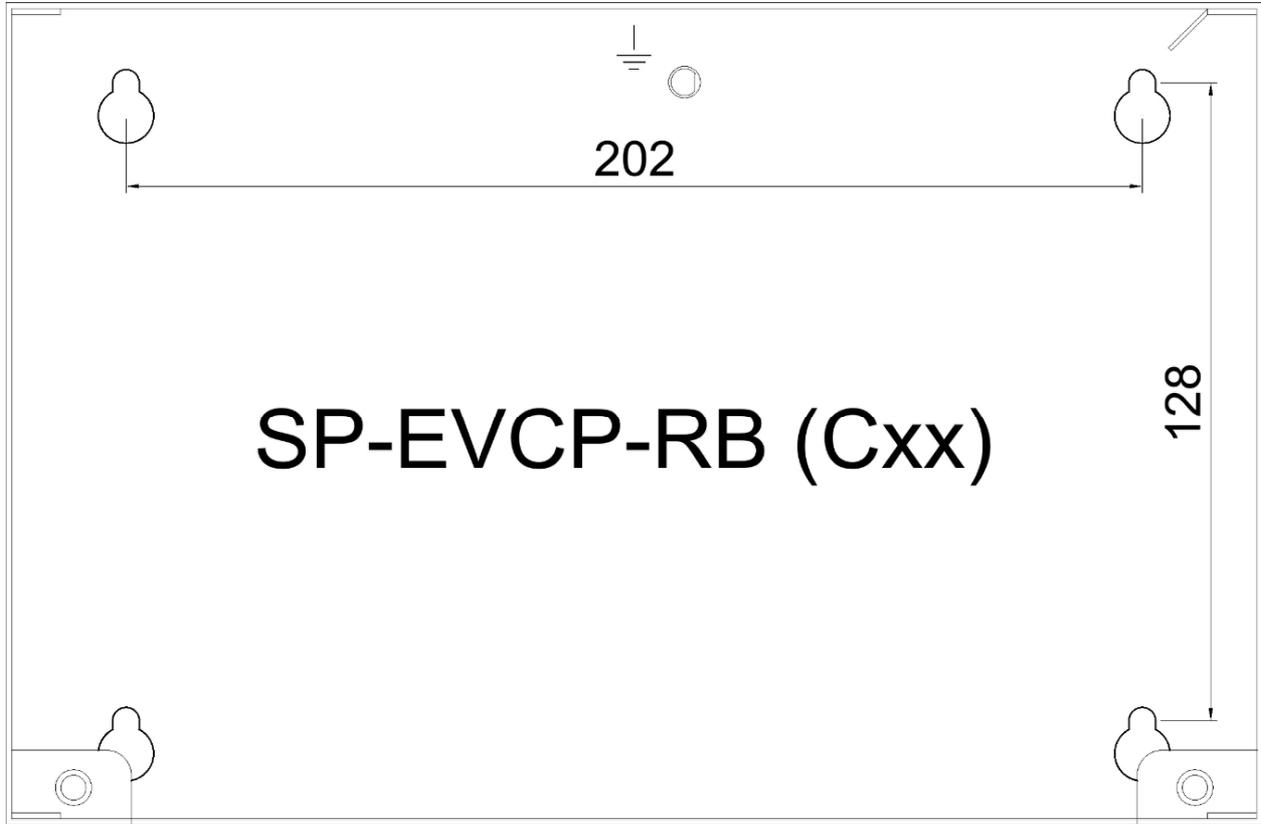

## Electrical Connections

The user wiring connections are indicated in the diagrams below.

# SP-EVCP-T (Cxx)

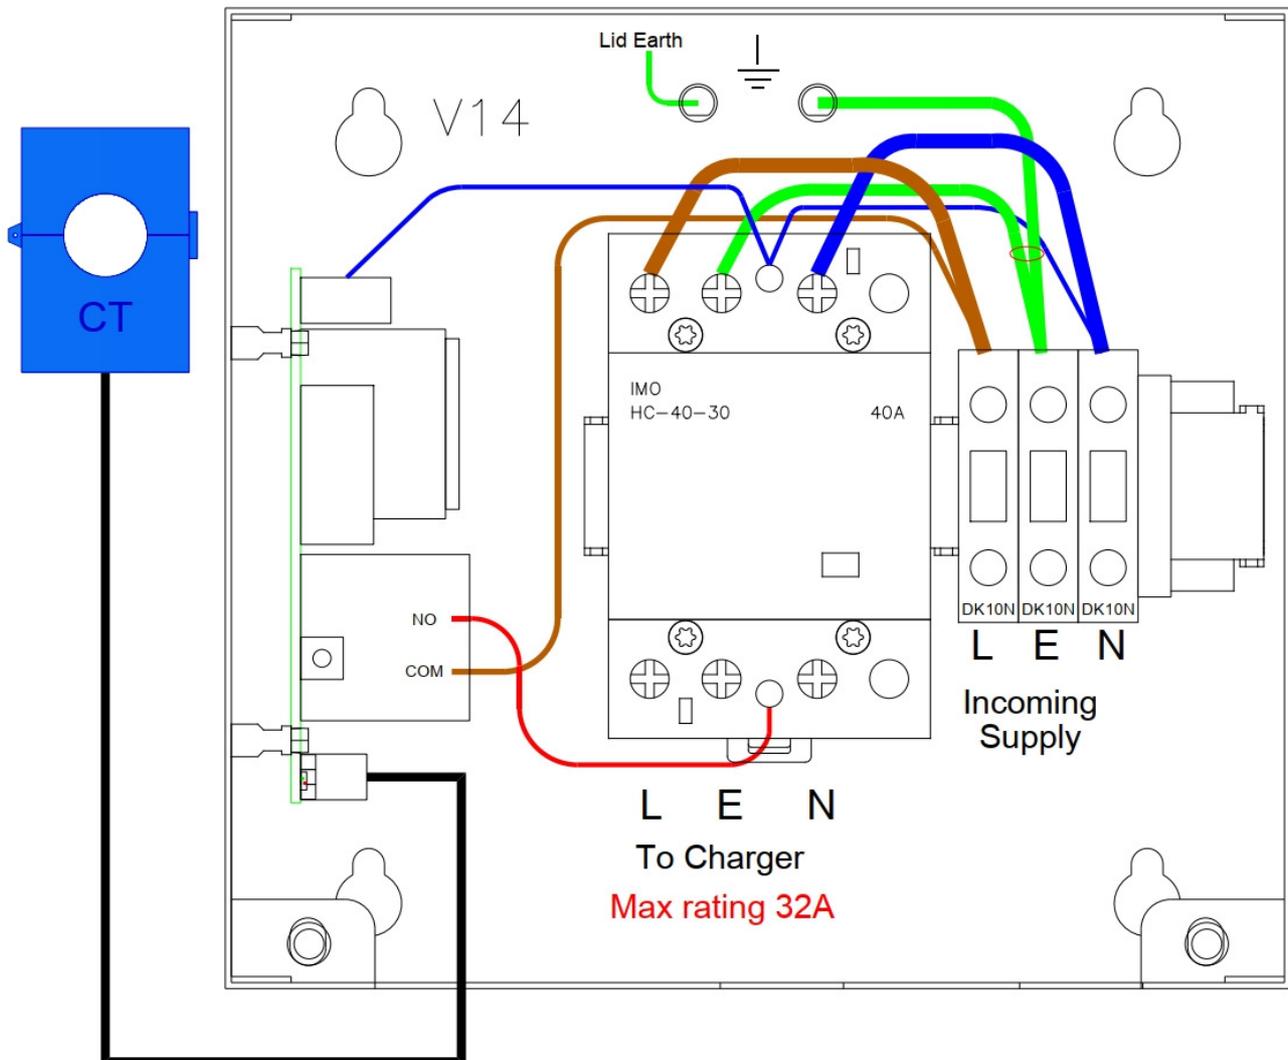

Connect the supply cable from the distribution board directly to the 'Incoming Supply' terminals.

Connect the outgoing cable to the contactor L, E & N terminals.


If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

# SP-EVCP-M (Cxx)

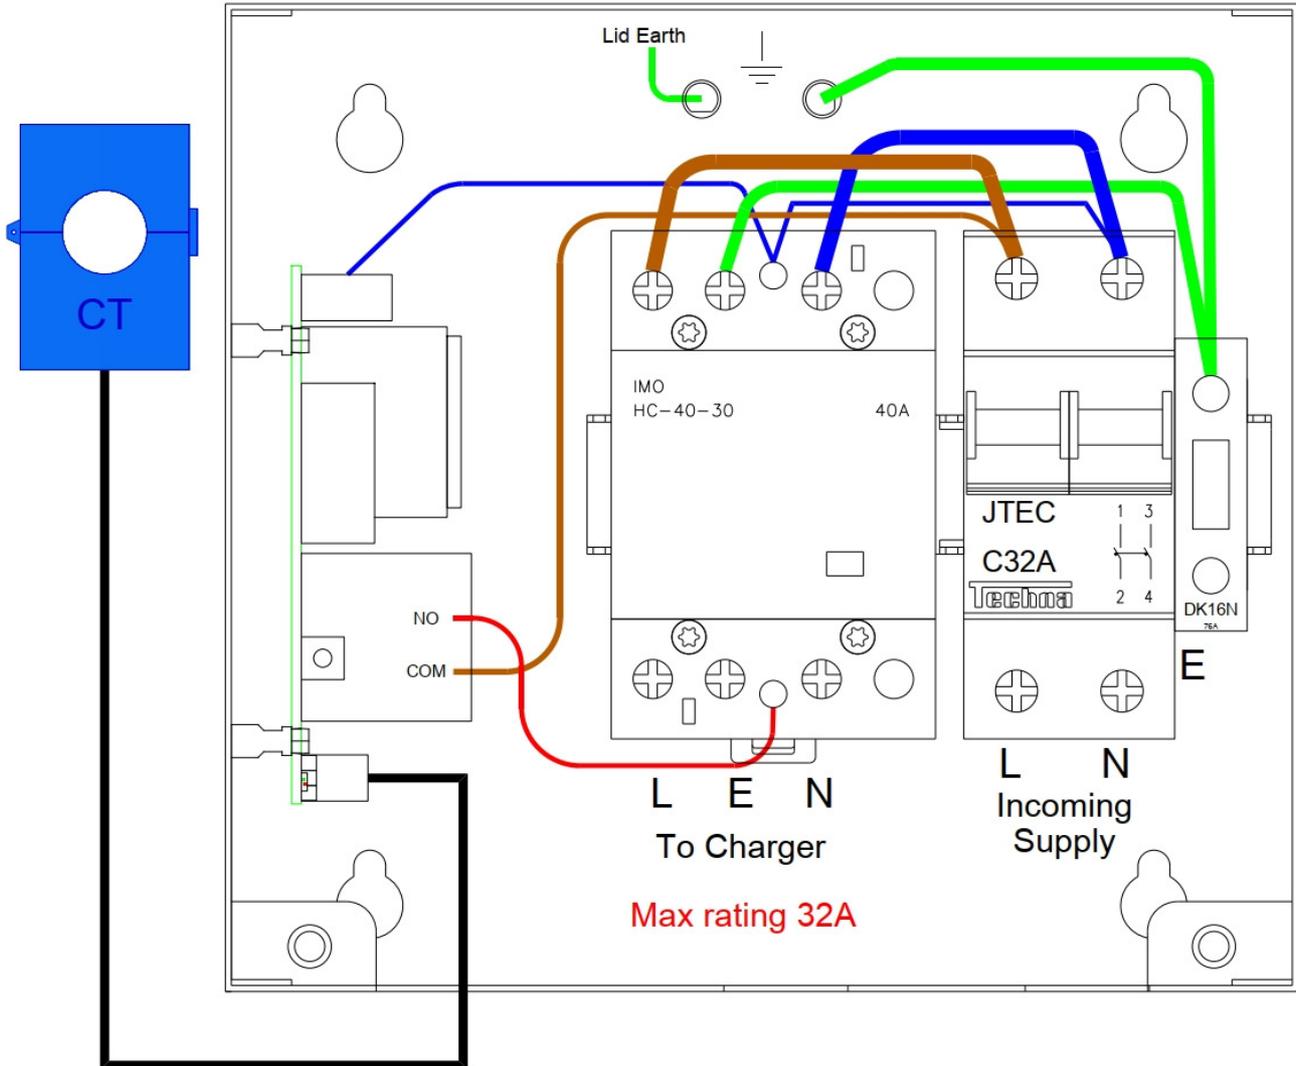

Connect the supply cable from the distribution board directly to the MCB 'Incoming Supply' terminals.

Connect the outgoing cable to the contactor L, E & N terminals.


If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

# SP-EVCP-R (Cxx)

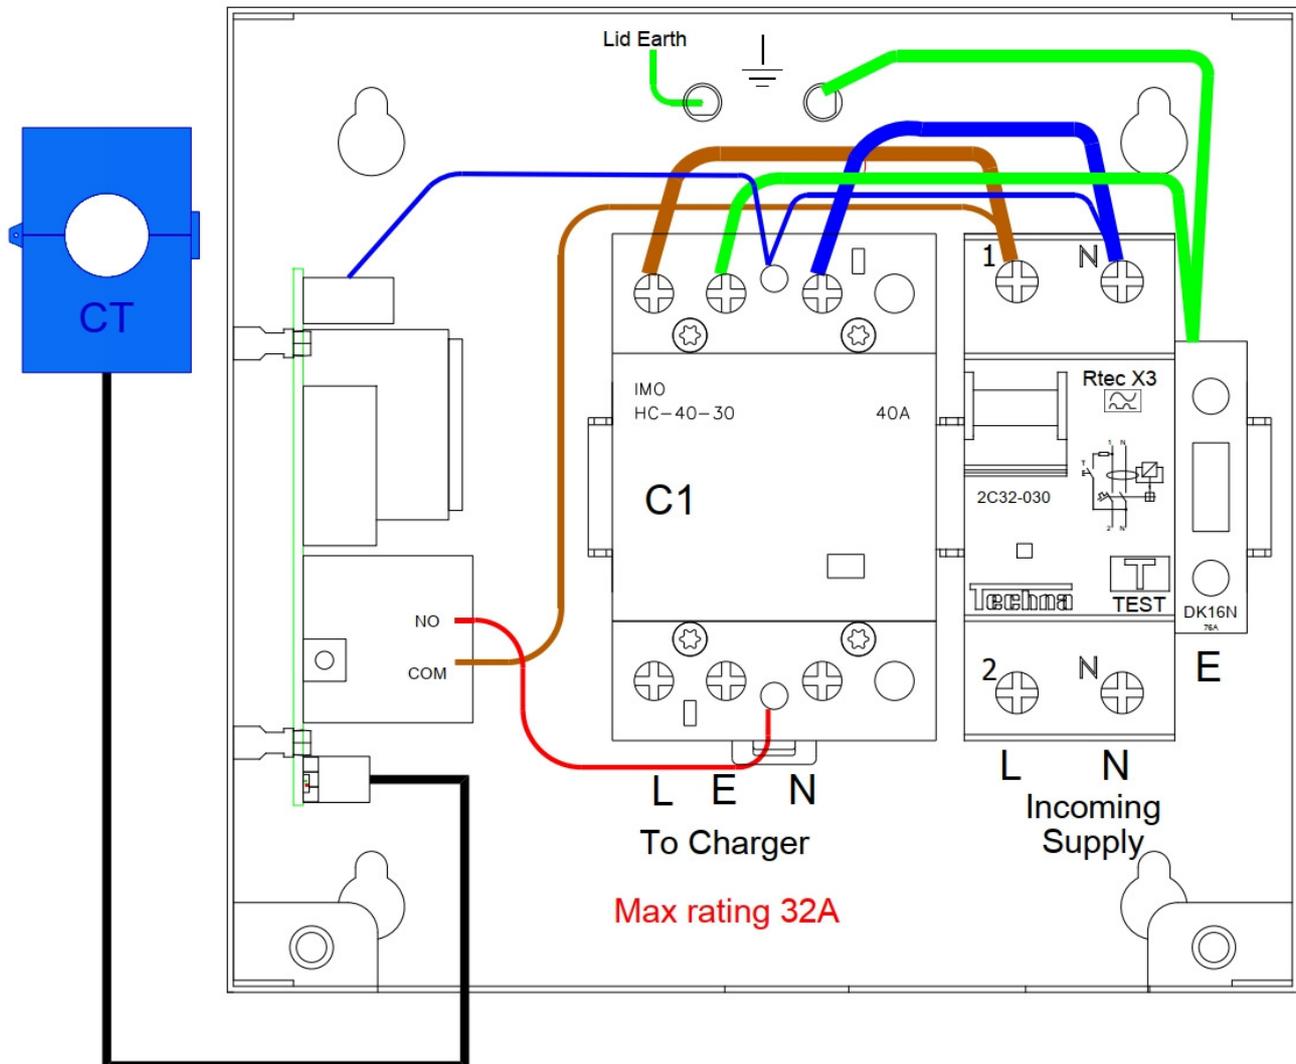

Connect the supply cable from the distribution board (or meter tails) directly to the RCBO 'Incoming Supply' terminals.

Connect the outgoing cable to the contactor L, E & N terminals.


If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

# SP-EVCP-B(Cxx)

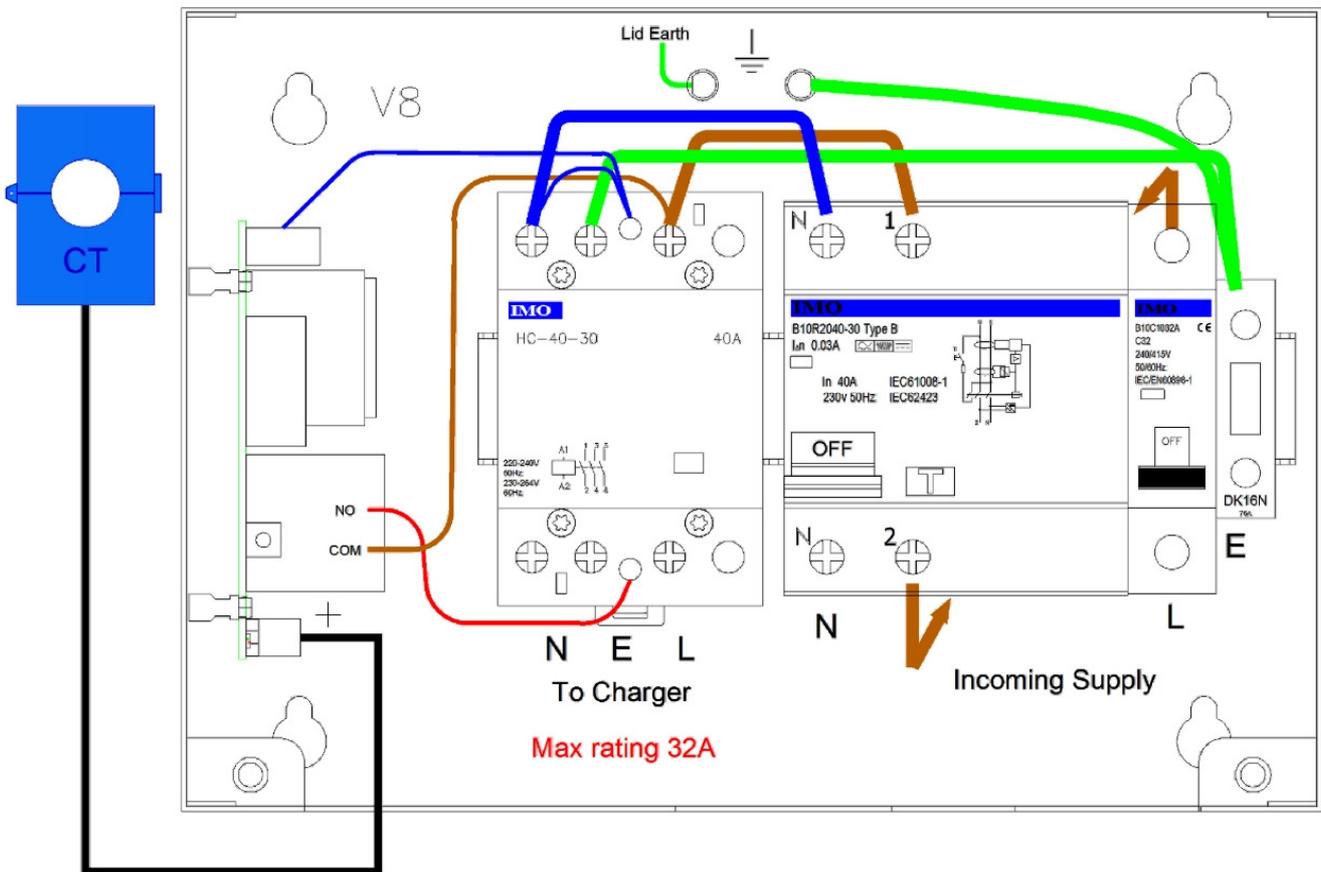

Connect the supply cable from the distribution board (or meter tails) directly to the MCB/RCCD 'Incoming Supply' terminals.

Connect the outgoing cable to the contactor L, E & N terminals.


If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

# SP-EVCP-RB (Cxx)

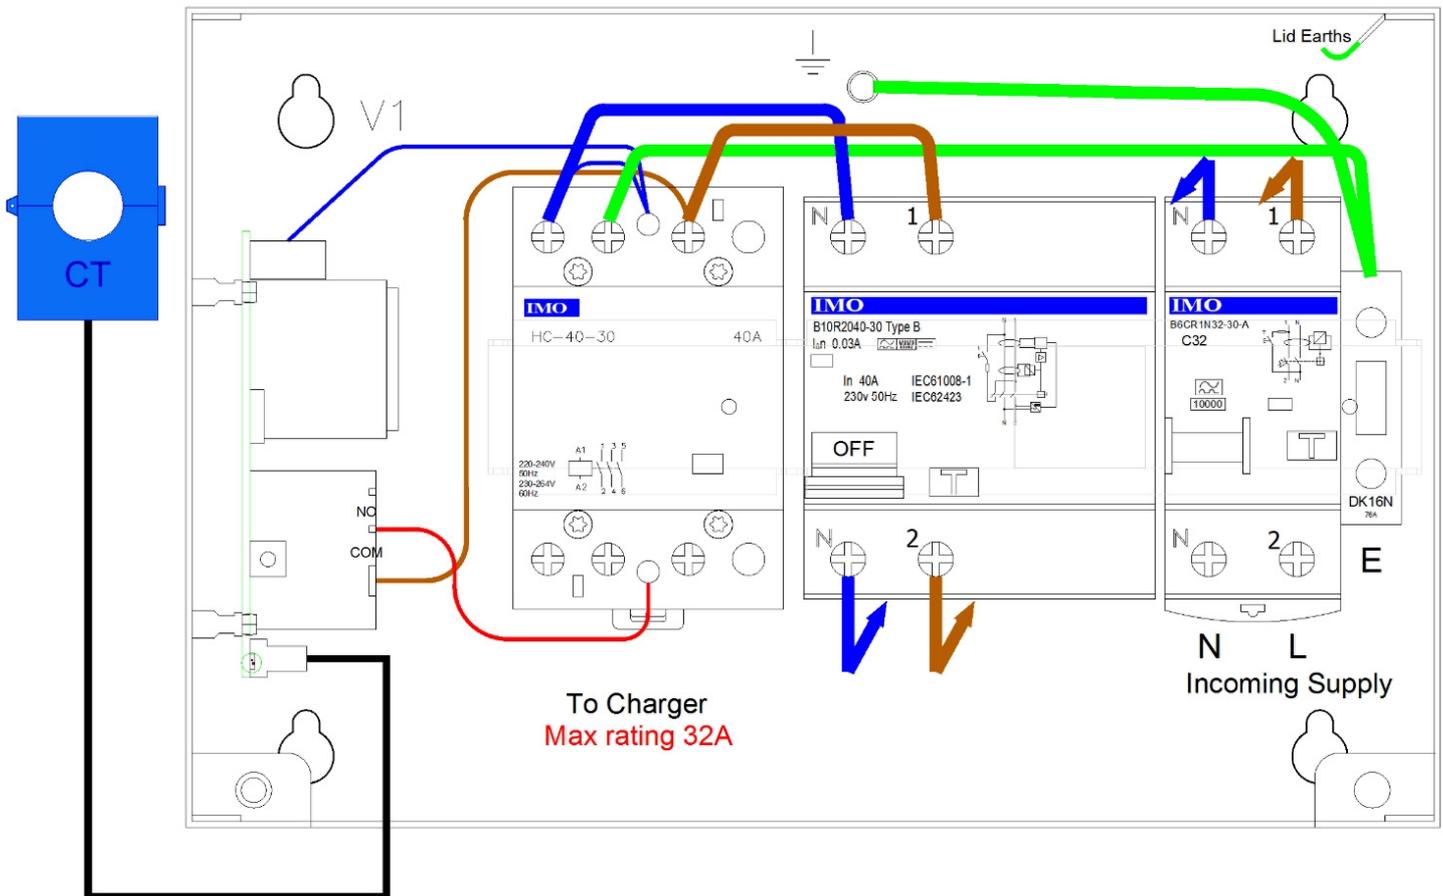

Connect the supply cable from the distribution board (or meter tails) directly to the RCBO 'Incoming Supply' terminals.



Connect the outgoing cable to the contactor L, E & N terminals.

If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

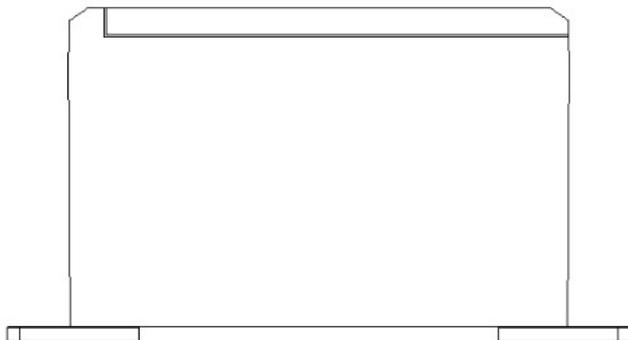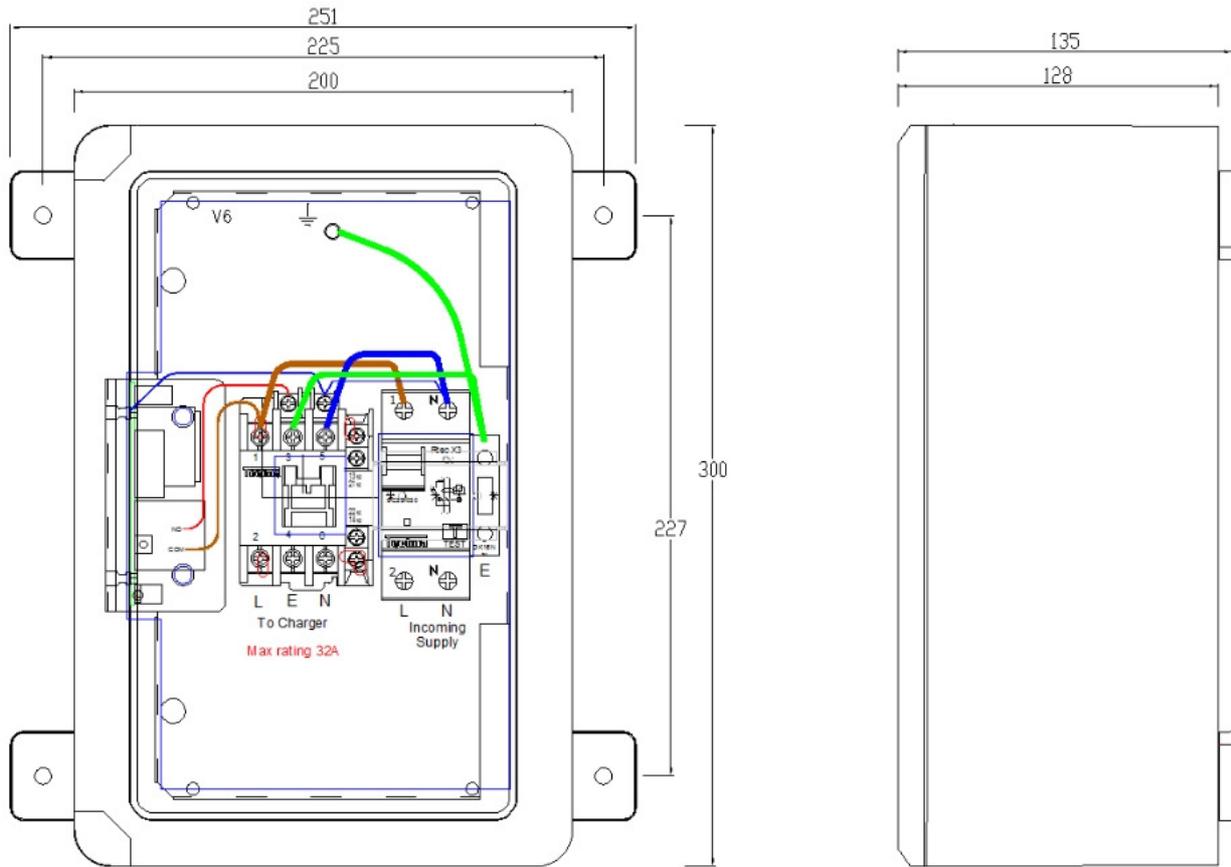

## IP-EVCP-R (Cxx)

### ALL cables to be bottom entry

Connect the supply cable from the distribution board (or meter tails) directly to the RCBO 'Incoming Supply' terminals.


Connect the outgoing cable to the contactor L, E & N terminals.

If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

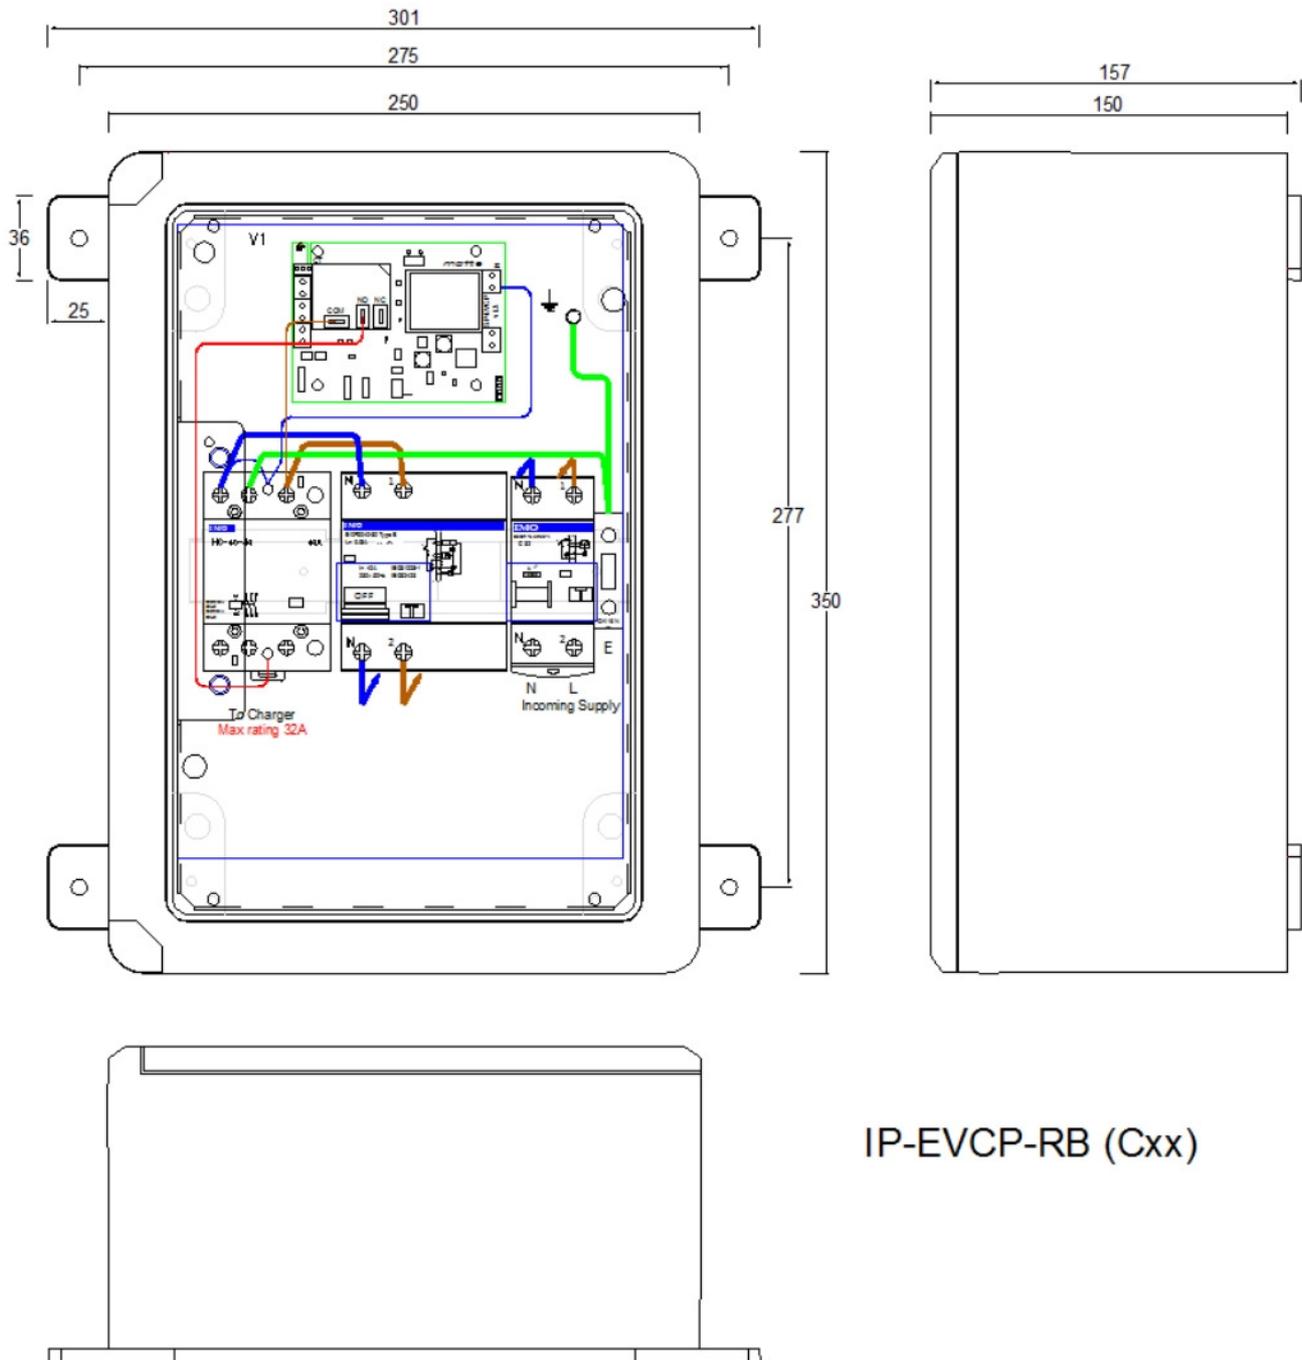

IP-EVCP-RB (Cxx)

**ALL cables to be bottom entry**

Connect the supply cable from the distribution board (or meter tails) directly to the RCBO 'Incoming Supply' terminals.

Connect the outgoing cable to the contactor L, E & N terminals.



If required, connect the CT to the 3 pin connector on the PCB

Check ALL power and earth connections before switching on.



**THIS PRODUCT IS DESIGNED FOR AN ISOLATED EARTHING ARRANGEMENT. CHECK BEFORE USING SWA CABLE**

**Connection details for CT versions**

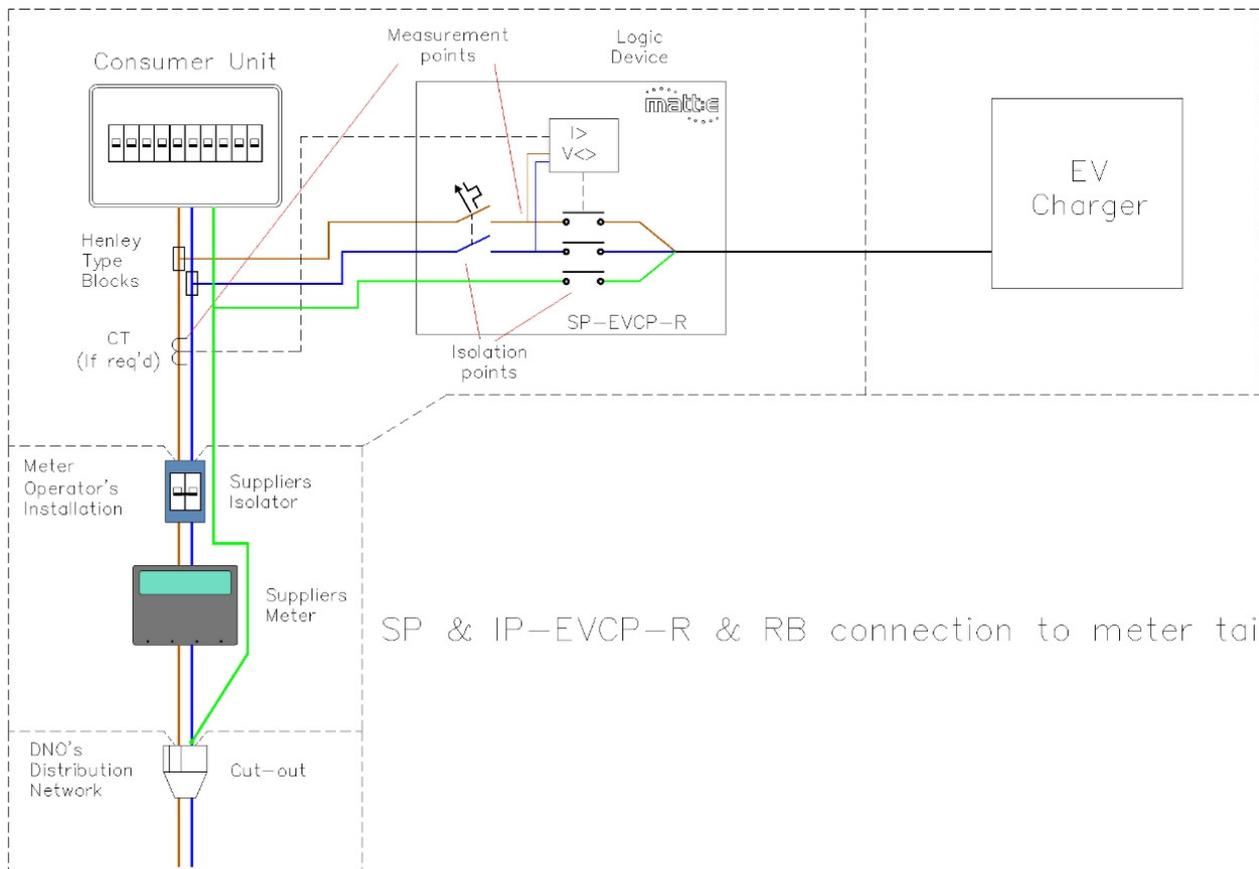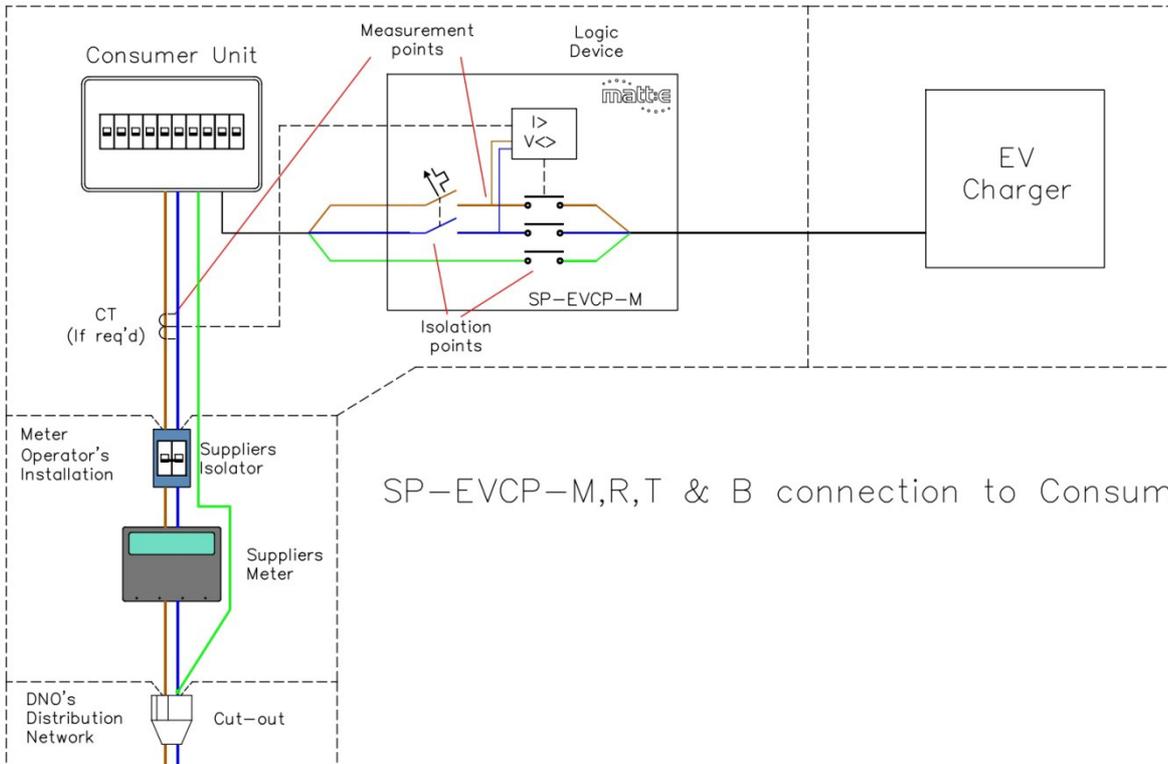

## Operating Instructions

With the supply switched on the electronic control circuit in unit will continuously monitor the incoming supply voltage.

If the incoming supply is within limits, approximately 5 seconds after switching on the contactor will energise and connect the load to the incoming supply and the CPC. The 5 second delay is to establish the incoming supply is stable before applying power to the load.

In the event the SP-EVCP unit detects a fault condition on the monitored supply for a period of 4 seconds, the electronic control circuit will de-energise the contactor coil which will open the contactor disconnecting Line, Neutral and CPC from the load.

The contactor will remain de-energised until the monitored supply has returned to the correct level and remained stable for a period of 3 minutes.

The current monitoring versions are supplied with a split core CT to allow the unit to monitor whole house load. The CT should be clamped around the incoming supply cable directly after the service providers' meter. It is designed to measure the FULL load current to the house. Connection diagrams are shown on page 12.

The current monitor versions of the SP-EVCP-..(C) have a current curtailment function designed to prevent the domestic load exceeding the deemed Domestic Load Level. There are 3 versions, 60A, 80A & 100A. All versions function in the same way.



The total current of the incoming mains supply is measured by the CT.

Normal operational state – If the measured current demand exceeds the Domestic Load Level for 4 seconds the supply to the EV charger is disconnected by de-energising contactor C1. The new value of the current demand is noted by the processor 1 second after C1 has been de-energised.

Once the measured current demand has reduced to a value where the current required by the car charger will not cause the current demand to exceed the deemed Domestic Load Level for a period of 3 minutes the EV charger supply is reinstated by energising C1.

Status Indicator

A dual colour (Red / Green) LED gives a visual indication of the real time status of the unit.

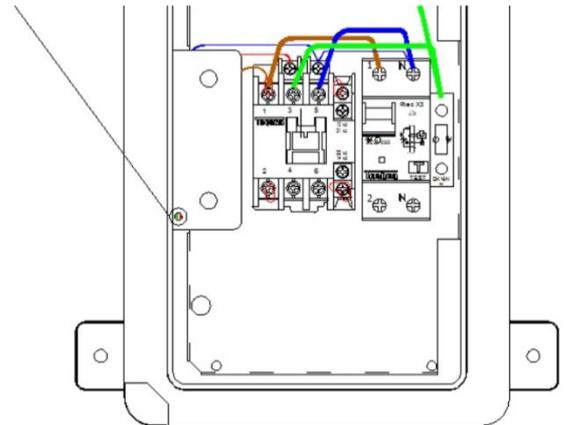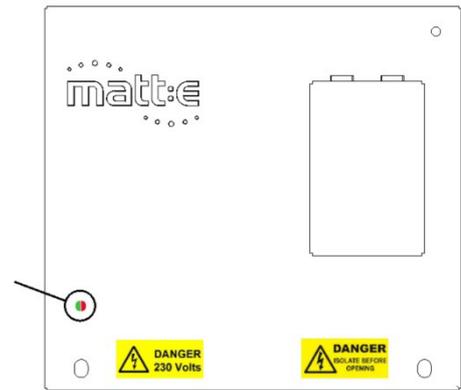

**LED flash codes**

Version info	Software Ver. 1.2	1 red flash (major) followed by 2 green flashes (minor), this appears once at power on during the first 5 secs of operation
Normal operation	No errors	Green flashes continuously @ 1Hz
Tripped	Over current	Alternating green and red flashes @ 1Hz – recovers when current in range
Tripped	Under voltage	1 red flash over 4 sec period – recovers when voltage in range
Tripped	Over voltage	2 red flashes over 4 sec period – recovers when voltage in range
Tripped	DC Detected	3 red flashes over 4 sec period – power cycle / engineer attention
Tripped	CT not found	4 red flashes over 4 sec period – power cycle / engineer attention
Tripped	Internal error	Solid red – power cycle required – power cycle / engineer attention
Normal operation	Voltage error state commencing	Red flashes continuously @ 2Hz
Normal operation	Voltage error state recovering	Green flashes continuously @ 2Hz

### Specifications

<b>Description</b>	<b>Electric Vehicle Charger Protection Unit</b>
<b>Input (Volts)</b>	Nominal input voltage 230v, 50Hz
<b>Max Load</b>	32A - All units
<b>Dimensions</b>	SP - 182mm x 169mm x 96 (111)mm IP - 300mm x 200(251)mm x 129(135)mm
<b>Weight</b>	Approximately 2.5 kg
<b>Operating Temp</b>	-5°C to 40°C
<b>Storage Temp</b>	-5°C to 40°C
<b>Enclosure</b>	SP - Mild Steel Zintec Powder Coated IP - ABS-HB Flame Retardant plastic
<b>Power Consumption</b>	13VA
<b>Ingress Protection</b>	SP-EVCP = IP2X IP-EVCP = IP65
<b>Document Revision</b>	V1.6 Feb 2021

<b>Terminal Capacities</b>	<u>Min</u>	<u>Max</u>	<u>Torque</u>
Incoming Terminals cable size & tightening torque	0.5 mm <sup>2</sup>	6.0mm <sup>2</sup>	1.3Nm
Incoming RCBO cable size & tightening torque	2.5 mm <sup>2</sup>	25.0mm <sup>2</sup>	2Nm
Outgoing Contactor cable size & tightening torque	2.5 mm <sup>2</sup>	10,0mm <sup>2</sup>	2.3Nm

**WARNING:** This equipment is compliant with Class A of EN55032.

In a residential environment this equipment may cause radio interference.

### Warranty

The SP-EVCP units are guaranteed for a period of 3 years from the date of manufacture.

This warranty is limited to the replacement of faulty components only.

**EU Declaration of Conformity (DoC)**

Ref : SP-EVCP-01-2020

**We**

Company name: matt:e Ltd  
 Postal address: Unit 5 Common Barn Farm Tamworth Road  
 City: Lichfield  
 Postcode: WS14 9PX  
 Telephone number: 01543-227290  
 E-Mail address: Info@matt-e.co.uk

**Declare that this DoC is issued under the sole responsibility of the manufacturer.**

Apparatus model/Product: SP-EVCP  
 Type: Single Phase Electric Vehicle Charger Protection

**Object of the declaration**

Electric Vehicle Charger	SP-EVCP-T(C) SP-EVCP-M(C) SP-EVCP-R(C) SP-EVCP-B(C) SP-EVCP-RB(C)
Protection units	IP-EVCP-T(C) IP-EVCP-M(C) IP-EVCP-R(C) IP-EVCP-RB(C)

**The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:**

Low Voltage Directive (2014/35/EU)

**The following harmonised standards and technical specifications have been applied:**

## Emissions

EN60255-1 2010 Emissions standard for Measuring Relays and Protection Equipment  
 EN60255-26 2013  
 EN55011 2016 + A1:2017 Emissions Standard for ISM Equipment  
 EN55032 2012 Emissions Standard for Multimedia Equipment

## Immunity

EN60255-1 2010 Emissions standard for Measuring Relays and Protection Equipment  
 EN60255-26 2013  
 EN61000-4-2 2009 ESD Requirements  
 EN61000-4-3 2006 + A1 + A2 Radiated Susceptibility  
 EN61000-4-4 2012 Electrical Fast Transient Burst Requirement  
 EN61000-4-5 2006 Surges Requirements  
 EN61000-4-6 2009 Conducted Susceptibility  
 EN61000-4-11 2004 Voltage Dips and Interruptions  
 Following the provisions of EU EMC Directive 2014/30/EU

EN61439-1 2:2012 3:2012 Low-voltage switchgear and controlgear assemblies.  
 EN60947-4-1 Low-voltage switchgear and control gear  
 EN61009-1 Residual current operated circuit-breakers with integral overcurrent  
 EN61008-1 Residual current operated circuit-breakers without integral overcurrent  
 EN 60898-1:2019 Electrical accessories - Circuit-breakers for overcurrent protection for household and similar installations –  
 Part 1: Circuit-breakers for a.c. operation

**Signed for and on behalf of: matt:e Ltd****Place of issue**

Lichfield, England

**Date**

17 Jan 2021

J Charlton, Director