SUN2000-(196KTL-H3, 200KTL-H3, 215KTL-H3)

User Manual

Issue 08

Date 2023-03-30





Copyright © Huawei Technologies Co., Ltd. 2023. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

Trademarks and Permissions

HUAWEI and other Huawei trademarks are trademarks of Huawei Technologies Co., Ltd. All other trademarks and trade names mentioned in this document are the property of their respective holders.

Notice

The purchased products, services and features are stipulated by the contract made between Huawei and the customer. All or part of the products, services and features described in this document may not be within the purchase scope or the usage scope. Unless otherwise specified in the contract, all statements, information, and recommendations in this document are provided "AS IS" without warranties, guarantees or representations of any kind, either express or implied.

The information in this document is subject to change without notice. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information, and recommendations in this document do not constitute a warranty of any kind, express or implied.

Huawei Technologies Co., Ltd.

Address: Huawei Industrial Base

Bantian, Longgang Shenzhen 518129

People's Republic of China

Website: https://e.huawei.com

About This Document

Overview

This document describes the SUN2000-196KTL-H3, SUN2000-200KTL-H3, and SUN2000-215KTL-H3 (SUN2000 for short) in terms of their installation, electrical connections, commissioning, maintenance, and troubleshooting. Before installing and operating the inverter, ensure that you are familiar with the features, functions, and safety precautions provided in this document.

Intended Audience

This document is intended for photovoltaic (PV) plant operating personnel and qualified electricians.

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
▲ DANGER	Indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
	Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
⚠ CAUTION	Indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance deterioration, or unanticipated results.
	NOTICE is used to address practices not related to personal injury.

Symbol	Description
□ NOTE	Supplements the important information in the main text.
	NOTE is used to address information not related to personal injury, equipment damage, and environment deterioration.

Change History

Changes between document issues are cumulative. The latest document issue contains all updates made in previous issues.

Issue 08 (2023-03-30)

Updated 2.1 Product Overview.

Issue 07 (2023-02-23)

Updated C Grid Code.

Issue 06 (2022-11-30)

Updated 1 Safety Information.

Updated 2.1 Product Overview.

Updated 4.2 Preparing Tools.

Updated 4.5 Installing the Inverter.

Updated 5.6 Connecting the AC Output Power Cable.

Updated 7.1.2 Downloading and Installing the App.

Updated 8.5 Troubleshooting.

Added D Resetting Password.

Added E Contact Information.

Issue 05 (2022-05-10)

Updated 10 Technical Data.

Issue 04 (2022-02-20)

Updated 2.2 Appearance.

Updated 2.3.1 Label Description.

Updated 4.3.1 Environment Requirements.

Updated 6.2 System Power-On.

Updated **8.3 Routine Maintenance**.

Updated 8.6 Resetting and Turning On the DC Switch.

Issue 03 (2021-09-30)

Updated **2.2 Appearance**.

Updated 5.3 Opening the Maintenance Compartment Door.

Updated 5.4 (Optional) Replacing the Crimping Module.

Updated 5.5 (Optional) Installing the Power Cable of the Tracking System.

Updated 5.6 Connecting the AC Output Power Cable.

Updated 5.9 Closing the Maintenance Compartment Door.

Issue 02 (2021-08-10)

Updated 6.2 System Power-On.

Updated 7.1.3 Logging In to the App.

Issue 01 (2021-05-30)

This issue is used for first office application (FOA).

Contents

About This Document	i
1 Safety Information	1
1.1 Personal Safety	2
1.2 Electrical Safety	4
1.3 Environment Requirements	6
1.4 Mechanical Safety	8
2 Overview	13
2.1 Product Overview	13
2.2 Appearance	15
2.3 Label Description	19
2.3.1 Label Description	19
2.3.2 Product Nameplate	21
2.4 Working Principles	21
2.4.1 Circuit Diagram	21
2.4.2 Working Modes	22
3 Solar Inverter Storage	24
4 Installation	26
4.1 Checking Before Installation	26
4.2 Preparing Tools	26
4.3 Determining the Installation Position	28
4.3.1 Environment Requirements	28
4.3.2 Space Requirements	29
4.4 Installing the Mounting Bracket	32
4.4.1 Support-mounted Installation	32
4.4.2 Wall-mounted Installation	33
4.5 Installing the Inverter	34
5 Electrical Connections	38
5.1 Precautions	38
5.2 Crimping an OT or DT Terminal	39
5.3 Opening the Maintenance Compartment Door	42
5.4 (Optional) Replacing the Crimping Module	43

5.5 (Optional) Installing the Power Cable of the Tracking System	44
5.6 Connecting the AC Output Power Cable	
5.7 Installing the DC Input Power Cable	
5.8 Installing the Communications Cable	55
5.9 Closing the Maintenance Compartment Door	58
6 System Commissioning	60
6.1 Check Before Power-on	60
6.2 System Power-On	60
7 Man-Machine Interactions	63
7.1 Operations with the App	63
7.1.1 App Introduction	63
7.1.2 Downloading and Installing the App	65
7.1.3 Logging In to the App	65
7.1.4 Operations Related to the Advanced User	70
7.1.4.1 Setting Grid Parameters	70
7.1.4.2 Setting Protection Parameters	71
7.1.4.3 Setting Feature Parameters	71
7.1.5 Operations Related to the Special User	75
7.1.5.1 Setting Grid Parameters	76
7.1.5.2 Setting Protection Parameters	77
7.1.5.3 Setting Feature Parameters	
7.1.5.4 Setting Power Adjustment Parameters	84
8 Maintenance	88
8.1 System Power-Off	88
8.2 Power-Off for Troubleshooting	89
8.3 Routine Maintenance	90
8.4 Replacing a Fan	
8.5 Troubleshooting	
8.6 Resetting and Turning On the DC Switch	106
9 Handling the Inverter	107
9.1 Removing the SUN2000	107
9.2 Packing the SUN2000	107
9.3 Disposing of the SUN2000	107
10 Technical Data	108
A String Access Detection	112
B Domain Name List of Management Systems	115
C Grid Code	116
D Resetting Password	121
E Contact Information	122

SUN2000-(196KTL-H3,	200KTL-H3,	215KTL-H3)
User Manual		

Contents

F Acronyms and Abbreviations......124

1 Safety Information

Statement

Before transporting, storing, installing, operating, using, and/or maintaining the equipment, read this document, strictly follow the instructions provided herein, and follow all the safety instructions on the equipment and in this document. In this document, "equipment" refers to the products, software, components, spare parts, and/or services related to this document; "the Company" refers to the manufacturer (producer), seller, and/or service provider of the equipment; "you" refers to the entity that transports, stores, installs, operates, uses, and/or maintains the equipment.

The Danger, Warning, Caution, and Notice statements described in this document do not cover all the safety precautions. You also need to comply with relevant international, national, or regional standards and industry practices. The Company shall not be liable for any consequences that may arise due to violations of safety requirements or safety standards concerning the design, production, and usage of the equipment.

The equipment should be used in an environment that meets the design specifications. Otherwise, the equipment may be faulty, malfunctioning, or damaged, which is not covered under the warranty. The Company shall not be liable for any property loss, personal injury, or even death caused thereby.

Comply with applicable laws, regulations, standards, and specifications during transportation, storage, installation, operation, use, and maintenance.

Do not perform reverse engineering, decompilation, disassembly, adaptation, implantation, or other derivative operations on the equipment software. Do not study the internal implementation logic of the equipment, obtain the source code of the equipment software, violate intellectual property rights, or disclose any of the performance test results of the equipment software.

The Company shall not be liable for any of the following circumstances or their consequences:

- The equipment is damaged due to force majeure such as earthquakes, floods, volcanic eruptions, debris flows, lightning strikes, fires, wars, armed conflicts, typhoons, hurricanes, tornadoes, and other extreme weather conditions.
- The equipment is operated beyond the conditions specified in this document.

- The equipment is installed or used in environments that do not comply with international, national, or regional standards.
- The equipment is installed or used by unqualified personnel.
- You fail to follow the operation instructions and safety precautions on the product and in the document.
- You remove or modify the product or modify the software code without authorization.
- You or a third party authorized by you cause the equipment damage during transportation.
- The equipment is damaged due to storage conditions that do not meet the requirements specified in the product document.
- You fail to prepare materials and tools that comply with local laws, regulations, and related standards.
- The equipment is damaged due to your or a third party's negligence, intentional breach, gross negligence, or improper operations, or other reasons not related to the Company.

1.1 Personal Safety

⚠ DANGER

Ensure that power is off during installation. Do not install or remove a cable with power on. Transient contact between the core of the cable and the conductor will generate electric arcs or sparks, which may cause a fire or personal injury.

⚠ DANGER

Non-standard and improper operations on the energized equipment may cause fire, electric shocks, or explosion, resulting in property damage, personal injury, or even death.

⚠ DANGER

Before operations, remove conductive objects such as watches, bracelets, bangles, rings, and necklaces to prevent electric shocks.


DANGER

During operations, use dedicated insulated tools to prevent electric shocks or short circuits. The dielectric withstanding voltage level must comply with local laws, regulations, standards, and specifications.

MARNING

During operations, wear personal protective equipment such as protective clothing, insulated shoes, goggles, safety helmets, and insulated gloves.

Figure 1-1 Personal protective equipment

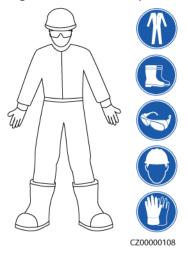

General Requirements

- Do not stop protective devices. Pay attention to the warnings, cautions, and related precautionary measures in this document and on the equipment.
- If there is a likelihood of personal injury or equipment damage during operations, immediately stop, report the case to the supervisor, and take feasible protective measures.
- Do not power on the equipment before it is installed or confirmed by professionals.
- Do not touch the power supply equipment directly or with conductors such as damp objects. Before touching any conductor surface or terminal, measure the voltage at the contact point to ensure that there is no risk of electric shock.
- Do not touch operating equipment because the enclosure is hot.
- Do not touch a running fan with your hands, components, screws, tools, or boards. Otherwise, personal injury or equipment damage may occur.
- In the case of a fire, immediately leave the building or the equipment area and activate the fire alarm or call emergency services. Do not enter the affected building or equipment area under any circumstances.

Personnel Requirements

- Only professionals and trained personnel are allowed to operate the equipment.
 - Professionals: personnel who are familiar with the working principles and structure of the equipment, trained or experienced in equipment operations and are clear of the sources and degree of various potential hazards in equipment installation, operation, maintenance

- Trained personnel: personnel who are trained in technology and safety, have required experience, are aware of possible hazards on themselves in certain operations, and are able to take protective measures to minimize the hazards on themselves and other people
- Personnel who plan to install or maintain the equipment must receive adequate training, be able to correctly perform all operations, and understand all necessary safety precautions and local relevant standards.
- Only qualified professionals or trained personnel are allowed to install, operate, and maintain the equipment.
- Only qualified professionals are allowed to remove safety facilities and inspect the equipment.
- Personnel who will perform special tasks such as electrical operations, working at heights, and operations of special equipment must possess the required local qualifications.
- Only authorized professionals are allowed to replace the equipment or components (including software).
- Only personnel who need to work on the equipment are allowed to access the equipment.

1.2 Electrical Safety

DANGER

Before connecting cables, ensure that the equipment is intact. Otherwise, electric shocks or fire may occur.

DANGER

Non-standard and improper operations may result in fire or electric shocks.

DANGER

Prevent foreign matter from entering the equipment during operations. Otherwise, equipment damage, load power derating, power failure, or personal injury may occur.

MARNING

 
For the equipment that needs to be grounded, install the ground cable first when installing the equipment and remove the ground cable last when removing the equipment.



Do not route cables near the air intake or exhaust vents of the equipment.

General Requirements

- Follow the procedures described in the document for installation, operation, and maintenance. Do not reconstruct or alter the equipment, add components, or change the installation sequence without permission.
- Obtain approval from the national or local electric utility company before connecting the equipment to the grid.
- Observe the power plant safety regulations, such as the operation and work ticket mechanisms.
- Install temporary fences or warning ropes and hang "No Entry" signs around the operation area to keep unauthorized personnel away from the area.
- Before installing or removing power cables, turn off the switches of the equipment and its upstream and downstream switches.
- Before performing operations on the equipment, check that all tools meet the requirements and record the tools. After the operations are complete, collect all of the tools to prevent them from being left inside the equipment.
- Before installing power cables, check that cable labels are correct and cable terminals are insulated.
- When installing the equipment, use a torque tool of a proper measurement range to tighten the screws. When using a wrench to tighten the screws, ensure that the wrench does not tilt and the torque error does not exceed 10% of the specified value.
- Ensure that bolts are tightened with a torque tool and marked in red and blue after double-check. Installation personnel mark tightened bolts in blue.
 Quality inspection personnel confirm that the bolts are tightened and then mark them in red. (The marks should cross the edges of the bolts.)



- If the equipment has multiple inputs, disconnect all the inputs before operating the equipment.
- Before maintaining a downstream electrical or power distribution device, turn off the output switch on the power supply equipment.
- During equipment maintenance, attach "Do not switch on" labels near the upstream and downstream switches or circuit breakers as well as warning signs to prevent accidental connection. The equipment can be powered on only after troubleshooting is complete.
- Do not open equipment panels.
- Check equipment connections periodically, ensuring that all screws are securely tightened.
- Only qualified professionals can replace a damaged cable.
- Do not scrawl, damage, or block any labels or nameplates on the equipment. Promptly replace labels that have worn out.

• Do not use solvents such as water, alcohol, or oil to clean electrical components inside or outside of the equipment.

Grounding

- Ensure that the grounding impedance of the equipment complies with local electrical standards.
- Ensure that the equipment is connected permanently to the protective ground. Before operating the equipment, check its electrical connection to ensure that it is reliably grounded.
- Do not work on the equipment in the absence of a properly installed ground conductor.
- Do not damage the ground conductor.

Cabling Requirements

- When selecting, installing, and routing cables, follow local safety regulations and rules.
- When routing power cables, ensure that there is no coiling or twisting. Do not join or weld power cables. If necessary, use a longer cable.
- Ensure that all cables are properly connected and insulated, and meet specifications.
- Ensure that the slots and holes for routing cables are free from sharp edges, and that the positions where cables are routed through pipes or cable holes are equipped with cushion materials to prevent the cables from being damaged by sharp edges or burrs.
- Ensure that cables of the same type are bound together neatly and straight and that the cable sheath is intact. When routing cables of different types, ensure that they are away from each other without entanglement and overlapping.
- Secure buried cables using cable supports and cable clips. Ensure that the cables in the backfill area are in close contact with the ground to prevent cable deformation or damage during backfilling.
- If the external conditions (such as the cable layout or ambient temperature) change, verify the cable usage in accordance with the IEC-60364-5-52 or local laws and regulations. For example, check that the current-carrying capacity meets requirements.
- When routing cables, reserve at least 30 mm clearance between the cables and heat-generating components or areas. This prevents deterioration or damage to the cable insulation layer.

1.3 Environment Requirements

⚠ DANGER

Do not expose the equipment to flammable or explosive gas or smoke. Do not perform any operation on the equipment in such environments.

DANGER

Do not store any flammable or explosive materials in the equipment area.

⚠ DANGER

Do not place the equipment near heat sources or fire sources, such as smoke, candles, heaters, or other heating devices. Overheat may damage the equipment or cause a fire.

WARNING

Install the equipment in an area far away from liquids. Do not install it under areas prone to condensation, such as under water pipes and air exhaust vents, or areas prone to water leakage, such as air conditioner vents, ventilation vents, or feeder windows of the equipment room. Ensure that no liquid enters the equipment to prevent faults or short circuits.

WARNING

To prevent damage or fire due to high temperature, ensure that the ventilation vents or heat dissipation systems are not obstructed or covered by other objects while the equipment is running.

General Requirements

- Ensure that the equipment is stored in a clean, dry, and well ventilated area with proper temperature and humidity and is protected from dust and condensation.
- Keep the installation and operating environments of the equipment within the allowed ranges. Otherwise, its performance and safety will be compromised.
- Do not install, use, or operate outdoor equipment and cables (including but not limited to moving equipment, operating equipment and cables, inserting connectors to or removing connectors from signal ports connected to outdoor facilities, working at heights, performing outdoor installation, and opening doors) in harsh weather conditions such as lightning, rain, snow, and level 6 or stronger wind.
- Do not install the equipment in an environment with dust, smoke, volatile or corrosive gases, infrared and other radiations, organic solvents, or salty air.
- Do not install the equipment in an environment with conductive metal or magnetic dust.
- Do not install the equipment in an area conducive to the growth of microorganisms such as fungus or mildew.
- Do not install the equipment in an area with strong vibration, noise, or electromagnetic interference.

- Ensure that the site complies with local laws, regulations, and related standards.
- Ensure that the ground in the installation environment is solid, free from spongy or soft soil, and not prone to subsidence. The site must not be located in a low-lying land or an area prone to water accumulation, and the horizontal level of the site must be above the highest water level of that area in history.
- Do not install the equipment in a position that may be submerged in water.
- If the equipment is installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the equipment using cement or gravel (recommended area: 3 m x 2.5 m).
- Do not install the equipment outdoors in salt-affected areas because it may be corroded. A salt-affected area refers to the region within 500 m of the coast or prone to sea breeze. Regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).
- Before opening doors during the installation, operation, and maintenance of the equipment, clean up any water, ice, snow, or other foreign objects on the top of the equipment to prevent foreign objects from falling into the equipment.
- When installing the equipment, ensure that the installation surface is solid enough to bear the weight of the equipment.
- After installing the equipment, remove the packing materials such as cartons, foam, plastics, and cable ties from the equipment area.

1.4 Mechanical Safety

MARNING

Ensure that all necessary tools are ready and inspected by a professional organization. Do not use tools that have signs of scratches or fail to pass the inspection or whose inspection validity period has expired. Ensure that the tools are secure and not overloaded.

⚠ WARNING

Do not drill holes into the equipment. Doing so may affect the sealing performance and electromagnetic containment of the equipment and damage components or cables inside. Metal shavings from drilling may short-circuit boards inside the equipment.


General Requirements

• Repaint any paint scratches caused during equipment transportation or installation in a timely manner. Equipment with scratches cannot be exposed for an extended period of time.

- Do not perform operations such as arc welding and cutting on the equipment without evaluation by the Company.
- Do not install other devices on the top of the equipment without evaluation by the Company.
- When performing operations over the top of the equipment, take measures to protect the equipment against damage.
- Use correct tools and operate them in the correct way.

Moving Heavy Objects

• Be cautious to prevent injury when moving heavy objects.

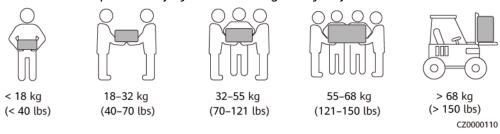


- If multiple persons need to move a heavy object together, determine the manpower and work division with consideration of height and other conditions to ensure that the weight is equally distributed.
- If two persons or more move a heavy object together, ensure that the object is lifted and landed simultaneously and moved at a uniform pace under the supervision of one person.
- Wear personal protective gears such as protective gloves and shoes when manually moving the equipment.
- To move an object by hand, approach to the object, squat down, and then lift the object gently and stably by the force of the legs instead of your back. Do not lift it suddenly or turn your body around.
- Do not quickly lift a heavy object above your waist. Place the object on a workbench that is half-waist high or any other appropriate place, adjust the positions of your palms, and then lift it.
- Move a heavy object stably with balanced force at an even and low speed. Put
 down the object stably and slowly to prevent any collision or drop from
 scratching the surface of the equipment or damaging the components and
 cables.
- When moving a heavy object, be aware of the workbench, slope, staircase, and slippery places. When moving a heavy object through a door, ensure that the door is wide enough to move the object and avoid bumping or injury.
- When transferring a heavy object, move your feet instead of turning your waist around. When lifting and transferring a heavy object, ensure that your feet point to the target direction of movement.
- When transporting the equipment using a pallet truck or forklift, ensure that
 the tynes are properly positioned so that the equipment does not topple.
 Before moving the equipment, secure it to the pallet truck or forklift using
 ropes. When moving the equipment, assign dedicated personnel to take care
 of it.
- Choose sea or roads in good conditions for transportation as transportation by railway or air is not supported. Avoid tilt or jolt during transportation.

Using Ladders


- Use wooden or insulated ladders when you need to perform live-line working at heights.
- Platform ladders with protective rails are preferred. Single ladders are not recommended.
- Before using a ladder, check that it is intact and confirm its load bearing capacity. Do not overload it.
- Ensure that the ladder is securely positioned and held firm.



- When climbing up the ladder, keep your body stable and your center of gravity between the side rails, and do not overreach to the sides.
- When a step ladder is used, ensure that the pull ropes are secured.
- If a single ladder is used, the recommended angle for the ladder against the floor is 75 degrees, as shown in the following figure. A square can be used to measure the angle.

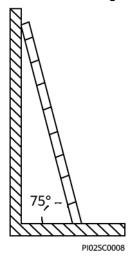


- If a single ladder is used, ensure that the wider end of the ladder is at the bottom, and take protective measures to prevent the ladder from sliding.
- If a single ladder is used, do not climb higher than the fourth rung of the ladder from the top.
- If you use a single ladder to climb up to a platform, ensure that the ladder is at least 1 m higher than the platform.

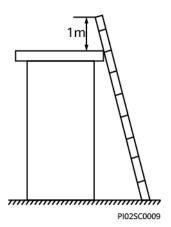

Hoisting

- Only trained and qualified personnel are allowed to perform hoisting operations.
- Install temporary warning signs or fences to isolate the hoisting area.
- Ensure that the foundation where hoisting is performed on meets the load-bearing requirements.
- Before hoisting objects, ensure that hoisting tools are firmly secured onto a fixed object or wall that meets the load-bearing requirements.
- During hoisting, do not stand or walk under the crane or the hoisted objects.
- Do not drag steel ropes and hoisting tools or bump the hoisted objects against hard objects during hoisting.
- Ensure that the angle between two hoisting ropes is no more than 90 degrees, as shown in the following figure.

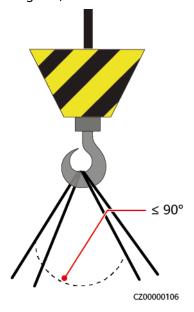

Drilling Holes

- Obtain consent from the customer and contractor before drilling holes.
- Wear protective equipment such as safety goggles and protective gloves when drilling holes.

- To avoid short circuits or other risks, do not drill holes into buried pipes or cables.
- When drilling holes, protect the equipment from shavings. After drilling, clean up any shavings.

2 Overview

2.1 Product Overview

Function

The SUN2000 inverter is a three-phase grid-tied PV string inverter that converts the DC power generated by PV strings into AC power and feeds the power into the power grid.

Model

This document involves the following product models:

- SUN2000-196KTL-H3
- SUN2000-200KTL-H3
- SUN2000-215KTL-H3

Figure 2-1 Model description (SUN2000-196KTL-H3 is used as an example)

 


Table 2-1 Model description

Tag	Meaning	Value
1	Product family	SUN2000: three-phase grid-tied PV string inverter
2	Power class	196K: The power class is 196 kW
		200K: The power class is 185 kW
		215K: The power class is 200 kW

Tag	Meaning	Value
3	Topology	TL: transformerless
4	Product code	H3: product series with the 1500 V DC input voltage


□ NOTE

- The SUN2000-196KTL-H3 is applicable only to the Chinese mainland. For other countries or regions, Huawei does not provide quality assurance.
- The SUN2000-196KTL-H3, SUN2000-200KTL-H3, and SUN2000-215KTL-H3 inverters included in this manual cannot be connected to the same winding of the box-type transformer with other inverters.

Network Application

The inverter applies to grid-tied PV systems for commercial rooftop PV plants and large PV plants. Typically, a grid-tied PV system consists of the PV string, inverter, AC power distribution unit, and step-up transformer.

Figure 2-2 Network application

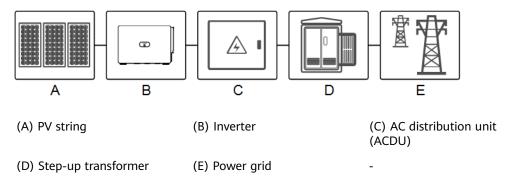


□ NOTE

The SUN2000 is powered by a dedicated power transformer instead of connecting to low voltage overhead power lines.

Supported Power Grid

The inverter supports the IT power grid.

Figure 2-3 Supported power grid

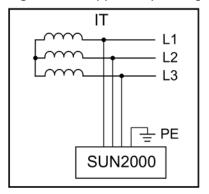


□ NOTE


The SUN2000 supports only IT power grids and does not support TN-C power grids. In a TN-C power grid, if a ground fault occurs on a PV- terminal, the short-circuit circulating current to the ground is generated, which damages the inverter.

2.2 Appearance

Dimensions

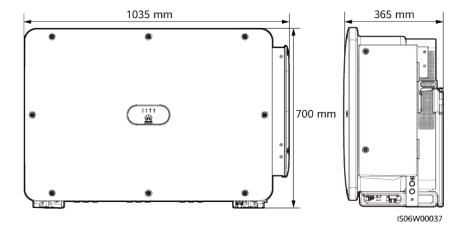

Front View

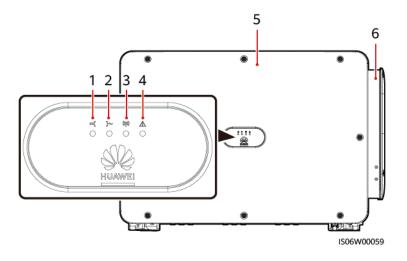

- (1) PV connection indicator
- (4) Alarm/Maintenance indicator
- (2) Grid connection indicator
- (5) Host panel
- (3) Communication indicator
- (6) Maintenance compartment

Table 2-2 LED description


Display Category	Indicator Sta	tus	Meaning
PV indication	LED1	LED4	-
=[]~ (¶)	Steady green	-	At least one PV string is properly connected, and the DC input voltage of the corresponding MPPT circuit is at least 500 V.
	Blinking green at short intervals	Red	An environmental fault occurs at DC side.
	Off	-	The inverter disconnects from all PV strings, or the DC input voltage of all MPPT circuits is less than 500 V.
Grid	LED2	LED4	-
connection indication ■	Steady green	-	The inverter is in grid-tied mode.
	Blinking green at short intervals	Red	An environmental fault occurs at AC side.

Display Category	Indicator Sta	tus	Meaning
	Off	-	The inverter is not in grid-tied mode.
Communicatio	LED3		-
ns indication ■	Blinking green at short intervals		The inverter receives data over RS485 or MBUS communication.
LED3	Off		The inverter has not received data over RS485 or MBUS communication for 10 seconds.
Alarm/O&M	LED4		-
indication =〔]~ (申) ▲	Steady red		A major alarm is generated.
O O O D			If the PV connection indicator and grid connection indicator are both not blinking green fast, replace components or the inverter as instructed by the SUN2000 app.
	Blinking red at short intervals		A minor alarm is generated.
	Blinking red at long intervals		A warning alarm is generated.
	Steady green		Local maintenance succeeds.
	Blinking green at long intervals		In local maintenance or shuts down over a command.
	Blinking green at short intervals		Local maintenance fails.
	Off		No alarm is generated, and no local maintenance operations are performed.

■ NOTE

- Local maintenance refers to operations performed after a universal serial bus (USB)
 flash drive, Bluetooth module, WLAN module, or USB data cable is inserted into the USB
 port of the inverter. For example, local maintenance includes configuration import and
 export using a USB flash drive, and connecting to the SUN2000 app over a Bluetooth
 module, WLAN module, or USB data cable.
- If the alarming and the local maintenance happen concurrently, the alarm/maintenance indicator shows the local maintenance state first. After the USB flash drive, Bluetooth module, WLAN module, or USB data cable is removed, the indicator shows the alarm state.

Bottom View

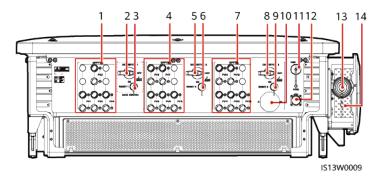

- (1) DC input terminals (controlled by DC SWITCH 1)
- (3) Reset button 1 (RESET 1)
- (5) DC switch 2 (DC SWITCH 2)
- (7) DC input terminals (controlled by DC SWITCH 3)
- (9) Reset button 3 (RESET 3)
- (11) USB port (USB)
- (13) Hole for the AC output power cable

- (2) DC switch 1 (DC SWITCH 1)
- (4) DC input terminals (controlled by DC SWITCH 2)
- (6) Reset button 2 (RESET 2)
- (8) DC switch 3 (DC SWITCH 3)
- (10) Ventilation valve
- (12) Communications port (COM)
- (14) Hole for the tracking system power cable

DC Switch Description

A DANGER

- The DC switches automatically turn off when inverters report an alarm of string in reverse polarity or string current backfeed. Check the fault type on the mobile phone app. After the fault is rectified, press the RESET buttons and then turn on the switches. For details, see 8.6 Resetting and Turning On the DC Switch.
- The DC switches automatically turn off when a fault occurs in the inverters (LED4 is steady red, and the three DC switches are OFF). In this case, contact your technical support. Do not turn on the DC switches by yourself.

Table 2-3 DC Switch Description

Switch Compone nt	Description		
DC SWITCH	ON	The DC switch is ON and can automatically turn off for protection.	
	<u> </u>	The DC switch is ON but cannot automatically turn off for protection.	
	OFF	The DC switch is OFF .	
RESET	When the DC switch automatically turns off for protection, the RESET button will be released.		
	When the RESET button is not pressed, the DC switch can only		
	be turned to the unloaded position and cannot be set to the ON position.		

2.3 Label Description


2.3.1 Label Description

Symbol	Name	Meaning
	Running warning	Potential hazards exist after the inverter is powered on. Take protective measures when operating the inverter.
	Burn warning	Do not touch a running inverter, as the shell becomes hot during operation.
<u> </u>	Large current warning	Before powering on the inverter, ensure that the inverter is grounded because there is a large contact current after the inverter is powered on.

Symbol	Name	Meaning
A C 15 mins	Delayed discharge	High voltage exists after the inverter is powered on. Only qualified and trained electrical technicians are allowed to perform operations on the inverter.
		 Residual voltage exists after the inverter is powered off. It takes 15 minutes for the inverter to discharge to the safe voltage.
<u>i</u>	Refer to documentation	Reminds operators to refer to the documents shipped with the inverter.
	Grounding	Indicates the position for connecting the protective earthing (PE) cable.
Do not disconnect under load! 禁止带负荷断开连接!	Operation warning	Do not remove the DC input connector when the inverter is running.
Discharged 未储能 Charged 储能	Switching operation warning	The DC switch may fail to switch off automatically when it is not completely closed.
	Switch unloaded warning	This position indicates that the DC switch is in unloaded state. Do not set the DC switch to this position.
	Fan operation warning	High voltage exists after the inverter is powered on. Do not touch the fans when the inverter is working.
CAUTION Before replacing the fan, disconnect the FAN-POWER cable and then the fan cable. 更換风扇前,必须先拔除风扇电源线,再拨除风扇线。	Fan replacement warning	Before replacing a fan, disconnect its power connectors.
(1P)PN/ITEM:XXXXXXXXX (32P)Model:SUN2000-XXKTL-XX (S)SN:XXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	Inverter ESN label	Indicates the inverter serial number.
or or > 55 kg (121 lbs)	Weight label	The inverter needs to be carried by four persons or using a pallet truck.

2.3.2 Product Nameplate

Figure 2-4 Nameplate (SUN2000-196KTL-H3 is used as an example)

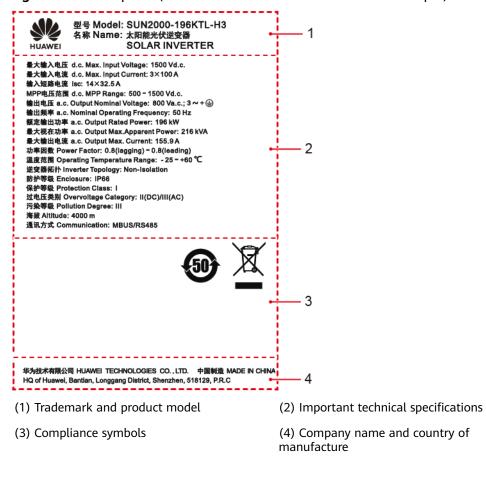

The nameplate figure is for reference only.

2.4 Working Principles

2.4.1 Circuit Diagram

The inverter receives inputs from 14 PV strings. Then the inputs are grouped into three MPPT circuits inside the inverter to track the maximum power point of the PV strings. The DC power is then converted into three-phase AC power through an inverter circuit. Surge protection is supported on both the DC and AC sides.

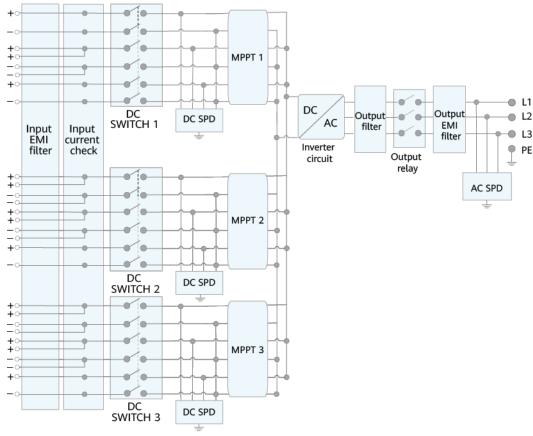


Figure 2-5 Inverter conceptual diagram

IS13P00002

2.4.2 Working Modes

The SUN2000 can work in Standby, Operating, or Shutdown mode.

Operating mode Shutdown Sufficient power command or fault from PV string/ Insufficient power detected. and no fault from PV string is detected. or DC switch is turned off. Standby (Shutdown) Shutdown mode mode command or fault detected. Startup command or fault rectified.

Figure 2-6 Working modes

IS07S00001

Table 2-4 Working mode description


Working Mode	Description
Standby	The SUN2000 enters Standby mode when the external environment does not meet the operating requirements. In Standby mode:
	The SUN2000 continuously performs status check and enters the Operating mode once the operating requirements are met.
	The SUN2000 enters Shutdown mode after detecting a shutdown command or a fault after startup.
Operating	In Operating mode:
	The SUN2000 converts DC power from PV strings into AC power and feeds the power to the power grid.
	The SUN2000 tracks the maximum power point to maximize the PV string output.
	If the SUN2000 detects a fault or a shutdown command, it enters the Shutdown mode.
	The SUN2000 enters Standby mode after detecting that the PV string output power is not suitable for connecting to the power grid for generating power.
Shutdown	In Standby or Operating mode, the SUN2000 enters Shutdown mode after detecting a fault or shutdown command.
	In Shutdown mode, the SUN2000 enters Standby mode after detecting a startup command or that the fault is rectified.

Solar Inverter Storage

The following requirements should be met if the solar inverter is not put into use immediately:

- Do not remove the packing materials, and check the packing materials regularly (recommended: every three months). If any rodent bites are found, replace the packing materials immediately. If the solar inverter is unpacked but not put into use immediately, put it inside the original package with the desiccant bag, and seal it using tape.
- The ambient temperature and humidity should be suitable for the storage. The air must not contain corrosive or flammable gases.


Figure 3-1 Storage temperature and humidity

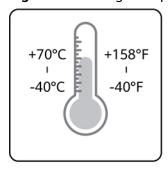



- The solar inverter should be stored in a clean and dry place and be protected from dust and water vapor corrosion. The solar inverter must be protected against rain and water.
- Do not tilt the package or place it upside down.
- To avoid personal injury or device damage, stack inverters with caution to prevent them from falling over.

Figure 3-2 Maximum number of pile-up layers allowed

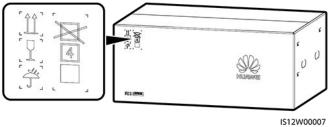

• If the solar inverter has been stored for more than two years, it must be checked and tested by professionals before being put into use.

4 Installation

4.1 Checking Before Installation

Outer Packing Materials

Before unpacking the inverter, check the outer packing materials for damage, such as holes and cracks, and check the inverter model. If any damage is found or the inverter model is not what you requested, do not unpack the package and contact your supplier as soon as possible.

◯ NOTE

You are advised to remove the packing materials within 24 hours before installing the inverter.

Package Contents

NOTICE

• After placing the equipment in the installation position, unpack it with care to prevent scratches. Keep the equipment stable during unpacking.

After unpacking the inverter, check that the contents are intact and complete. If any damage is found or any component is missing, contact your supplier.

■ NOTE

For details about the number of contents, see the *Packing List* in the packing case.

4.2 Preparing Tools

Туре	Tool						
Installation tools	Hammer drill Drill bit: Φ14 mm and Φ16 mm	Socket wrench set	Insulated torque socket wrench (including an extension bar)	Diagonal pliers			
	Wire stripper	Flat-head insulated torque screwdriver Head: 0.6 mm x 3.5 mm	Rubber mallet	Utility knife			
	Cable cutter	Crimping tool Model: PV- CZM-41100; manufacturer: Staubli	Removal wrench Model: 13001462; manufacturer: Staubli	Vacuum cleaner			
		₫		<u> </u>			
	Multimeter DC voltage measurement range ≥ 1500 V DC	Marker	Measuring tape	Bubble or digital level			

Туре	Tool					
	Hydraulic pliers	Heat shrink tubing	Heat gun	Cable tie		
Personal protective equipment (PPE)	Protective gloves	Safety goggles	Dust mask	Safety boots		
	Insulated gloves	-	-	-		

4.3 Determining the Installation Position

4.3.1 Environment Requirements

Basic Requirements

- Do not install the inverter in working or living areas.
- If the device is installed in public places (such as parking lots, stations, and factories) other than working and living areas, install a protective net outside the device, set up a safety warning sign to isolate the device, and prevent unauthorized personnel from approaching the inverter. This is to avoid personal injury or property loss caused by accidental contact or other reasons during device operation.
- If inverters are installed in a place with abundant vegetation, in addition to routine weeding, harden the ground underneath the inverters using cement or gravel (recommended area: 3 m x 2.5 m).
- Do not install the inverter in areas with flammable materials.
- Do not install the inverter in areas with explosive materials.
- Do not install the inverter in areas with corrosive materials.

- Do not install the inverter where its enclosure and heat sinks are easily accessible, because the voltage is high and these parts are hot during operation.
- Install the inverter in a well-ventilated environment for heat dissipation
- If the inverter is installed in an airtight environment, a heat dissipation device or ventilation device must be installed to ensure that the indoor ambient temperature is not higher than the external ambient temperature during operation.
- You are advised to install the inverter in a sheltered place or install an awning over it.
- The inverter will be corroded in salt areas. Before installing the inverter outdoors in salt areas, consult Huawei. A salt area refers to the region within 500 meters from the coast or prone to sea breeze. The regions prone to sea breeze vary with weather conditions (such as typhoons and monsoons) or terrains (such as dams and hills).

Mounting Structure Requirements

- The mounting structure where the inverter is installed must be fire resistant.
- Do not install the inverter on flammable building materials.
- The inverter is heavy. Ensure that the installation surface is solid enough to bear the weight load.
- In residential areas, do not install the inverter on drywalls or walls made of similar materials which have a weak sound insulation performance because the noise generated by the inverter is noticeable.

Figure 4-1 Mounting structure







IS06H00121

4.3.2 Space Requirements

 Reserve enough clearance around the inverter and select an appropriate installation angle to ensure sufficient space for installation and heat dissipation.

IS06W00044

≥ 200 mm
≥ 600 mm


≥ 600 mm

Figure 4-2 Installation space

◯ NOTE

The clearance at the bottom must meet the requirements on the bending radius of the AC output power cable.

Figure 4-3 Installation angle

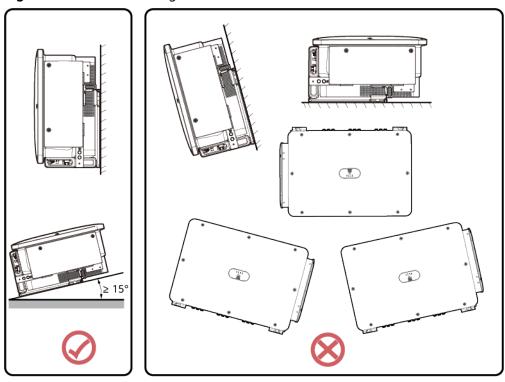

IS06W00043

When installing multiple inverters, install them in horizontal mode if sufficient space is available and install them in triangle mode if no sufficient space is available. Stacked installation is not recommended.

Figure 4-4 Horizontal installation mode (recommended)

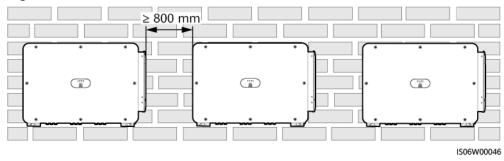


Figure 4-5 Triangle installation mode (recommended)


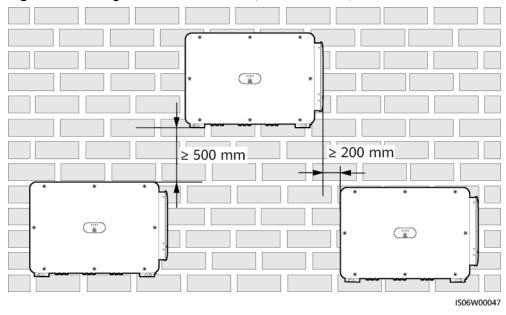


Figure 4-6 Stacked installation mode (not recommended)

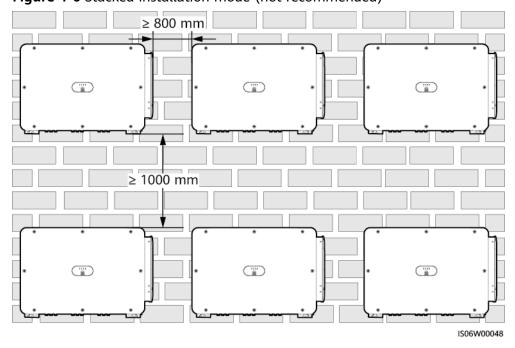


4.4 Installing the Mounting Bracket

Installation Precautions

Figure 4-7 shows the inverter mounting bracket dimensions.

Figure 4-7 Mounting bracket dimensions

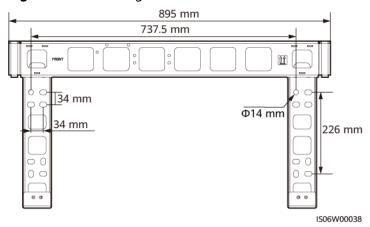


Ⅲ NOTE

The inverter mounting bracket has four groups of tapped holes, each group containing four tapped holes. Mark any hole in each group based on site requirements and mark four holes in total. The two round holes are recommended.

Before installing the mounting bracket, remove the security torx wrench from the mounting bracket and set it aside.

Figure 4-8 Removing a security torx wrench

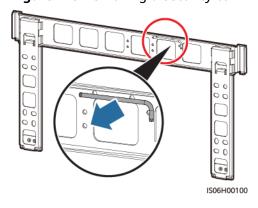

4.4.1 Support-mounted Installation

Support-mounted Installation

Step 1 Install the mounting bracket.

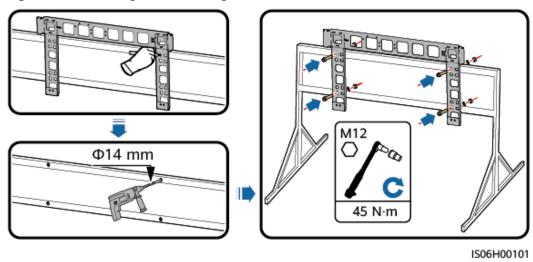


Figure 4-9 Installing the mounting bracket

□ NOTE

The M12x40 bolt assemblies are delivered with the SUN2000 (bound to the mounting bracket). If the bolt assembly length does not meet the installation requirements, prepare M12 bolt assemblies by yourself and use them together with the delivered M12 nuts.

----End

4.4.2 Wall-mounted Installation

Wall-mounted Installation

Step 1 Install the mounting bracket.

MARNING

Avoid drilling holes in the water pipes and power cables buried in the wall.

NOTICE

- To prevent dust inhalation or contact with eyes, wear safety goggles and an anti-dust respirator when drilling holes.
- Clean up any dust in and around the holes using a vacuum cleaner and measure the distance between holes. If the holes are inaccurately positioned, drill a new set of holes.
- Level the head of the expansion sleeve with the concrete wall after removing the bolt, spring washer, and flat washer. Otherwise, the mounting bracket will not be securely installed on the wall.

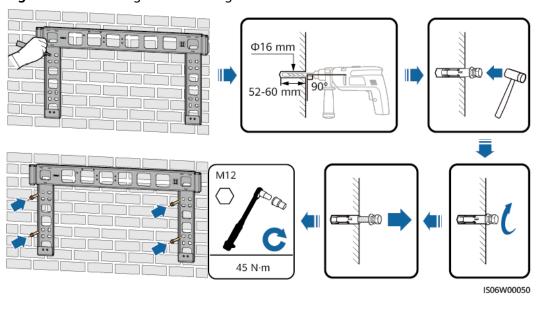


Figure 4-10 Securing the mounting bracket

----End

4.5 Installing the Inverter


Preparing for the Installation

Before installing the inverter, take it out from the packing case and move it to the installation position.

□ NOTE


Handles are packed in a fitting bag and are not delivered with the inverter.

Figure 4-11 Taking out and moving the inverter

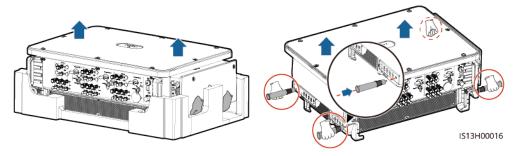

NOTICE

- Move the inverter with the help of other three persons or using an appropriate transportation tool.
- Do not place the inverter with its wiring terminals at the bottom contacting the floor or any other objects because the terminals are not designed to bear the weight of the inverter.
- When you need to temporally place the inverter on the ground, use foam, paper, or other protection material to prevent damage to its cover.
- Do not lift or hoist the inverter using the bottom holes of the handles to prevent the handles from cracking.

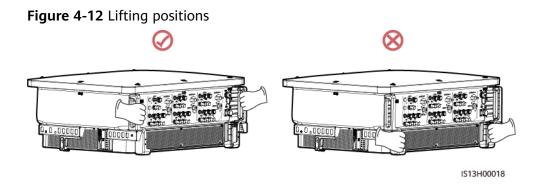

Installing the Inverter

- **Step 1** Mount the inverter on the mounting bracket.
- **Step 2** Tighten the two screws at the bottom of the inverter.

3 M6 5 N·m

Figure 4-13 Installation

Supplementary Notes

If the inverter is installed in a high position, you can hoist it.

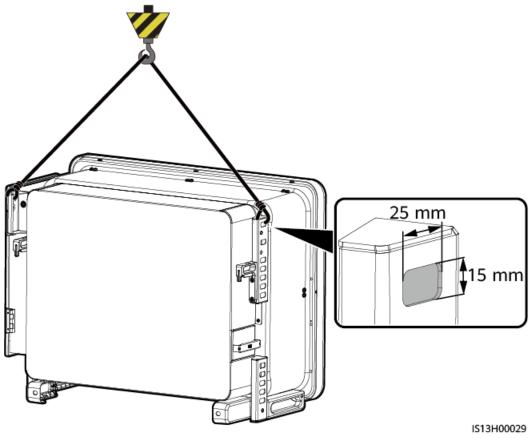


Figure 4-14 Hoisting the inverter

5 Electrical Connections

5.1 Precautions

⚠ DANGER

When exposed to sunlight, the PV arrays supply DC voltage to the SUN2000. Before connecting cables, ensure that the two DC switches on the SUN2000 are OFF. Otherwise, the high voltage of the SUN2000 may result in electric shocks.

DANGER

- The site must be equipped with qualified fire fighting facilities, such as fire sand and carbon dioxide fire extinguishers.
- Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.

№ WARNING

- The equipment damage caused by incorrect cable connections is beyond the warranty scope.
- Only certified electrician can perform electrical terminations.
- Wear proper PPE at all time when terminating cables.
- To prevent poor cable connection due to overstress, it is recommended that the cables be bent and reserved, and then connected to the appropriate ports.

! CAUTION

- Stay away from the equipment when preparing cables to prevent cable scraps from entering the equipment. Cable scraps may cause sparks and result in personal injury and equipment damage.
- When routing PV cables, the positive and negative PV string cables should be routed in different pipes to prevent cable damage and short circuits caused by improper operations during construction.

□ NOTE

The cable colors shown in the electrical connection diagrams provided in this chapter are for reference only. Select cables in accordance with local cable specifications (green-and-yellow cables are only used for grounding).

5.2 Crimping an OT or DT Terminal

Requirements for the OT or DT Terminal

- If a copper cable is used, use copper wiring terminals.
- If a copper-clad aluminum cable is used, use copper wiring terminals.
- If an aluminum alloy cable is used, use copper-aluminum transition wiring terminals, or aluminum wiring terminals along with copper-aluminum transition spacers.

NOTICE

- Do not connect aluminum wiring terminals to the AC terminal block. Otherwise the electrochemical corrosion will occur and affect the reliability of cable connections.
- Comply with the IEC61238-1 requirements when using copper-aluminum transition wiring terminals, or aluminum wiring terminals along with copper-aluminum transition spacers.
- If copper-aluminum transition spacers are used, pay attention to the front and rear sides. Ensure that the aluminum sides of spacers are in contact with aluminum wiring terminals, and copper sides of spacers are in contact with the AC terminal block.

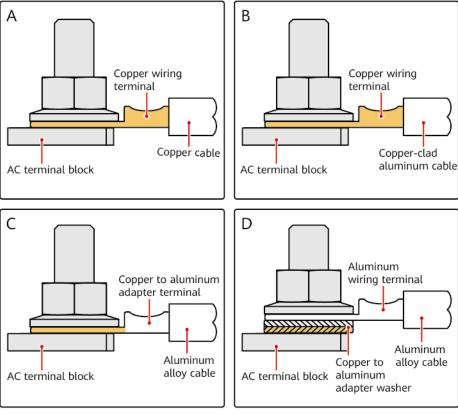


Figure 5-1 Requirements for the OT/DT terminal

IS03H00062

Crimping an OT or DT Terminal

NOTICE

- Pay attention not to scratch the core wire when stripping a cable.
- The cavity formed after the conductor crimp strip of the OT or DT terminal is crimped must wrap the core wires completely. The core wires must contact the OT or DT terminal closely.
- Wrap the wire crimping area with a heat shrink tubing or PVC insulation tape. The heat shrink tubing is used as an example.
- When using a heat gun, protect devices from being scorched.

Figure 5-2 Crimping an OT terminal


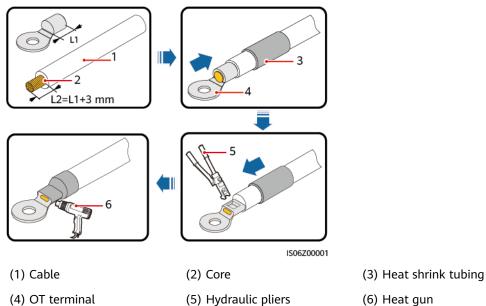


Figure 5-3 Crimping a DT terminal

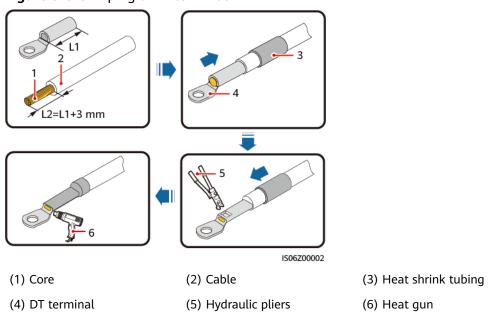

5.3 Opening the Maintenance Compartment Door

Precautions


NOTICE

- Do not open the host panel cover of the inverter.
- Before opening the maintenance compartment door, ensure that no electrical connections are made for the inverter on the AC or DC side.
- If you need to open the maintenance compartment door in rainy or snowy days, take protective measures to prevent rain or snow entering the maintenance compartment. If unavoidable, do not open the maintenance compartment door.
- Do not leave unused screws in the maintenance compartment.

Procedure

- **Step 1** Partially loosen the two screws on the maintenance compartment door.
- **Step 2** Open the maintenance compartment door and install a support bar.

Figure 5-4 Opening the maintenance compartment door

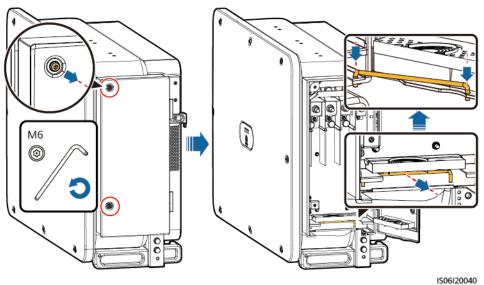

Step 3 Remove the accessories that are bound in the maintenance compartment for future use.

◯ NOTE

A three-hole rubber plug is bound in the maintenance compartment. After removing the rubber plug, save it properly for future use.

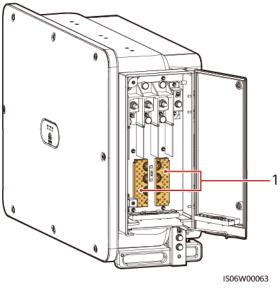


Figure 5-5 Removing the accessories from the maintenance compartment

(1) Crimping modules

----End

5.4 (Optional) Replacing the Crimping Module


Procedure

□ NOTE

If the AC output power cable has a single core, replace the crimping module.

Step 1 Replace the crimping module.

Figure 5-6 Replacing the crimping module

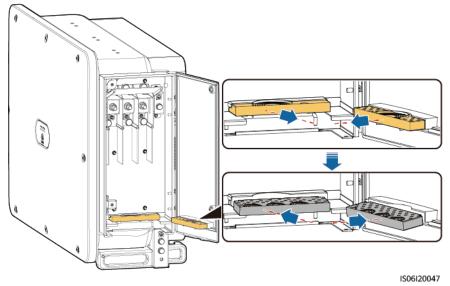

----End

5.5 (Optional) Installing the Power Cable of the Tracking System

Precautions

NOTICE

- A switch-disconnector-fuse or fuse-switch-disconnector with a voltage of no less than 800 V, current of 16 A, and protection type of gM needs to be installed between the inverter and the tracker controller for protection.
- The cable between the wiring terminal on the power cable and the switch-disconnector-fuse or fuse-switch-disconnector should be less than or equal to 2.5 m.
- Connect the power cable of the tracking system before the AC output power cable. Otherwise, reworking will be caused.


Cable Specifications

Recommended: dual-layer three-core outdoor copper cable with a conductor cross-sectional area of 10 mm² and a cable outer diameter of 15–18 mm.

Procedure

Step 1 Connect the power cable of the tracking system to the terminal block.

Figure 5-7 Cable connection

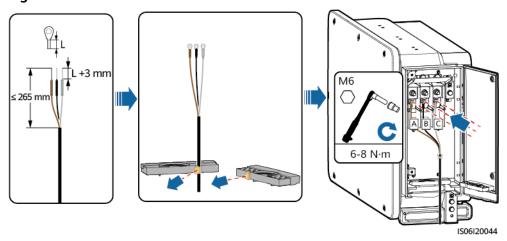

----End

5.6 Connecting the AC Output Power Cable

Precautions

A three-phase AC switch should be installed on the AC side of the inverter. To ensure that the inverter can safely disconnect itself from the power grid when an exception occurs, select a proper overcurrent protection device in compliance with local power distribution regulations.

MARNING

- Do not connect loads between an inverter and an AC switch that directly connects to the inverter. Otherwise, the switch may trip by mistake.
- If an AC switch is used with specifications beyond local standards, regulations, or the Company's recommendations, the switch may fail to turn off in a timely manner in case of exceptions, causing serious faults.

CAUTION

Each inverter must be equipped with an AC output switch. Multiple inverters cannot connect to the same AC switch.

The inverter is integrated with a comprehensive residual current detection unit to distinguish fault current from residual current. Upon detecting that the residual current exceeds the threshold, the inverter immediately disconnects from the power grid.

Cable Connection Precautions

NOTICE

- The cable outer diameter can be measured using the ruler sticker in the maintenance compartment.
- Ensure that the cable jacket is in the maintenance compartment.
- Ensure that the AC output power cable is secured. Failing to do so may cause
 the solar inverter to malfunction or damage to its terminal block by issues such
 as overheating.
- The ground point on the enclosure is preferred to connect to the PE cable for the inverter.
- The PE point in the maintenance compartment is used for connecting to the PE cable included in the multi-core AC power cable.
- There are two ground points on the chassis shell and you only need either of them.

• It is recommended that the PE cable of the inverter be connected to a nearby ground point. For a system with multiple inverters connected in parallel, connect the ground points of all inverters to ensure equipotential connections to ground cables.

Cable Specifications

- If you connect a ground cable to the ground point on the chassis shell, you are advised to use a three-core (L1, L2, and L3) outdoor cable or three single-core outdoor cables.
- If you connect a ground cable to the ground point in the maintenance compartment, you are advised to use a four-core (L1, L2, L3, and PE) outdoor cable.
- You need to prepare the OT or DT terminal that matches the cable.


Table 5-1 AC power cable specifications

Cable Type	Conductor Cross- Sectional Area	Cable Outer Diameter
Copper-core cable	50–240 mm ²	Multi-core cable: 24– 66 mm
Copper-clad aluminum cable and aluminum alloy cable	 Multi-core cable: 70– 240 mm² Single-core cable: 70– 240 mm^{2[2]} 	• Single-core cable: 14–32 mm ^[1]

Note [1]: For some models, the outer diameter of a single-core cable ranges from 14 mm to 36 mm based on the label in the maintenance compartment.

Note [2]: For some models, when the OT/DT terminal is crimped as shown in the following figure and the rubber baffle plate of the AC wiring terminal is 112 mm, the maximum conductor cross-sectional area of the single-core cable can be 400 mm².

Figure 5-8 Specifications of the Crimped OT/DT Terminal

 

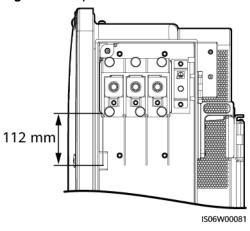


Figure 5-9 Specification of the Rubber Baffle Plate

◯ NOTE

- The cable diameter must comply with local cable standards. The factors that affect cable selection include the rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.
- When the MBUS is used for communication, it is recommended that the multi-wire cable be used. The maximum communication distance is 1000 m. If other types of AC power cables are used, contact Huawei technical support.

Table 5-2 PE cable specifications

Conductor Cross-Sectional Area S of the AC Power Cable (Unit: mm²)	Conductor Cross-Sectional Area S _P of the PE Cable (Unit: mm ²)
S > 35	$S_P \ge S/2$

The specifications are valid only if the conductors of the PE cable and AC power cable use the same material. If the materials are different, ensure that the conductor cross-sectional area of the PE cable produces a conductance equivalent to that of the cable specified in this table. The specifications of the PE cable are subject to this table or calculated according to IEC 60364-5-54.

Connecting the PE Cable

Step 1 Secure the PE cable using the ground screw.

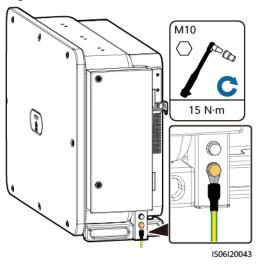


Figure 5-10 Cable connection

Step 2 (Optional) Apply silica gel or paint on the ground terminal to protect it against corrosion.

----End

Connecting the AC Output Power Cable (Multi-core)

Step 1 Connect the AC cable to the terminal block.

NOTICE

Sufficient slack should be provided in the PE cable to ensure that the last cable bearing the force is the PE cable when the AC output power cable bears pulling force due to force majeure.

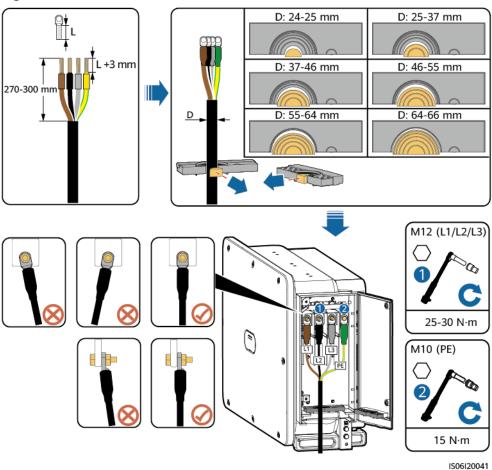


Figure 5-11 Cable connection

----End

Connecting the AC Output Power Cable (Single-core)

Step 1 Connect the AC cable to the terminal block.

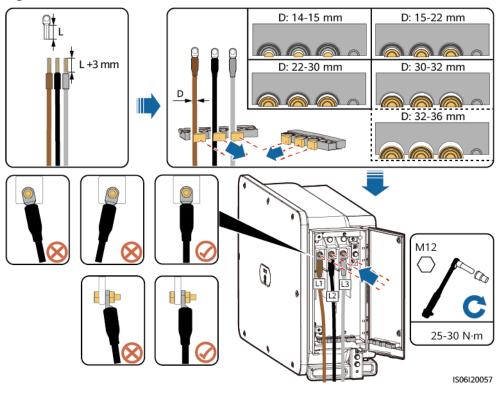


Figure 5-12 Cable connection


----End

□ NOTE

The 32–36 mm cable is supported only by some models. Refer to the corresponding label to get the supported size.

Bending Radius

Figure 5-13 Bending Radius

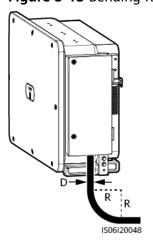

Multi-Core Cable		Single-Core Cable	
Unarmored	Armored	Unarmored	Armored
R ≥ 15D	R ≥ 12D	R ≥ 20D	R ≥ 15D
P indicates the handing radius and D indicates the outer diameter of the cable			

R indicates the bending radius, and D indicates the outer diameter of the cable.

◯ NOTE

The AC power cable must be routed vertically into the maintenance compartment.

5.7 Installing the DC Input Power Cable

Precautions

⚠ DANGER

- Before connecting the DC input power cable, ensure that the DC voltage is within the safe range (lower than 60 V DC) and that the three DC switches on the inverter are set to OFF. Failure to do so may result in electric shocks.
- When the inverter operates in grid-tied mode, do not perform maintenance or operations on the DC circuit, such as connecting or disconnecting a PV string or a PV module in the PV string. Failure to do so may cause electric shocks or arcing, which may also cause fire.

WARNING

Ensure that the following conditions are met. Otherwise, the inverter may be damaged, or even a fire could happen.

- The open-circuit voltage of each PV string must always be 1500 V DC or lower.
- The polarities of electric connections are correct on the DC input side. The
 positive and negative terminals of a PV module connect to corresponding
 positive and negative DC input terminals of the inverter.


NOTICE

- Ensure that the PV module output is well insulated to ground.
- The PV strings connecting to the same MPPT circuit should contain the same number of identical PV modules. If the number of PV modules in a PV string is more than 10% less than that in other PV strings, the caused PV module damage is not covered under any warranty.
- The inverter does not support full parallel connection for PV strings (full parallel connection: PV strings connect to one another in parallel outside the inverter and then connect to the inverter separately).
- During the installation of PV strings and the inverter, the positive or negative terminals of PV strings may be short-circuited to ground if the power cable is not properly installed or routed. In this case, an AC or DC short circuit may occur and damage the inverter. The caused device damage is not covered under any warranty.

Terminal Description

The inverter provides 14 DC input terminals, which are controlled by its three DC switches. DC SWITCH 1 controls DC input terminals 1–4, DC SWITCH 2 controls DC input terminals 5–9, and DC SWITCH 3 controls DC input terminals 10–14.

Figure 5-14 DC terminals

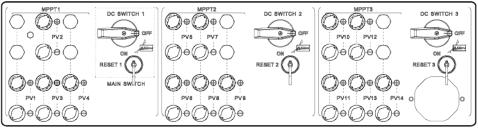

IS13W00010

Requirements for selecting DC input terminals:

- 1. The PV1 DC input terminal must be connected to a PV string.
- 2. PV1, PV3, PV4, PV6, PV8, PV9, P11, PV13, and PV14 strings are preferentially connected.

For example, if the number of input routes is 9–14, the DC input terminals are selected as follows.

Numbe r of PV Strings	Terminal Selection	Numb er of PV Strings	Terminal Selection
9	PV1, PV3, PV4, PV6, PV8, PV9, PV11, PV13 and PV14	10	PV1, PV2, PV3, PV4, PV6, PV8, PV9, PV11, PV13 and PV14

Numbe r of PV Strings	Terminal Selection	Numb er of PV Strings	Terminal Selection
11	PV1, PV2, PV3, PV4, PV5, PV6, PV8, PV9, PV11, PV13 and PV14	12	PV1, PV2, PV3, PV4, PV5, PV6, PV8, PV9, PV10, PV11, PV13 and PV14
13	PV1, PV2, PV3, PV4, PV5, PV6, PV7, PV8, PV9, PV10, PV11, PV13 and PV14	14	PV1, PV2, PV3, PV4, PV5, PV6, PV7, PV8, PV9, PV10, PV11, PV12, PV13 and PV14

■ NOTE

If a SUN2000-196KTL-H3, SUN2000-200KTL-H3, or SUN2000-215KTL-H3 inverter is used, do not connect each individual PV string in parallel or connect them using Y-branch connectors. Otherwise, the inverter may be damaged.

Cable Specifications

Cable Type	Conductor Cross- sectional Area (Unit: mm²)	Cable Outer Diameter (Unit: mm)
PV cable that meets the 1500 V standard	4–6	4.7-6.4

NOTICE

Cables with high rigidity, such as armored cables, are not recommended, because poor contact may be caused by the bending of cables.

Procedure

NOTICE

- Use the MC4 EVO2 PV connectors delivered with the inverter. If the PV connectors are lost or damaged, purchase the connectors of the same model. The device damage caused by incompatible PV connectors is beyond the warranty scope.
- For models of the crimping tool and removal wrench, use the recommended model or contact your Staubli dealer.

Step 1 Install the DC input power cable.

NOTICE

- The DC voltage measurement range of the multimeter must be at least 1500 V.
- If the voltage is a negative value, the DC input polarity is incorrect and needs correction.
- If the voltage is greater than 1500 V, too many PV modules configured to the same string. Remove some PV modules.
- Connect the PV string connector to the inverter connector, and then pull back the PV string connector along the axial direction to check whether the connectors are securely connected.
- The connector must be securely connected. Damages caused by improper connection are not covered under the warranty.

Figure 5-15 Cable connection


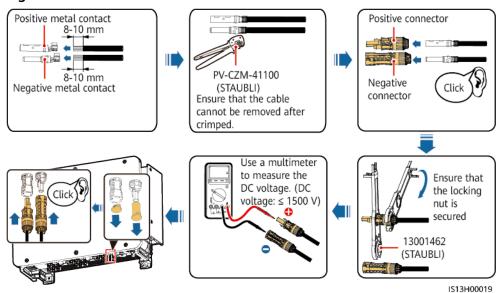



Figure 5-16 Connector connection

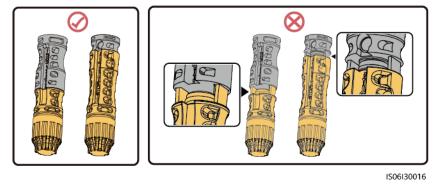

NOTICE

During DC input power cabling, leave at least 50 mm of slack. The axial tension on PV connectors must not exceed 80 N. Radial stress or torque must not be generated on PV connectors.

Figure 5-17 DC input power cabling requirement

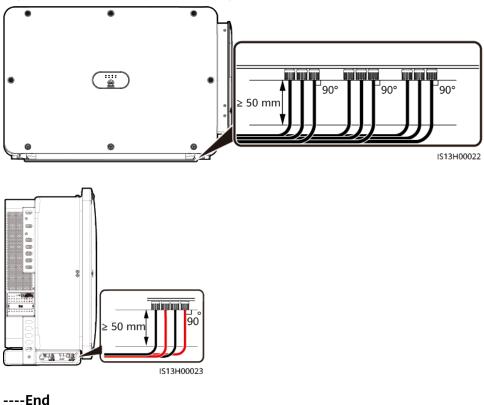


5.8 Installing the Communications Cable

Precautions

When routing communications cables, separate communications cables from power cables to prevent communication from being affected.

Pin Definitions of Communications Ports

Figure 5-18 Communications ports

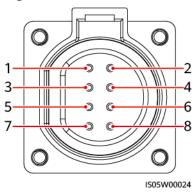

Port	Pin	Definition	Pin	Definition	Description	
RS485-1	1	RS485A IN, RS485 differential signal+	2	RS485A OUT, RS485 differential signal+	Used for cascading inverters or	
	3	RS485B IN, RS485 differential signal-	4	RS485B OUT, RS485 differential signal-	connecting to devices such as the SmartLogger.	
PE	5	PE, shielding ground	6	PE, shielding ground	-	
RS485-2	7	RS485A, RS485 differential signal+	8	RS485B, RS485 differential signal-	Used for connecting to RS485 slave devices.	

Procedure

Step 1 Install the communications cable.

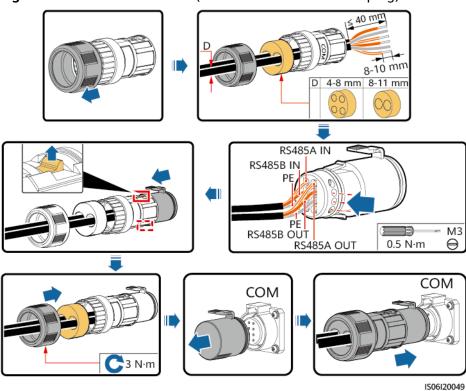


Figure 5-19 Cable connection (4-8 mm four-hole rubber plug)

NOTICE

Block unused cable holes using plugs and tighten cable glands.

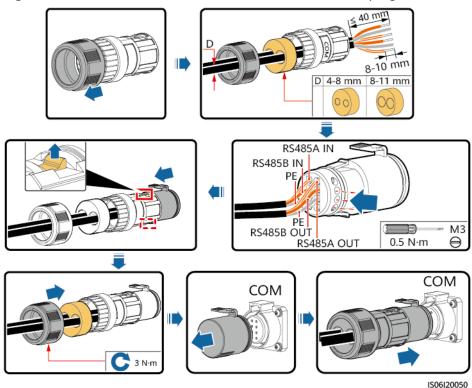


Figure 5-20 Cable connection (4–8 mm two-hole rubber plug)

NOTICE

- If three communications cables are to be connected, use the three-hole rubber plug that is bound in the maintenance compartment.
- Block unused cable holes using plugs and tighten cable glands.

----End

5.9 Closing the Maintenance Compartment Door

Procedure

Step 1 Adjust the support bar, close the maintenance compartment door and tighten the two screws on the door.

M6 © N·m

Figure 5-21 Closing the door

----End

6 System Commissioning

6.1 Check Before Power-on

- 1. The inverter is installed correctly and securely.
- 2. Check that the DC switches and downstream AC output switch are OFF.
- Check that all ground cables are connected securely and reliably.
- 4. All AC output power cables are connected correctly and securely, without open circuits or short circuits.
- 5. All DC input power cables are connected correctly and securely, without open circuits or short circuits.
- 6. The communications cable is connected correctly and securely.
- 7. Check that the maintenance compartment interior is clean and tidy, without foreign matter.
- 8. The maintenance compartment door is closed and the door screws are tightened.
- 9. Idle DC input terminals are sealed.
- 10. Check whether idle USB and RESET ports are covered with a waterproof plug.

6.2 System Power-On

Precautions

DANGER

• Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.

• WARNING

When LED2 is steady green (meaning that the inverter is grid-tied), do not turn on any DC switch. Otherwise, the inverter may be damaged because the insulation resistance is not detected.

NOTICE

- Before the equipment is put into operation for the first time, ensure that the parameters are set correctly by professional personnel. Incorrect parameter settings may result in noncompliance with local grid connection requirements and affect the normal operations of the equipment.
- Before turning on the AC switch between the inverter and the power grid, check that the AC voltage is within the specified range using a multimeter.
- If the inverter has not been running for more than half a year after being mounted, it must be checked and tested by professionals before being put into operation.
- When powering on the system, you must switch on DC SWITCH 1 first, and then switch on DC SWITCH 2 and DC SWITCH 3 after LED 1 is steady on. Huawei shall not be held liable for damages caused by failing to follow this sequence.
- The DC switches support automatic disconnection. Reverse polarity or improper PV module configuration will trigger automatic disconnection of DC switches. In this case, do not forcibly turn on the switches before the faults are fixed. Otherwise, damages caused by the forced switch-on will not be covered under any warranty.
- Do not turn the DC switch to the unloaded position
- When the system is powered on or running, do not place obstacles (such as cables) to block the rotation of the handle or manually hold the handle.
 Otherwise, the DC switch cannot be automatically disconnected.

Procedure

Step 1 Turn on the AC switch between the SUN2000 and the power grid.

NOTICE

If you perform **Step 2** before **Step 1**, the inverter reports a fault about abnormal shutdown. The inverter can start normally after the fault is automatically cleared.

- **Step 2** Set DC SWITCH 1 at the bottom of the SUN2000 chassis to ON. When you hear a click sound, the switch is ON.
- **Step 3** Check the status of LED 1.
 - If it is steady green, set DC SWITCH 2 and DC SWITCH 3 to ON.

• Wait one minute after power-on, if LED 1 is off, do not turn on other DC switches. At the same time, turn off DC SWITCH 1 and check whether the input power cables are correctly connected.

Step 4 Observe the LED indicators to check the SUN2000 operating status.

----End

Man-Machine Interactions

7.1 Operations with the App

7.1.1 App Introduction

Functions

- The FusionSolar app is recommended when the SUN2000 is connected to the SmartPVMS. The SUN2000 app is recommended when the SUN2000 is connected to other management systems.
- The SUN2000 or FusionSolar app (app for short) is a mobile phone app that communicates with the SUN2000 over a WLAN/Bluetooth module or a USB data cable to allow for querying alarms, setting parameters, and performing routine maintenance as an easy-to-use maintenance platform.

Connection Mode

After the DC or AC side of the SUN2000 is powered on, you can connect the app to it through a WLAN module, a Bluetooth module or a USB data cable.

NOTICE

- Over a WLAN module: The USB-Adapter2000-C WLAN module is supported.
- Over a Bluetooth module: The USB-Adapter2000-B Bluetooth module is supported.
- Over a USB data cable: The USB 2.0 port is supported. Use the USB data cable delivered with the mobile phone.
- Mobile phone operating system: Android 4.0 or later.
- Recommended phone brands: Huawei and Samsung.


A B C

IS12P00006

(A) SUN2000 (B) WLAN module or (C) Mobile phone

Figure 7-1 Connection over a WLAN module or a Bluetooth module

Figure 7-2 Connection over a USB data cable

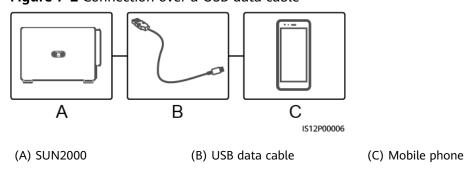

Bluetooth module

NOTICE

- When you use the SUN2000 app to set parameters for the inverter, setting
 items on certain parameter setting screens are not displayed if the AC switch
 between the inverter and the power grid is turned on but the three DC switches
 on the inverter are not in the ON position. Switch the three DC switches to the
 ON position and then reset relevant parameters.
- If you change the grid code, some parameters may be restored to factory defaults. After the grid code is changed, check whether the previously set parameters are affected.
- Delivering a reset, factory reset, shutdown, or upgrade command to the inverters may cause power grid connection failure, which affects the energy yield.
- Only professionals are allowed to set the grid parameters, protection
 parameters, feature parameters, and power adjustment parameters of the
 inverters. If the grid parameters, protection parameters, and feature parameters
 are incorrectly set, the inverters may not connect to the power grid. If the
 power adjustment parameters are incorrectly set, the inverters may not connect
 to the power grid as required. In these cases, the energy yield will be affected.

Ⅲ NOTE

- Configurable parameters vary depending on the grid code. The actual screen may vary.
- The parameter names, value ranges, and default values are subject to change. The actual display may vary.

7.1.2 Downloading and Installing the App

- FusionSolar app: Scan the QR code and download the latest installation package.
- SUN2000 app: Log in to Huawei AppGallery (https://appstore.huawei.com), search for **SUN2000**, and download the app installation package. You can also scan the QR code to download the installation package.

QR code:







FusionSolar

SUN2000 (Android)

SUN2000 (iOS)

7.1.3 Logging In to the App

Prerequisites

- The DC or AC side of the SUN2000 has been energized.
- Connection over a WLAN module or a Bluetooth module:
 - a. The WLAN module or Bluetooth module is connected to the **USB** port at the bottom of the SUN2000.
 - b. The WLAN or Bluetooth function is enabled.
 - c. Keep the mobile phone within 5 m from the SUN2000. Otherwise, the communication between them would be affected.
- Connection over a USB cable:
 - a. The USB data cable is connected from the USB port at the bottom of the SUN2000 to the port on the mobile phone.
 - b. If the USB data cable is successfully connected, the message Connected to USB Accessory will pop up on the phone. Otherwise, the cable is not connected.

Procedure

1. Run the app and select a connection mode.

□ NOTE

- The screenshots in this document correspond to the SUN2000 app 3.2.00.013 (Android) and FusionSolar app 5.7.010 (Android).
- When the WLAN connection is used, scan the QR code of the WLAN module to access the login screen.
- When the WLAN connection is used, the initial name of the WLAN hotspot is Adapter-WLAN module SN, and the initial password is Changeme. Use the initial password upon first power-on and change it immediately after login. To ensure account security, change the password periodically and keep the new password in mind. Not changing the initial password may cause password disclosure. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, devices cannot be accessed. In these cases, the user is liable for any loss caused to the PV plant.
- When the Bluetooth connection is used, the connected Bluetooth device is named after last 8 digits of the SN barcode+HWAPP.
- After you select **Use by default for this USB accessory**, a message that asks you to confirm the USB access will not appear if you log in to the app again without removing the USB data cable.
- a. (Scenario in which the SUN2000 is connected to the FusionSolar hosting cloud) Run the FusionSolar app and access the **Device Commissioning** screen.

Figure 7-3 Selecting a connection mode (with network access)

FusionSolar

RusionSolar

Connect

Connect

Connect

Connect

Connect

Connect

Connection record

Connection record

Connection record

Connection record

Figure 7-4 Selecting a connection mode (without network access)





b. (Scenario in which the SUN2000 is connected to other management systems) Run the SUN2000 app and access the operation screen.



Connection record





Figure 7-5 Selecting a connection method

2. Select a login user and enter the login password to access the quick settings screen or the main menu screen.

NOTICE

- The login password is the same as that for the SUN2000 connected to the app and is used only when the SUN2000 connects to the app.
- The initial passwords for **Common User**, **Advanced User**, and **Special User** are all **00000a**.
- Use the initial password upon first power-on and change it immediately after login. To ensure account security, change the password periodically and keep the new password in mind. Not changing the initial password may cause password disclosure. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, devices cannot be accessed. In these cases, the user is liable for any loss caused to the PV plant.
- During the login, if five consecutive invalid password entries are made (the interval between two consecutive entries is less than 2 minutes), the account will be locked for 10 minutes. The password should consist of six characters.
- If you log in to the app after the device connects to the app for the first time or factory defaults are restored, the quick settings screen will be displayed. Set basic parameters as prompted. If you do not set basic parameters for the inverter on the quick settings screen, the screen is still displayed when you log in to the app next time.
- To set SUN2000 basic parameters on the quick settings screen, switch to **Advanced User**. If you log in as **Common User** or **Special User**, enter the password of the advanced user to access the **Quick Settings** screen.

Identity authentication Active power Energy yield of current day 0.000 kW 0.00 twh Monthly energy yield 9.32 MWh 8.50 MAN 1 R Quick settings 83 Device monitoring Maintenance 141 **{6}** Settings Power adjustment

Figure 7-6 Login

7.1.4 Operations Related to the Advanced User

If you log in to the app as **Advanced User**, you can set grid parameters, protection parameters, and feature parameters for the SUN2000.

7.1.4.1 Setting Grid Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Grid Parameters** to access the parameters setting screen.

Figure 7-7 Grid parameters (advanced user)



----End

No.	Parameter	Description
1	Grid Code	Set this parameter based on the grid code of the country or region where the inverter is used and the inverter application scenario.
2	Isolation settings	Set the working mode of the inverter based on the grounding status at DC side and the connection to the power grid.

7.1.4.2 Setting Protection Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Protect Parameters** to go to the parameter setting screen.

Figure 7-8 Protection parameters (advanced user)



----End

Parameter

No.	Parameter	Description
1	Insulation resistance protection threshold (M Ω)	To ensure device safety, the inverter detects the insulation resistance of the input side with respect to ground when it starts a self-check. If the detected value is less than the preset value, the inverter does not connect to the grid.

7.1.4.3 Setting Feature Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Feature Parameters** to access the settings screen.

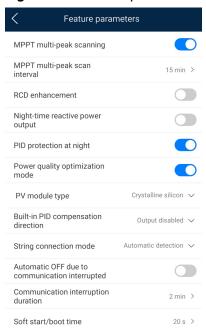


Figure 7-9 Feature parameters (advanced user)

----End

No.	Parameter	Description	Remarks
1	MPPT multi-peak scanning	When the inverter is used in scenarios where PV strings are greatly shaded, set this parameter to Enable , and then the inverter will perform MPPT scanning at regular intervals to locate the maximum power.	-
2	MPPT multi-peak scan interval (min)	Specifies the MPPT scanning interval.	This parameter is displayed when MPPT multi-peak scanning is set to Enable.
3	RCD enhancement	RCD refers to the residual current of the inverter to the ground. To ensure device and personal safety, RCD should be limited to the specified value in the standard. If an AC switch with a residual current detection function is installed outside the inverter, this function should be enabled to reduce the residual current generated when the inverter is running, thereby preventing the AC switch from misoperations.	-

No.	Parameter	Description	Remarks
4	Night-time reactive power output	In some specific application scenarios, a power grid company requires that the inverter can perform reactive power compensation at night to ensure that the power factor of the local power grid meets requirements.	This parameter is displayed when Isolation settings is set to Input ungrounded, with TF .
5	PID protection at night	When the inverter outputs reactive power at night and this parameter is set to Enable , the inverter will shut down automatically if it detects abnormal status of the PID compensation.	-
6	Power quality optimization mode	If this parameter is set to Enable , the inverter output current harmonics will be optimized.	-
7	PV module type	This parameter is used to set different types of PV modules and the shutdown time of the concentration PV module. If the concentration PV modules are shaded, the power drops drastically to 0 and the inverter shuts down. The energy yield would be affected since it takes too long for the power to resume and inverter to restart. The parameter does not need to be set for crystalline silicon and filmy PV modules.	 If this parameter is set to Crystalline silicon or Film, the inverter automatically detects the power of PV modules when they are shaded and shuts down if the power is too low. When concentration PV modules are used: If this parameter is set to CPV 1, the inverter can quickly restart in 60 minutes if the input power of PV modules drops drastically due to shading. If this parameter is set to CPV 2, the inverter can quickly restart in 10 minutes if the input power of PV modules drops drastically due to shading.

No.	Parameter	Description	Remarks
8	Built-in PID compensation direction	When the external PID module compensates the PID voltage for the PV system, set Built-in PID compensation direction to the actual compensation direction of the PID module so that the inverter can output reactive power at night.	-
9	String connection mode	Specifies the connection mode of PV strings.	 When PV strings connect to the inverter separately (All PV strings separated), there is no need to set this parameter. The inverter can automatically detect the connection mode of the PV strings. When PV strings connect to one another in parallel outside the inverter and then connect to it independently (All PV strings connected), set this parameter to All PV strings connected.
10	Automatic OFF due to communication interrupted	The standards of certain countries and regions require that the inverter must shut down after the communication is interrupted for a certain time.	If Automatic OFF due to communication interrupted is set to Enable and the inverter communication is interrupted for a specified time (set by Communication interruption duration), the inverter will automatically shut down.
11	Automatic ON due to communication resumed	If this parameter is set to Enable , the inverter automatically starts after communication recovers. If this parameter is set to Disable , the inverter needs to be started manually after communication recovers.	This parameter is displayed when Automatic OFF due to communication interrupted is set to Enable.
12	Communication interruption duration (min)	Specifies the duration for determining communication interruption. Used for automatic shutdown for protection in case of communication interruption.	-
13	Soft start/boot time (s)	Specifies the duration for the power to gradually increase when the inverter starts.	-

No.	Parameter	Description	Remarks
14	Shutdown gradient (%/s)	Specifies the power change speed when the inverter shuts down.	-
15	Night-time hibernation	The inverter monitors PV strings at night. If this parameter is set to Enable , the monitoring function of the inverter will hibernate at night to reduce power consumption.	-
16	MBUS communication	For inverters that support RS485 communication and MBUS communication, you are advised to set this parameter to Disable to reduce power consumption.	
17	Delay upgrade	This parameter is mainly used in the upgrade scenarios where the PV power supply is disconnected at night due to no sunlight or unstable at dawn or dusk due to poor sunlight.	After the inverter starts to upgrade, if Delay upgrade is set to Enable , the upgrade package is loaded first. After the PV power supply recovers and the activation conditions are met, the inverter automatically activates the upgrade.
18	RS485-2 communication	If this parameter is set to Enable , the RS485-2 port can be used. If the port is not used, you are advised to set this parameter to Disable to reduce power consumption.	-
19	Duration for determining short- time grid disconnection (ms)	The standards of certain countries and regions require that the inverter should not disconnect from the power grid if the power grid experiences a short-time failure. After the fault is rectified, the inverter output power needs to be quickly restored.	-

7.1.5 Operations Related to the Special User


If you log in to the app as **Special User**, you can set grid parameters, protection parameters, feature parameters, and power adjustment parameters for the SUN2000.

7.1.5.1 Setting Grid Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Grid Parameters** to access the parameters setting screen.

Figure 7-10 Power grid parameters (special user)

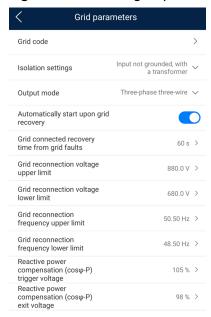

----End

No.	Parameter	Description
1	Grid Code	Set this parameter based on the grid code of the country or region where the inverter is used and the inverter application scenario.
2	Isolation settings	Set the working mode of the inverter based on the grounding status at DC side and the connection to the power grid.
3	Output mode	Specifies whether the inverter output has a neutral wire based on the application scenario.
4	Automatically start upon grid recovery	Specifies whether to allow the inverter to automatically start after the power grid recovers.
5	Grid connected recovery time from grid faults (s)	Specifies the time after which the inverter begins restarting after the power grid recovers.

No.	Parameter	Description	
6	Grid reconnection voltage upper limit (V)	The standards of certain countries and regions require that after the inverter shuts down for protection due to a fault, if the power grid voltage is higher than Grid reconnection voltage upper limit, the inverter is not allowed to reconnect to the grid.	
7	Grid reconnection voltage lower limit (V)	The standards of certain countries and regions require that after the inverter shuts down for protection due to a fault, if the power grid voltage is lower than Grid reconnection voltage lower limit , the inverter is not allowed to reconnect to the grid.	
8	Grid reconnection frequency upper limit (Hz)	The standards of certain countries and regions require that after the inverter shuts down for protection due to a fault, if the power grid frequency is higher than Grid reconnection frequency upper limit , the inverter is not allowed to reconnect to the grid.	
9	Grid reconnection frequency lower limit (Hz)	The standards of certain countries and regions require that after the inverter shuts down for protection due to a fault, if the power grid frequency is lower than Grid reconnection frequency lower limit , the inverter is not allowed to reconnect to the grid.	
10	Reactive power compensation (cosφ-P) trigger voltage (%)	Specifies the voltage threshold for triggering reactive power compensation based on the cosφ-P curve.	
11	Reactive power compensation (cosφ-P) exit voltage (%)	Specifies the voltage threshold for exiting reactive power compensation based on the cosφ-P curve.	

7.1.5.2 Setting Protection Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Protect Parameters** to go to the parameter setting screen.

Protection parameters Voltage unbalance protection threshold 50.0 % > 10-min overvoltage protection threshold 1000.0 V > Level-1 overvoltage 960.0 V > Level-1 overvoltage 1000 ms > protection duration Level-2 overvoltage protection threshold Level-2 overvoltage protection duration 100 ms > Level-1 undervoltage protection threshold 720.0 V > Level-1 undervoltage protection duration 2500 ms > 400.0 V > Level-2 undervoltage protection duration 2000 ms > Level-1 overfrequency 52.00 Hz > Level-1 overfrequency protection duration 200 ms > Level-1 underfrequency protection threshold 46.00 Hz > Level-1 underfrequency 200 ms >

Figure 7-11 Protection parameters (special user)

----End

No.	Parameter	Description
1	Voltage unbalance protection threshold (%)	Specifies the inverter protection threshold when the power grid voltage is unbalanced.
2	10-min overvoltage protection threshold (V)	Specifies the 10-minute overvoltage protection threshold.
3	10-min overvoltage protection duration (ms)	Specifies the 10-minute overvoltage protection duration.
4	Level-N overvoltage protection threshold (V)	Specifies the level-N grid overvoltage protection threshold.
5	Level-N overvoltage protection duration (ms)	Specifies the level-N grid overvoltage protection duration.
6	Level-N undervoltage protection threshold (V)	Specifies the level-N grid undervoltage protection threshold.
7	Level-N undervoltage protection duration (ms)	Specifies the level-N grid undervoltage protection duration.
8	Level-N overfrequency protection threshold (Hz)	Specifies the level-N grid overfrequency protection threshold.

No.	Parameter	Description	
9	Level-N overfrequency protection duration (ms)	Specifies the level-N grid overfrequency protection duration.	
10	Level-N underfrequency protection threshold (Hz)	Specifies the level-N grid underfrequency protection threshold.	
11	Level-N underfrequency protection duration (ms)	Specifies the level-N grid underfrequency protection duration.	

7.1.5.3 Setting Feature Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Feature Parameters** to access the settings screen.

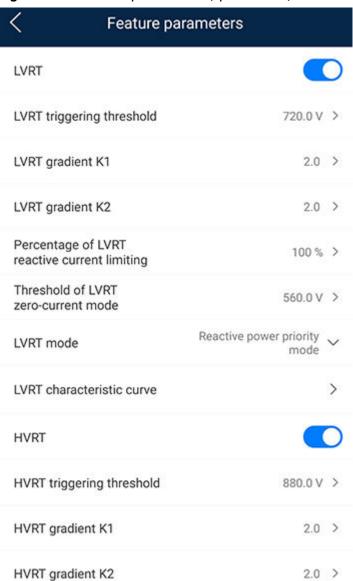


Figure 7-12 Feature parameters (special user)

----End

No.	Parameter	Description	Remarks
1	LVRT	LVRT is short for low voltage ride-through. When the grid voltage is abnormally low for a short time, the inverter cannot disconnect from the power grid immediately and has to work for some time.	-
2	Threshold for triggering LVRT (V)	Specifies the threshold for triggering LVRT. The threshold settings should meet the local grid standard.	This parameter is displayed when LVRT is set to Enable .

No.	Parameter	Description	Remarks
3	LVRT gradient K1	During LVRT, the solar inverter needs to generate positive-sequence reactive power to support the power grid. This parameter is used to set the positive-sequence reactive power generated by the solar inverter.	
		For example, if you set LVRT gradient K1 to 2 , the increment of positive-sequence reactive current generated by the solar inverter is 20% of the rated current when the AC voltage decreases by 10% during LVRT.	
4	LVRT gradient K2	During LVRT, the solar inverter needs to generate negative-sequence reactive power to support the power grid. This parameter is used to set the negative-sequence reactive power generated by the solar inverter.	
		For example, if you set LVRT gradient K2 to 2 , the increment of negative-sequence reactive current generated by the solar inverter is 20% of the rated current when the AC voltage decreases by 10% during LVRT.	
5	Percentage of LVRT reactive	During LVRT, the solar inverter needs to limit the reactive current.	
	current limiting	For example, if you set Percentage of LVRT reactive current limiting to 50 , the reactive current upper limit of the solar inverter is 50% of the rated current during LVRT.	
6	Threshold of LVRT zero- current mode	When Zero current due to power grid fault is enabled, if the power grid voltage is less than the value of Threshold of LVRT zero-current mode during LVRT, the zero current mode is used. Otherwise, the mode configured in LVRT mode is used.	
7	LVRT mode	Sets LVRT mode. The options are Zero-current mode, Constant current mode, Reactive power priority mode, and Active power priority mode.	
8	LVRT characteristic curve	Specifies the low voltage ride-through capability of the inverter.	
9	HVRT	HVRT is short for high voltage ride-through. When the grid voltage is abnormally high for a short time, the inverter cannot disconnect from the power grid immediately and has to work for some time.	-

No.	Parameter	Description	Remarks
10	Threshold for triggering HVRT (V)	Specifies the threshold for triggering HVRT. The threshold settings should meet the local grid standard.	This parameter is displayed when HVRT is set to Enable .
11	HVRT gradient K1	During HVRT, the solar inverter needs to generate positive-sequence reactive power to support the power grid. This parameter is used to set the positive-sequence reactive power generated by the solar inverter. For example, if you set HVRT gradient K1 to 2, the increment of positive-sequence reactive current generated by the solar inverter is 20% of the rated current when the AC voltage	
12	HVRT gradient K2	increases by 10% during HVRT. During HVRT, the solar inverter needs to generate negative-sequence reactive power to support the power grid. This parameter is used to set the negative-sequence reactive power generated by the solar inverter.	
		For example, if you set HVRT gradient K2 to 2 , the increment of negative-sequence reactive current generated by the solar inverter is 20% of the rated current when the AC voltage increases by 10% during HVRT.	
13	Grid voltage protection shield during VRT	Specifies whether to shield the undervoltage protection function during LVRT or HVRT.	This parameter is displayed when LVRT or HVRT is set to Enable.
14	VRT exit hysteresis threshold	Specifies the LVRT/HVRT recovery threshold.	 This parameter is displayed when LVRT or HVRT is set to Enable.
			LVRT recovery threshold = Threshold for triggering LVRT + VRT exit hysteresis threshold
			HVRT recovery threshold = Threshold for triggering HVRT - VRT exit hysteresis threshold

No.	Parameter	Description	Remarks		
15	Grid voltage jump triggering threshold (%)	Specifies the LVRT or HVRT threshold for triggering a transient voltage jump of a power grid. A transient voltage jump indicates that the inverter cannot immediately disconnect from the power grid when the power grid is abnormal due to transient changes.	-		
16	Zero current due to power grid fault	Certain countries and regions have requirements on the output current during high/low voltage ride-through. In this case, set this parameter to Enable . After this parameter is set to Enable , the output current is less than 10% of the rated current during high/low voltage ride-through.			
17	Active islanding protection	Specifies whether to enable the active islanding protection function.	-		
18	Automatic OFF due to communicati on interrupted	The standards of certain countries and regions require that the inverter must shut down after the communication is interrupted for a certain time.	-		
19	Automatic ON due to communicati on resumed	If this parameter is set to Enable , the inverter automatically starts after communication recovers. If this parameter is set to Disable , the inverter needs to be started manually after communication recovers.	-		
20	Communicati on interruption duration (min)	Specifies the duration for determining communication interruption. Used for automatic shutdown for protection in case of communication interruption.	-		
21	Soft start/ boot time (s)	Specifies the duration for the power to gradually increase when the inverter starts.	-		
22	Soft start time after grid failure (s)	Specifies the time for the power to gradually increase when the inverter restarts after the power grid recovers.	-		
23	TCP heartbeat interval (s)	Specifies the TCP link timeout period for the solar inverter to connect to the management system.	-		
24	TCP frame length	Specifies the maximum length of the TCP frame sent by the northbound device to the solar inverter.	-		


No.	Parameter	Description	Remarks
25	Heartbeat period at application layer (min)	Specifies the timeout period for the solar inverter to connect to the management system.	-

7.1.5.4 Setting Power Adjustment Parameters

Procedure

Step 1 Choose **Function Menu** > **Settings** > **Power Adjustment** to go to the parameter setting screen.

Figure 7-13 Power adjustment parameters (special user)

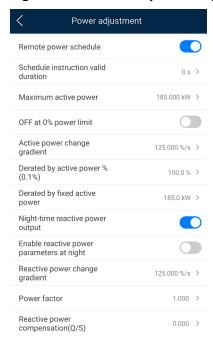

----End

No.	Parameter	Description	Remarks
1	Remote power schedule	If this parameter is set to Enable , the inverter responds to the scheduling instruction from the remote port. If this parameter is set to Disable , the inverter does not respond to the scheduling instruction from the remote port.	-

No.	Parameter	Description	Remarks
2	Schedule instruction valid duration (s)	Specifies the time for maintaining the scheduling instruction.	When this parameter is set to 0, the scheduling instruction takes effect permanently.
3	Maximum active power (kW)	Specifies the output upper threshold for the maximum active power to adapt to different market requirements.	-
4	OFF at 0% power limit	If this parameter is set to Enable , the inverter shuts down after receiving the 0% power limit command. If this parameter is set to Disable , the inverter does not shut down after receiving the 0% power limit command.	-
5	Active power change gradient (%/s)	Specifies the change speed of the inverter active power.	-
6	Derated by fixed active power (kW)	Adjusts the active power output of the inverter by fixed value.	-
7	Derated by active power % (%)	Adjusts the active power output of the inverter by percentage.	If this parameter is set to 100 , the inverter outputs based on the maximum output power.
8	Night-time reactive power output	In some specific application scenarios, a power grid company requires that the inverter can perform reactive power compensation at night to ensure that the power factor of the local power grid meets requirements.	-
9	Enable reactive power parameters at night	When this parameter is set to Enable , the inverter outputs reactive power based on the setting of Reactive power compensation at night . Otherwise, the inverter executes the remote scheduling command.	This parameter is displayed when Night-time reactive power output is set to Enable .
10	Night-time reactive power compensation (kVar)	During the reactive power compensation at night, the reactive power is scheduled by fixed value.	This parameter is displayed when Night-time reactive power output and Enable reactive power parameters at night are set to Enable.

No.	Parameter	Description	Remarks
11	Reactive power change gradient (%/s)	Specifies the change speed of the inverter reactive power.	-
12	Plant active power gradient (min/ 100%)	Specifies the rate of active power rise due to sunlight changes.	-
13	Average active power filtering time (ms)	Specifies the period of active power rise due to sunlight changes. This parameter is used with Plant active power gradient .	-
14	Power factor	Specifies the power factor of the inverter.	-
15	Reactive power compensation (Q/S)	Specifies the reactive power output by the inverter.	-
16	Overfrequency derating	If this parameter is set to Enable , the active power of the inverter will be derated according to a certain slope when the grid frequency exceeds the frequency that triggers overfrequency derating.	-
17	Frequency for triggering overfrequency derating (Hz)	The standards of certain countries and regions require that the output active power of inverters be derated when the power grid frequency exceeds a certain value.	 This parameter is displayed when Overfrequency derating is set to Enable. When setting this parameter, ensure that the following condition is met: Frequency for exiting overfrequency derating ≤ Frequency for triggering overfrequency derating < Cutoff frequency derating.
18	Frequency for exiting overfrequency derating (Hz)	Specifies the frequency threshold for exiting overfrequency derating.	_
19	Cutoff frequency of overfrequency derating (Hz)	Specifies the frequency threshold for cutting off overfrequency derating.	

No.	Parameter	Description	Remarks
20	Cutoff power of overfrequency derating (%)	Specifies the power threshold for cutting off overfrequency derating.	
21	Power recovery gradient of overfrequency derating (%/min)	Specifies the recovery rate of the overfrequency derating power.	
22	PF (U) voltage detection filtering time (s)	Specifies the time for filtering the grid voltage in the PF-U curve.	
23	Apparent power baseline (kVA)	Adjust the apparent output baseline of the inverter.	-
24	Active power baseline (kW)	Adjusts the active output baseline of the inverter.	-
25	Power percentage for triggering Q-U scheduling	Specifies the reference apparent power, in percentage. When the actual apparent power of the inverter is greater than the value of this parameter, the Q-U characteristic curve scheduling function is enabled.	-
26	Q-U characteristic curve	The inverter adjusts Q/S (the ratio of the output reactive power to apparent power) in real time based on U/Un(%) (the ratio of the actual power grid voltage to the rated power grid voltage).	-
27	Q-P characteristic curve	The inverter adjusts Q/Pn (the ratio of the output reactive power to the rated active power) in real time based on P/Pn(%) (the ratio of the actual active power to the rated active power).	-
28	Cosφ-P/Pn characteristic curve	The inverter adjusts the output power factor cos in real time based on P/Pn(%).	-

8 Maintenance

DANGER

• Wear personal protective equipment and use dedicated insulated tools to avoid electric shocks or short circuits.

№ WARNING

• Before performing maintenance, power off the equipment, follow the instructions on the delayed discharge label, and wait for a period of time as specified to ensure that the equipment is not energized.

8.1 System Power-Off

Precautions

№ WARNING

- If two inverters share the same AC switch on the AC side, power off the two inverters
- After the inverter powers off, the remaining electricity and heat may still cause electric shocks and body burns. Therefore, put on personal protective equipment (PPE) and begin servicing the inverter fifteen minutes after poweroff.

Procedure

Step 1 Run a shutdown command on the SUN2000 app, SmartLogger, or network management system (NMS).

For details, see the user manual of the corresponding product.

- **Step 2** Turn off the AC switch between the inverter and the power grid.
- **Step 3** Set the three DC switches to OFF.

----End

8.2 Power-Off for Troubleshooting

Context

To prevent personal injury and equipment damage, perform the following procedure to power off the inverter for troubleshooting or replacement.

CAUTION

- When an inverter is faulty, try to avoid standing in front of the inverter.
- If the LED1 indicator of the inverter is off, the switches are in the OFF position, do not operate the DC switches of the inverter. In this case, go to **Step 4**.
- Do not operate the DC switch on the inverter before you finish Step 3 to Step
 5.
- The DC switch can be automatically disconnected when an internal fault is detected in an inverter. Do not turn on the switch before the fault is cleared.
- If the AC switch between the inverter and the power grid has automatically disconnected, do not turn on the switch before the fault is rectified.
- Before power-off for troubleshooting, do not touch the energized components of the inverter. Otherwise, electric shocks or arcing may occur.

Procedure

- **Step 1** Wear proper personal protective equipment (PPE).
- **Step 2** If the inverter is not shut down due to a fault, send a shutdown command on the SUN2000 app, SmartLogger, or management system. If the inverter has shut down due to a fault, go to the next step.
- **Step 3** Turn off the AC switch between the inverter and the power grid.
- **Step 4** Measure the DC current of each PV input string using a clamp meter that is set to the DC position.
 - If the current is less than or equal to 0.5 A, go to the next step.
 - If the current is higher than 0.5 A, wait until the solar irradiance decreases and the PV string current decreases below 0.5 A at night, and then go to the next step.
- **Step 5** Open the maintenance compartment door, install a support bar, and use a multimeter to measure the voltage between the AC terminal block and the ground. Ensure that the AC side of the inverter is disconnected.
- **Step 6** Turn off all DC switches of the inverter and ensure that all switches are set to OFF. If the DC switches of the inverter have been automatically turned off, go to the next step.

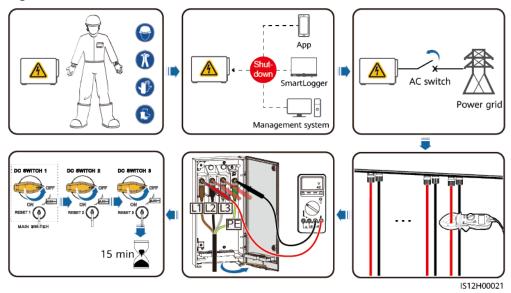


Figure 8-1 Power-off for maintenance

Step 7 Wait for 15 minutes and troubleshoot or repair the inverter.

↑ WARNING

- Do not open the host panel for maintenance if the inverter is emitting odor or smoke, or has obvious exceptions.
- If the inverter does not emit odor or smoke and is intact, repair or restart it based on the alarm handling suggestions. Do not stand in front of the inverter during the restart.

----End

8.3 Routine Maintenance

Maintenance Item

To ensure that the inverter can operate properly for a long term, you are advised to perform routine maintenance on it as described in this chapter.

<u>A</u> CAUTION


- Before cleaning the system, connecting cables, and maintaining the grounding reliability, power off the system and ensure that the three DC switches on the inverter are OFF.
- If you need to open the maintenance compartment door in rainy or snowy days, take protective measures to prevent rain or snow entering the maintenance compartment. If unavoidable, do not open the maintenance compartment door.

Maintenance list

Item	Check Method	Maintenance Interval
Cleanness of air intake and exhaust ventsFans	 Check whether there is dust on the air intake and exhaust vents. If necessary, remove the baffle of the air intake vent. Check whether the fans produce abnormal sounds during operation. 	Once every 6 to 12 months
System running status	 The inverter is not damaged or deformed. The inverter operates with no abnormal sound. When the inverter is running, check whether all inverter parameters are correctly set. 	Once every 6 months
Electrical connections	 Cables are securely connected. Cables are intact, and in particular, the parts touching the metallic surface are not scratched. Check whether the sealing caps of idle DC input terminals fall off. Check that the idle COM and USB ports are locked by waterproof caps. 	The first inspection is 6 months after the initial commissioning. From then on, the interval can be 6 or 12 months.
Grounding reliability	Ground cables are securely connected.	The first inspection is 6 months after the initial commissioning. From then on, the interval can be 6 or 12 months.
Clear vegetation around the inverters	 Perform inspection and weeding as required. Clean the site promptly after weeding. 	Based on the local wilting season

Removing the baffle of the air intake vent

Figure 8-2 Removing the baffle

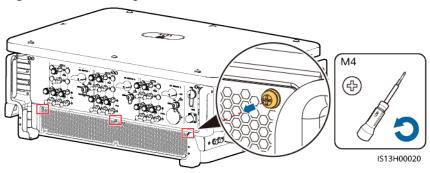

8.4 Replacing a Fan

! CAUTION


- Before replacing a fan, power off the inverter.
- When replacing a fan, use insulation tools and wear personal protective devices.

□ NOTE

If the fan tray gets stuck when being pulled or pushed, slightly lift it.


Step 1 Remove the screw on the fan tray and save it. Pull out the fan tray until the fan baffle plate aligns with the inverter chassis.

Figure 8-3 Pulling out fan tray (1)

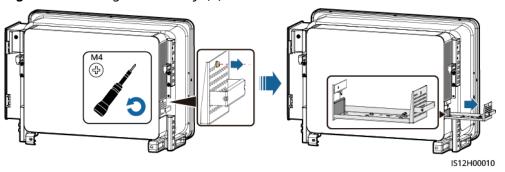


Step 2 Remove the cable ties shared by the cables, unscrew the connectors, and disconnect the cables.

Figure 8-4 Disconnecting cables

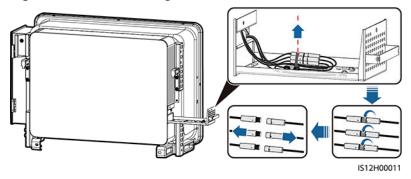

Step 3 Pull out the fan tray.


Figure 8-5 Pulling out fan tray (2)

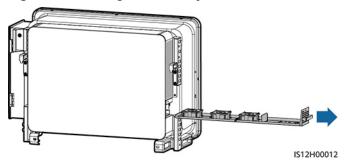

Step 4 Remove cable ties from the faulty fan.


FAN 1 Faulty

 Figure 8-6 Removing the FAN 1 cable ties




FAN 2 Faulty

 Figure 8-7 Removing the FAN 2 cable ties




• FAN 3 Faulty

 Figure 8-8 Removing the FAN 3 cable ties




Step 5 Remove the faulty fan (FAN 1 is used as an example).

 Figure 8-9 Removing the fan



Step 6 Install the new fan (FAN 1 is used as an example).

 
Figure 8-10 Installing a new fan



Step 7 Bind the fan cables.


• Binding positions for fan 1

 Figure 8-11 Binding the FAN 1 cables



• Binding positions for fan 2

 
Figure 8-12 Binding the FAN 2 cables



IS06H00114


• Binding positions for fan 3

 Figure 8-13 Binding the FAN 3 cables




Step 8 Push the fan tray into the slot until the fan baffle plate aligns with the inverter chassis.

Figure 8-14 Pushing the fan tray in

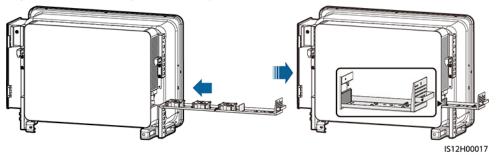


Step 9 Connect the cables correctly according to the cable labels and bind the cables.

Figure 8-15 Reconnecting and binding the cables

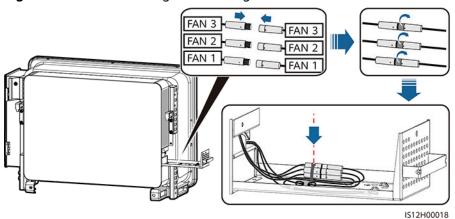

Step 10 Push the fan tray into the slot and tighten the screw.

Figure 8-16 Reinstalling the fan tray

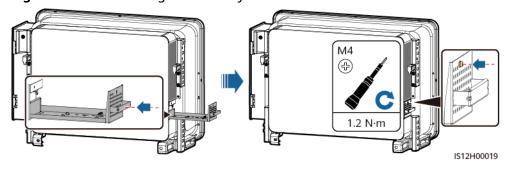

----End

8.5 Troubleshooting

When the inverter is faulty, the fault information can be displayed on the mobile phone app or the remote monitoring system. During troubleshooting, perform power-off operations according to **8.2 Power-Off for Troubleshooting**, and perform power-on operations according to **6.2 System Power-On**.

Alarm severities are defined as follows:

- Major: The inverter is faulty. As a result, the output power decreases or the grid-tied power generation is stopped.
- Minor: Some components are faulty without affecting the grid-tied power generation.
- Warning: The inverter works properly. The output power decreases or some authorization functions fail due to external factors.

Table 8-1 Common alarms and troubleshooting measures

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2001	High String Input Voltage	Major	The PV array is not properly configured. Excessive PV modules are connected in series to a PV string, and therefore the PV string open-circuit voltage exceeds the maximum operating voltage of the inverter. • Cause ID 1: PV strings 1, 2, 3 and 4. • Cause ID 2: PV strings 4, 5, 6, 7, 8 and 9. • Cause ID 3: PV strings 10, 11, 12, 13 and 14.	Reduce the number of PV modules connected in series in the PV string until the PV string open-circuit voltage is not greater than the maximum operating voltage of the inverter. After the PV array configuration is corrected, the alarm disappears.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2011	String Reverse Connection	Major	The PV string is reversely connected. Cause ID 1–14: PV strings 1–14.	1. Check whether the PV string is connected to the device in reverse polarity. If yes, wait until the PV string current decreases to below 0.5 A, set DC SWITCH to OFF, and adjust the PV string polarity. 2. If the fault persists, reset
				the device on the local maintenance app or WebUI of the upper-layer controller. Alternatively, you can turn off the AC and DC switches, wait for 5 minutes, and then turn on the AC and DC switches.
2012	String Current Backfeed	Warning	Only a few PV modules are connected in series in the PV string. Therefore, the end voltage is lower than that of other PV strings. Cause ID 1–14: PV strings 1–14.	 Check whether the number of PV modules connected in series in the PV string is less than that in other PV strings connected in parallel with this PV string. If yes, wait until the PV string current drops below 0.5 A, set all DC switches to OFF, and adjust the number of PV modules in the PV string. Check whether the opencircuit voltage of the PV string is normal. Check whether the PV string is shaded.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2014	High input string voltage to ground	Major	Cause ID = 1 The voltage between the input PV modules and the ground is abnormal, and there is a risk of power degradation.	1. If no PID compensation device exists in the system, disable the PID protection function at night. Note: If the PID protection function is disabled but reactive power compensation at night is enabled, PV modules may be degraded. 2. If the system has a PID
				compensation device, check whether the device is abnormal. If yes, rectify the fault.
				3. Check whether the settings of compensation direction for the inverter and the PID compensation device are consistent. If not, set them to be consistent based on the PV module model. (Note: If the PV- is set to positive offset, the voltage between the inverter PV- and the ground should be greater than 0 V to clear the alarm; if the PV+ is set to negative offset, the voltage between the inverter PV+ and the ground should be less than 0 V to clear the alarm.) 4. If the alarm persists, contact your dealer or Huawei technical support.
2015	PV string loss	Warning	This alarm is generated when the PV string status is abnormal due to the following conditions: a single PV string is lost.	1. If the PV string access type is manually set, check whether it is consistent with the actual access status.
			Cause ID 1-14: PV strings 1-14.	Check whether the inverter terminals are properly connected.
				Check whether the PV string terminals are properly connected.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2031	Phase Wire Short-Circuited to PE	Major	Cause ID=1 The impedance of the output phase wire to PE is low or the output phase wire is short-circuited to PE.	Check the impedance of the output phase wire to PE, locate the position with lower impedance, and rectify the fault.
2032	Grid Loss	Major	Cause ID=1 1. The power grid experiences an outage. 2. The AC circuit is disconnected or the AC switch is off.	 The alarm is automatically cleared after the power grid is restored. Check whether the AC circuit is disconnected or the AC switch is off.
2033	Grid Undervoltage	Major	Cause ID=1 The grid voltage is below the lower threshold or the undervoltage duration has exceeded the time that triggers LVRT.	 If the alarm occurs occasionally, the power grid may be abnormal temporarily. The inverter automatically recovers after detecting that the power grid becomes normal. If the alarm occurs frequently, check whether the power grid voltage is within the acceptable range. If not, contact the local power operator. If yes, modify the grid undervoltage protection threshold through the mobile app, SmartLogger, or network management system (NMS) with the consent of the local power operator. If the fault persists for a long time, check the AC circuit breaker and AC output power cable.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2034	Grid Overvoltage	Major	Cause ID=1 The grid voltage is beyond the upper threshold or the overvoltage duration has exceeded the time that triggers HVRT.	 Check whether the grid connection voltage exceeds the upper threshold. If yes, contact the local power operator. If you have confirmed that the grid-tied voltage exceeds the upper threshold and have obtained the consent of the local power operator, modify the overvoltage protection threshold through the mobile app, SmartLogger, or NMS. Check whether the peak grid voltage exceeds the upper threshold.
2035	Grid Voltage Imbalance	Major	Cause ID=1 The difference between grid phase voltages exceeds the upper threshold.	 Check that the grid voltage is within the normal range. Check that the AC output power cable is correctly connected. If the AC output power cable is correctly connected, yet the alarm persists and affects the energy yield of the power plant, contact the local power operator.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2036	Grid Overfrequency	Major	Cause ID=1 Power grid exception: The actual power grid frequency is higher than the standard requirement for the local power grid.	 If the alarm occurs occasionally, the power grid may be abnormal temporarily. The inverter automatically recovers after detecting that the power grid becomes normal. If the alarm occurs frequently, check whether the power grid frequency is within the acceptable range. If not, contact the local power operator. If yes, modify the grid overfrequency protection threshold through the mobile app, SmartLogger, or NMS with the consent of
2037	Grid Underfrequency	Major	Cause ID=1 Power grid exception: The actual power grid frequency is lower than the standard requirement for the local power grid.	the local power operator. 1. If the alarm occurs occasionally, the power grid may be abnormal temporarily. The inverter automatically recovers after detecting that the power grid becomes normal. 2. If the alarm occurs frequently, check whether the power grid frequency is within the acceptable range. If not, contact the local power operator. If yes, modify the grid underfrequency protection threshold through the mobile app, SmartLogger, or NMS with the consent of the local power operator.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2038	Unstable Grid Frequency	Major	Cause ID=1 Power grid exception: The actual grid frequency change rate does not comply with the local power grid standard.	1. If the alarm occurs occasionally, the power grid may be abnormal temporarily. The inverter automatically recovers after detecting that the power grid becomes normal.
				2. If the alarm occurs frequently, check whether the power grid frequency is within the acceptable range. If not, contact the local power operator.
2039	Output Overcurrent	Major	Cause ID=1 The power grid voltage drops dramatically or the power grid is short-circuited. As a result, the inverter transient output current exceeds the upper threshold and therefore the inverter protection is triggered.	 The inverter detects its external working conditions in real time. After the fault is rectified, the inverter automatically recovers. If the alarm occurs frequently and affects the energy yield of the power plant, check whether the output is short-circuited. If the fault cannot be rectified, contact your dealer or Huawei technical support.
2040	Output DC Component Overhigh	Major	Cause ID=1 The DC component of the inverter output current exceeds the specified upper threshold.	 If the exception is caused by an external fault, the inverter automatically recovers after the fault is rectified. If this alarm occurs frequently and affects the energy yield of the PV plant, contact your dealer or Huawei technical support.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2051	Abnormal Residual Current	Major	Cause ID=1 The insulation impedance of the input side to PE decreases when the inverter is operating.	 If the alarm occurs occasionally, the external circuit may be abnormal temporarily. The inverter automatically recovers after the fault is rectified. If the alarm occurs frequently or persists, check whether the impedance between the PV string and the ground is too low.
2062	Low Insulation Resistance	Major	 Cause ID=1 The PV string is short-circuited to the PE cable. The PV string has been in a moist environment for a long time and the circuit is not well insulated to ground. 	 Check the impedance of the PV string to PE. If a short circuit occurs, rectify it. Check that the ground cable of the inverter is correctly connected. If you are sure that the impedance is less than the preset value in a cloudy or rainy environment, reset Insulation resistance protection.
2063	Cabinet Overtemperatur e	Minor	Cause ID=1 1. The inverter is installed in a place with poor ventilation. 2. The ambient temperature is too high. 3. The inverter is not working properly.	 Check the ventilation and whether the ambient temperature of the inverter exceeds the upper limit. If the ventilation is poor or the ambient temperature is too high, improve ventilation. If both the ventilation and ambient temperature meet requirements yet the fault persists, contact your dealer or Huawei technical support.
2064	Device Fault	Major	Cause ID=1-5, 7-12 An unrecoverable fault has occurred on a circuit inside the inverter.	Turn off the AC output switch and DC input switch, and then turn them on after 5 minutes. If the fault persists, contact your dealer or Huawei technical support.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2065	Upgrade Failed or Software Version Unmatch	Minor	Cause ID=1 The upgrade does not complete normally.	 Perform an upgrade again. If the upgrade fails several times, contact your dealer.
2066	License Expired	Warning	Cause ID=11. The privilege license has entered the grace period.2. The privilege feature will be invalid soon.	 Apply for a new license. Load a new license.
2086	Abnormal External Fan	Major	External fan short- circuited, power supply insufficient, or air channel blocked Cause ID 1-3: fans 1-3.	 Shut down the fan, turn off the DC switch, check whether the fan blades are damaged, and clear the foreign matter around the fan. Reinstall the fan, turn on the DC switch, and wait for the inverter to start. If the fault persists after 15 minutes, replace the external fan.
2087	Abnormal Internal Fan	Major	Cause ID=1 The internal fan is short-circuited, the power supply is insufficient, or the fan is damaged.	Turn off the AC output switch and then the DC input switch. Turn them on after 5 minutes and wait for the inverter to connect to the power grid. If the fault persists, contact your dealer or Huawei technical support.

Alarm ID	Alarm Name	Alarm Severity	Cause	Troubleshooting Suggestions
2088	Abnormal DC protection unit	Major	Cause ID = 3 DC switch contact sticking.	If the PV indicator (LED1) is off, contact your dealer or Huawei technical support to replace the device. If the PV indicator (LED1) is on, wait until the PV string current decreases to below 0.5 A. Then turn off the AC output switch and then the DC input switch. After 5 minutes, turn on the AC output switch and the DC input switch. Wait until the inverter connects to the power grid. If the fault persists 5 minutes later, contact your dealer or Huawei technical support
2093	Abnormal DC Switches	Minor	Cause ID=1 The DC switch is not in the ON position, or the DC switch reset button is not pressed down to the bottom.	Check whether all DC switches are in the ON position. If not, turn the switches to the ON position (you can rotate the switches with force to ensure that they are in position). If the switches still cannot be turned to the ON position, press the reset buttons of all DC switches inwards until they cannot be moved further, and then turn on the DC switches again.
61440	Faulty Monitoring Unit	Minor	Cause ID=1 1. The flash memory is insufficient. 2. The flash memory has bad sectors.	Turn off the AC output switch and DC input switch, and then turn them on after 5 minutes. If the fault persists, replace the monitoring board or contact your dealer or Huawei technical support.

◯ NOTE

If you cannot rectify faults with the measures listed in troubleshooting suggestions, contact your dealer or Huawei technical support.

8.6 Resetting and Turning On the DC Switch


Prerequisites

If string backfeed, string connection in reverse polarity, or internal inverter fault is displayed on the mobile app or remote monitoring system and the DC switch is OFF, the DC switch of the inverter has been automatically turned off. In this case, rectify the fault based on the alarm handling suggestions before turning on the DC switch.

Procedure

- **Step 1** Loosen the caps of the RESET buttons for the three DC switches, and press the RESET buttons inwards until you cannot go any further.
- **Step 2** Set the DC switches to **ON**.
- **Step 3** Tighten the caps of the RESET buttons.

Figure 8-17 Loading the DC switch (DC SWITCH 1 is used as an example)

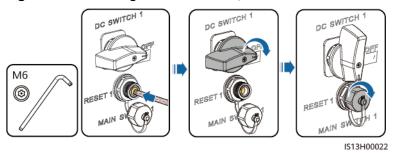

----End

9 Handling the Inverter

9.1 Removing the SUN2000

NOTICE

Before removing the SUN2000, disconnect both AC and DC connections.

Perform the following operations to remove the SUN2000:

- 1. Disconnect all cables from the SUN2000, including RS485 communications cables, DC input power cables, AC output power cables, and PGND cables.
- 2. Remove the SUN2000 from the mounting bracket.
- 3. Remove the mounting bracket.

9.2 Packing the SUN2000

- If the original packing materials are available, put the SUN2000 inside them and then seal them by using adhesive tape.
- If the original packing materials are not available, put the SUN2000 inside a suitable cardboard box and seal it properly.

9.3 Disposing of the SUN2000

If the SUN2000 service life expires, dispose of it according to the local disposal rules for electrical equipment waste.

10 Technical Data

Efficiency

Technical Specifications	SUN2000-196KTL -H3	SUN2000-200KTL -H3	SUN2000-215KTL -H3
Maximum efficiency	≥ 99.0%	≥ 99.0%	≥ 99.0%
Chinese efficiency	≥ 98.4%	-	-
European efficiency	-	≥ 98.8%	≥ 98.8%

Input

Technical Specifications	SUN2000-196KTL -H3	SUN2000-200KTL -H3	SUN2000-215KTL -H3
Maximum input voltage	1500 V		
Maximum input current (per MPPT)	100 A		
Maximum short- circuit current (per PV string)	32.5 A		
Maximum backfeed current to the PV array	0 A		
Lowest operating/ startup voltage	500 V/550 V		

Technical Specifications	SUN2000-196KTL -H3	SUN2000-200KTL -H3	SUN2000-215KTL -H3
MPP voltage range	500–1500 V		
Full-load MPPT voltage range	930–1300 V		
Rated input voltage	1080 V		
Number of inputs	14		
Number of MPP trackers	3		

Output

Technical Specifications	SUN2000-196KTL -H3	SUN2000-200KTL -H3	SUN2000-215KTL -H3	
Rated active power	196 kW	185 kW	200 kW	
Maximum apparent power	216 kVA	215 kVA	215 kVA	
Maximum active power (cosφ = 1)	216 kW	215 kW	215 kW	
Rated output voltage	800 V AC, 3W+PE			
Rated output current	141.5 A	133.5 A	144.4 A	
Adapted power grid frequency	50 Hz	50 Hz/60 Hz	50 Hz/60 Hz	
Maximum output current	155.9 A	155.2 A	155.2 A	
Power factor	0.8 leading and 0.8 lagging			
Maximum total harmonic distortion (rated power)	< 3%			

Protection

Technical Specifications	SUN2000-196KT L-H3	SUN2000-200KTL -H3	SUN2000-215KTL -H3
Input DC switch	Supported		
Anti-islanding protection	Supported		
Output overcurrent protection	Supported		
Input reverse connection protection	Supported		
PV string fault detection	Supported		
DC surge protection	Type II		
AC surge protection	Type II		
Insulation resistance detection	Supported		
Residue current monitoring (RCMU)	Supported		
Overvoltage category	PV II/AC III		

Display and Communication

Technical Specifications	SUN2000-196KTL -H3	SUN2000-200KTL -H3	SUN2000-215KT L-H3	
Display	LED indicator, Bluetooth module+app, USB data cable+app, and WLAN module+app			
RS485	Supported			
MBUS	Supported			
USB	Supported			

Common Parameters

Technical Specifications	SUN2000-196KT L-H3	SUN2000-200KTL -H3	SUN2000-215KT L-H3		
Dimensions (W x H x D)	1035 mm x 700 mr	n x 365 mm			
Net weight	86 kg				
Operating temperature	-25°C to +60°C				
Cooling mode	Smart air cooling				
Highest operating altitude	5000 m (derated when the altitude is greater than 4000 m)				
Humidity	0%-100% RH				
Input terminal	MC4 EVO2				
Output terminal	Waterproof terminal+OT/DT terminal				
IP rating	IP66				
Topology	Transformerless				



Function Description

- Applies to large-scale commercial ground PV plants with PV strings facing the same direction.
- In AC or DC power limiting scenarios:
 - If the PV string access type is not identified, the value of PV Status will keep being displayed as Not connected. The PV string access type can be identified only when the inverters restore to the non-power limiting state and the current of all connected PV strings reaches the startup current.

Procedure


Step 1 Log in to the SUN2000 app as **Advanced User**. The initial password is **00000a**.

□ NOTE

Use the initial password upon first power-on and change it immediately after login. To ensure account security, change the password periodically and keep the new password in mind. Not changing the initial password may cause password disclosure. A password left unchanged for a long period of time may be stolen or cracked. If a password is lost, devices cannot be accessed. In these cases, the user is liable for any loss caused to the PV plant.

Step 2 Choose **Function Menu > Maintenance > String Access Detection** to go to the parameter setting screen.

Figure A-1 String Access Detection

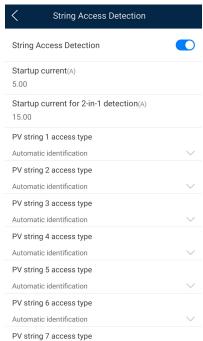

----End

Parameters

N o.	Parameter	Description	Remarks
1	String Access Detection	The default value is Disable . After the inverter is connected to the power grid, you can set String Access Detection to Enable .	-
2	Startup current	When the current of all connected PV strings reaches the preset value, the PV string connection detection function is enabled. NOTE Startup current setting rules: • Startup current = I _{sc} (S _{tc}) × 0.6 (rounded up). For details about I _{sc} (S _{tc}), see the PV module nameplate. • Default startup current (5 A): applicable to the scenarios where the short-circuit current I _{sc} (S _{tc}) is greater than 8 A for the monocrystalline and polycrystalline PV modules.	This paramet er is displayed only when String Access Detectio n is set to Enable.

N o.	Parameter	Description	Remarks
3	Startup current for 2 in 1 detection	When the current of a PV string reaches Startup current for 2 in 1 detection, the PV string is automatically identified as 2 in 1. You are advised to use the default value. NOTE The SUN2000-196KTL-H3, SUN2000-200KTL-H3, and SUN2000-215KTL-H3 inverters do not support Y-branch connectors. The 2-in-1 string detection function is unavailable.	
4	PV string N access type NOTE Nis the DC input terminal number of the inverter.	Set this parameter based on the type of the PV string connected to DC input terminal <i>N</i> of the inverter. Currently, the options are as follows: Automatic identification (default value), Disconnection , Single PV string , and 2 in 1 .	
		You are advised to retain the default value. If the value is incorrectly set, the PV string access type may be incorrectly identified and alarms may be generated by mistake for the PV string connection status.	

B Domain Name List of Management Systems

□ NOTE

The list is subject to change.

Table B-1 Domain names of management systems

Domain Name	Data Type	Scenario
intl.fusionsolar.huawei.co m	Public IP address	FusionSolar hosting cloud
		NOTE The domain name is compatible with cn.fusionsolar.huawei.com (Chinese mainland).

C Grid Code

No.	Grid Code	Description	SUN2000 -196KTL- H3	SUN200 0-200KT L-H3	SUN2000 -215KTL- H3
1	CHINA_MV800	China medium-voltage power grid	Supporte d	-	-
2	G59-England-MV800	G59 medium-voltage power grid	-	-	Supported
3	AS4777-MV800	Australia medium-voltage power grid	-	-	Supported
4	INDIA-MV800	India medium-voltage power grid	-	Supporte d	-
5	IEC61727-MV800	IEC61727 medium-voltage power grid (50 Hz)	-	Supporte d	Supported
6	ABNT NBR 16149- MV800	Brazil medium-voltage power grid	-	-	Supported
7	UTE C 15-712-1- MV800	France medium-voltage power grid	-	-	Supported
8	Chile-MV800	Chile medium-voltage power grid	-	-	Supported
9	Mexico-MV800	Mexico power grid	-	-	Supported
10	EN50438-TR-MV800	Turkey medium-voltage power grid	-	-	Supported
11	TAI-PEA-MV800	Thailand PEA medium-voltage power grid	-	-	Supported
12	Philippines-MV800	Philippines medium-voltage power grid	-	-	Supported

No.	Grid Code	Description	SUN2000 -196KTL- H3	SUN200 0-200KT L-H3	SUN2000 -215KTL- H3
13	Malaysian-MV800	Malaysia medium-voltage power grid	-	-	Supported
14	NRS-097-2-1-MV800	South Africa medium-voltage power grid	-	Supporte d	-
15	SA_RPPs-MV800	South Africa RPPs medium- voltage power grid	-	Supporte d	Supported
16	Jordan-Transmission- MV800	Jordan power transmission network medium-voltage power grid	-	Supporte d	-
17	Jordan-Distribution- MV800	Jordan power distribution network medium-voltage power grid	-	Supporte d	-
18	Egypt ETEC-MV800	Egypt medium-voltage power grid	-	Supporte d	-
19	DUBAI-MV800	Dubai medium-voltage power grid	-	Supporte d	-
20	SAUDI-MV800	Saudi Arabia medium-voltage power grid	-	Supporte d	-
21	EN50438_IE-MV800	Ireland medium-voltage power grid	-	-	Supported
22	EN50549-MV800	Ireland power grid	-	Supporte d	Supported
23	Northern Ireland- MV800	Northern Ireland medium- voltage power grid	-	-	Supported
24	CEI0-21-MV800	Italy medium-voltage power grid (CEI0-21)	-	-	Supported
25	IEC 61727- MV800-60HZ	General medium-voltage power grid	-	Supporte d	Supported
26	Pakistan-MV800	Pakistan medium-voltage power grid	-	Supporte d	-
27	BRASIL-ANEEL-MV800	Brazil medium-voltage power grid	-	-	Supported
28	Israel-MV800	Israel power grid	-	-	Supported
29	CEI0-16-MV800	Italy medium-voltage power grid	-	-	Supported
30	ZAMBIA-MV800	Zambia medium-voltage power grid	-	Supporte d	-

No.	Grid Code	Description	SUN2000 -196KTL- H3	SUN200 0-200KT L-H3	SUN2000 -215KTL- H3
31	KENYA_ETHIOPIA_MV 800	Kenya low-voltage and Ethiopia medium-voltage power grid	-	Supporte d	-
32	NAMIBIA_MV800	Namibia medium-voltage power grid	-	Supporte d	-
33	Cameroon-MV800	Cameroon medium-voltage power grid	-	Supporte d	-
34	NIGERIA-MV800	Nigeria medium-voltage power grid	-	Supporte d	-
35	ABUDHABI-MV800	Abu Dhabi medium-voltage power grid	-	Supporte d	-
36	LEBANON-MV800	Lebanon medium-voltage power grid	-	Supporte d	-
37	ARGENTINA-MV800	Argentina medium-voltage power grid	-	-	Supported
38	Jordan-Transmission- HV800	Jordan high-voltage and medium-voltage power grid	-	Supporte d	-
39	TUNISIA-MV800	Tunisia medium-voltage power grid	-	Supporte d	-
40	AUSTRALIA-NER- MV800	Australia NER standard medium-voltage power grid	-	-	Supported
41	VDE-AR- N4120_HV800	VDE4120 standard medium- voltage power grid	-	-	Supported
42	Nicaragua-MV800	Nicaragua medium-voltage power grid	-	-	Supported
43	Custom-MV800-50Hz	Reserved	-	Supporte d	Supported
44	RD1699/661-MV800	Spain medium-voltage power grid	-	-	Supported
45	PO12.3-MV800	Spain medium-voltage power grid	-	-	Supported
46	Vietnam-MV800	Vietnam medium-voltage power grid	-	-	Supported
47	CHILE-PMGD-MV800	Chile PMGD medium-voltage power grid (800 V)	-	-	Supported
48	GHANA-MV800	Ghana medium-voltage power grid (800 V)	-	Supporte d	-

No.	Grid Code	Description	SUN2000 -196KTL- H3	SUN200 0-200KT L-H3	SUN2000 -215KTL- H3
49	TAIPOWER-MV800	Taiwan power medium- voltage power grid (800 V)	-	-	Supported
50	OMAN-MV800	Oman medium-voltage power grid	-	Supporte d	-
51	KUWAIT-MV800	Kuwait medium-voltage power grid	-	Supporte d	-
52	BANGLADESH-MV800	Bangladesh medium-voltage power grid	-	-	Supported
53	BAHRAIN-MV800	Bahrain medium-voltage power grid	-	Supporte d	-
54	KAZAKHSTAN-MV800	Kazakhstan medium-voltage power grid	-	-	Supported
55	Oman-PDO-MV800	Oman PDO medium-voltage power grid	-	Supporte d	-
56	TAI-MEA-MV800	Thailand medium-voltage power grid	-	-	Supported
57	C10/11-MV800	Belgium medium-voltage power grid	-	-	Supported
58	G99-TYPEB-HV- MV800	UK G99_TypeB_HV medium- voltage power grid	-	-	Supported
59	G99-TYPEC-HV- MV800	UK G99_TypeC_HV medium- voltage power grid	-	-	Supported
60	G99-TYPED-MV800	UK G99_TypeD medium- voltage power grid	-	-	Supported
61	CEA-MV800	India CEA power grid	-	Supporte d	-
62	VDE-AR-N4110- MV800	Germany medium-voltage power grid (800 V)	-	-	Supported
63	Panama-MV800	Panama medium-voltage power grid (800 V)	-	-	Supported
64	Macedonia-MV800	North Macedonia medium- voltage power grid (800 V)	-	-	Supported
65	SINGAPORE-MV800	Singapore medium-voltage power grid	-	-	Supported
66	Cambodia-MV800	Cambodia medium-voltage power grid	-	-	Supported

No.	Grid Code	Description	SUN2000 -196KTL- H3	SUN200 0-200KT L-H3	SUN2000 -215KTL- H3
67	GREG060-MV800	Colombia medium-voltage power grid	-	-	Supported
68	PERU-MV800	Peru medium-voltage power grid	-	-	Supported
69	PORTUGAL-MV800	Portugal medium-voltage power grid	-	-	Supported
70	NTS-MV800	Spain medium-voltage power grid	-	-	Supported
71	KOREA-MV800	South Korea medium-voltage power grid (800 V)	-	-	Supported
72	Israel-HV800	Israel high-voltage power grid (161 kV)	-	-	Supported
73	AUSTRIA-MV800	Austria medium-voltage power grid (type B)	-	-	Supported
74	AUSTRIA-HV800	Austria medium-voltage power grid (type D)	-	-	Supported
75	POLAND-EN50549- MV800	Poland medium-voltage power grid	-	-	Supported
76	IRELAND-EN50549- MV800	Ireland power grid	-	-	Supported
77	DENMARK-EN50549- MV800	Denmark power grid	-	-	Supported
78	FRANCE-RTE-MV800	France RTE power grid	-	-	Supported
79	UZBEKISTAN-MV800	Uzbekistan power grid	-	Supporte d	-
80	CZECH-EN50549- MV800	Czech Republic power grid	-	-	Supported
81	MAURITIUS-MV800	Mauritius power grid	-	Supporte d	-

□ NOTE

The grid codes are subject to change. The listed codes are for your reference only.

Resetting Password

- **Step 1** Check that the AC and DC sides of the inverter are both powered on, and indicators and → are steady green or blinking slowly for more than 3 minutes.
- **Step 2** Turn off the AC switch, set the DC SWITCH at the bottom of the inverter to OFF, and wait until all LED indicators on the inverter panel turn off.
- **Step 3** Complete the following operations within 4 minutes:
 - 1. Turn on the AC switch and wait for about 90s or until the inverter indicator > blinks.
 - 2. Turn off the AC switch and wait about 30s or until all LED indicators on the inverter panel turn off.
 - 3. Turn on the AC switch and wait for about 90s or until the inverter indicator > blinks.
- **Step 4** Log in to the app and reset the password within 10 minutes. (If no operation is performed within 10 minutes, all parameters of the inverter remain unchanged.)
 - ----End

NOTICE

- SUN2000HA V300R001C00SPC133 and later versions support password reset.
- You are advised to reset the password in the morning or at night when the solar irradiance is low.

Contact Information

If you have any questions about this product, please contact us.

Table E-1 Customer service contact information

Region	Country	Email	Tel
Europe	France	eu_inverter_support@huaw ei.com	0080033888888
	Germany		
	Spain		
	Italy		
	United Kingdom		
	Netherlands		
	Other countries	For details, visit solar.huawei.	com.
Asia- Pacific	Australia	eu_inverter_support@huaw ei.com	1800046639
	Turkey	eu_inverter_support@huaw ei.com	-
	Malaysia	apsupport@huawei.com	0080021686868 /1800220036
			,
	Thailand		(+66) 26542662 (local rate call)
			1800290055 (free in Thailand)
	China	solarservice@huawei.com	400-822-9999
	Other countries	apsupport@huawei.com	0060-3-21686868

Region	Country	Email	Tel
Japan	Japan	Japan_ESC@ms.huawei.com	0120258367
India	India	indiaenterprise_TAC@huawe i.com	1800 103 8009
Republic of Korea	Republic of Korea	Japan_ESC@ms.huawei.com	-
North America	United States	eu_inverter_support@huaw ei.com	1-877-948-2934
	Canada	eu_inverter_support@huaw ei.com	1-855-482-9343
Latin	Mexico	la_inverter_support@huawei	018007703456
America		.com	/0052-442-4288288
	Argentina		0-8009993456
	Brazil		0-8005953456
	Chile		800201866 (fixed- line only)
	Other countries		0052-442-4288288
Middle	Egypt	eu_inverter_support@huaw	08002229000
East and Africa		ei.com	/0020235353900
7	UAE		08002229000
	Southern Africa		0800222900
	Saudi Arabia		8001161177
	Pakistan		0092512800019
	Morocco		0800009900
	Other countries		0020235353900

EU Representative Information: Huawei Technologies Hungary Kft. Add.: HU-1133 Budapest, Váci út 116-118., 1. Building, 6. floor.

Email: hungary.reception@huawei.com

Acronyms and Abbreviations

L

LED light emitting diode

М

MBUS monitoring bus

MPP maximum power point

MPPT maximum power point

tracking

Ρ

PID potential induced

degradation

PV photovoltaic

R

RCMU residual current

monitoring unit