

| Battery Model | H1/AC1 | KH/KA | H3/AC3 | H3 PRO | PowerQ | H3 Smart | H3 Plus |
|---------------|--------|-------|--------|--------|--------|----------|---------|
| HV2600        | 2~7    | 2~8   | 3~8    | 3~16   |        |          |         |
| Mira HV25     | 2~7    | 2~8   | 3~8    | 3~16   |        |          |         |
| ECS2800*      | 2~7    | 2~7   | 3~7    | 3~14   |        | 2~7      |         |
| ECS2900*      | 2~7    | 2~7   | 3~7    | 3~14   |        | 2~7      |         |
| ECS4100*      | 2~7    | 2~7   | 3~7    | 3~14   |        | 2~7      |         |
| ECS4300*      | 2~7    | 2~7   | 3~7    | 3~14   |        | 2~7      |         |
| ECS4800*      | 2~7    | 2~7   | 3~7    | 3~14   |        | 3~7      |         |
| EQ4800*       | 2~9    | 2~9   | 3~9    | 3~18   |        | 3~9      |         |
| EQ2900        |        |       |        |        | 2~7    |          |         |
| EQ3300*       | 2~6    | 2~6   | 3~6    | 2~12   | tbc    | 2~6      |         |
| EQ4300        |        |       |        |        | 2~7    |          |         |
| EQ5000*       | 2~6    | 2~6   | 3~6    | 2~12   | tbc    | 2~6      |         |
| EQ6000+       | 2~7    | 2~7   | 3~7    | 3~14   |        | 2~7      |         |
| EP5/6**       | 1~4    | 1~4   | 1~4    | 1~8    |        | 1~4      |         |
| EP11/12**     | 1~4    | 1~4   | 1~4    | 1~8    |        | 1~4      |         |
| CQ6           |        |       |        | 3~24   |        |          | 3~42    |
| CQ16          |        |       |        |        |        |          | 4~45    |

For HV2600 and Mira HV25 – the number specified is specifically for battery modules – a separate BMS is also required.

\*Require one master (CM battery) per stack, so a stack of 7 would comprise 1 x CM and 6 x CS (slaves).

\*\*EP batteries require a junction box when installing more than one battery module.