


InterFlash®

- InterFlash® is compatible with the Renusol RH Flat Hook.
- InterFlash® is compatible with Rosemary/plain tiles.
- Use appropriate safety PPE.

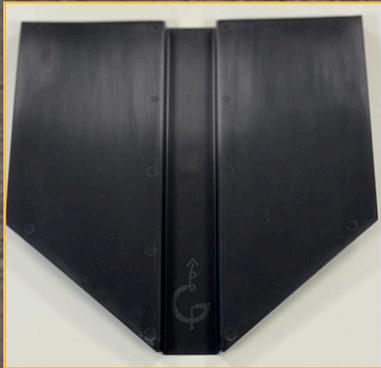

Installation video available on our website



120 Clydesdale Place, Leyland PR26 7QS
T: 01257 793113 Email: sales@geniusroofsolutions.com
Web: www.geniusroofsolutions.com


The contents of this instruction booklet are for general information and illustrative purposes only. Hallclip reserves the right to alter or update this booklet without prior notice. It may also change information and/or images at any time. Hallclip does its utmost to ensure that information contained in this booklet is accurate, complete and up-to-date. To the fullest extent permitted by law, Hallclip expressly disclaims all liability for any direct, indirect, or consequential loss or damage which howsoever arises in connection with the use of or reliance upon any materials and information appearing in this booklet. January 2024.

© Hallclip 2024. All content contained within this document is copyright and may not be altered, reproduced, or copied unless prior written consent is given by Hallclip.

Installation Instructions

InterFlash®


Flashing solution for the Renusol RH Flat Hook

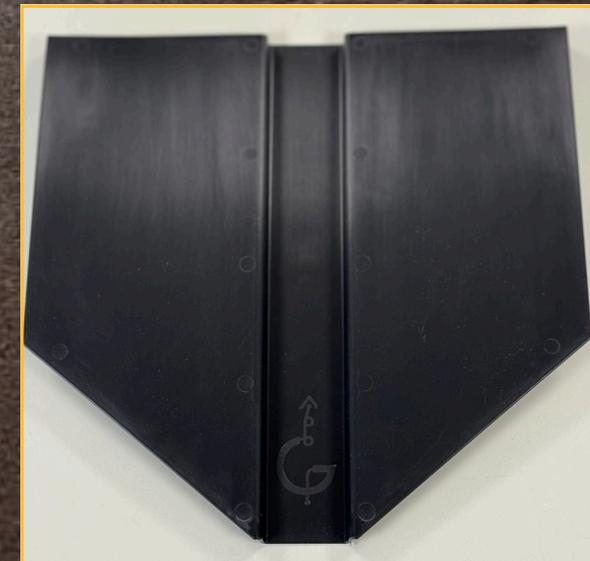

Tools you will need: • Angle Grinder

www.geniusroofsolutions.com

- 1** Remove the tiles to locate the rafter.

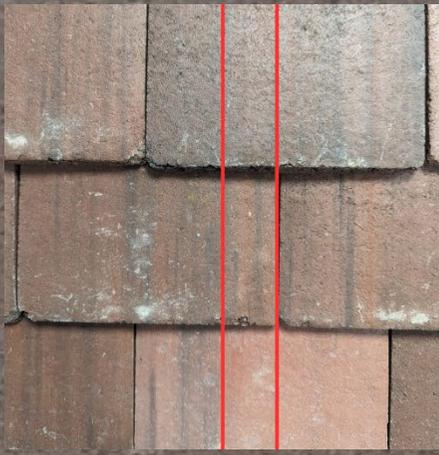

- 2** Install the Renusol RH Flat Hook, adjusting the hook geometry to suit the roof (see manufacturer installation instructions).



- 3** Cut the tile on which the InterFlash® will sit/replace. The tile is cut (on one side) to accommodate the width of the RH Flat Hook (40mm). Only one cut required, same cut every time.



- 4** Replace the cut tile back into position.



- 5** Slide the InterFlash® on top of the tiles and under the bracket. The tabs on top of the InterFlash® sit on top of the tile to stop it sliding down.



- 6** Put the tiles back into position.

